

# VOLKSWAGEN 1200



ARCE




# Instruction Manual Sedan and Convertible

August 1964

V O L K S W A G E N W E R K A G

ARCT

<b>Contents:</b>	Operating Instructions . . . . .	4
	Practical Driving . . . . .	18
	Cold Weather Hints . . . . .	24
	Wheels and Tires . . . . .	27
	Care of the Car . . . . .	30
	Lubrication . . . . .	34
	Maintenance . . . . .	41
	General Description . . . . .	64
	Technical Data . . . . .	68
	Bulb Chart . . . . .	71
	Lubrication Chart . . . . .	73
	Lubricants . . . . .	73
	Maintenance Chart . . . . .	74
	Tools and Accessories . . . . .	75
	Index . . . . .	76
	Identification plate, Engine and Chassis	
	Numbers . . . . .	79
	Sectional View . . . . .	80

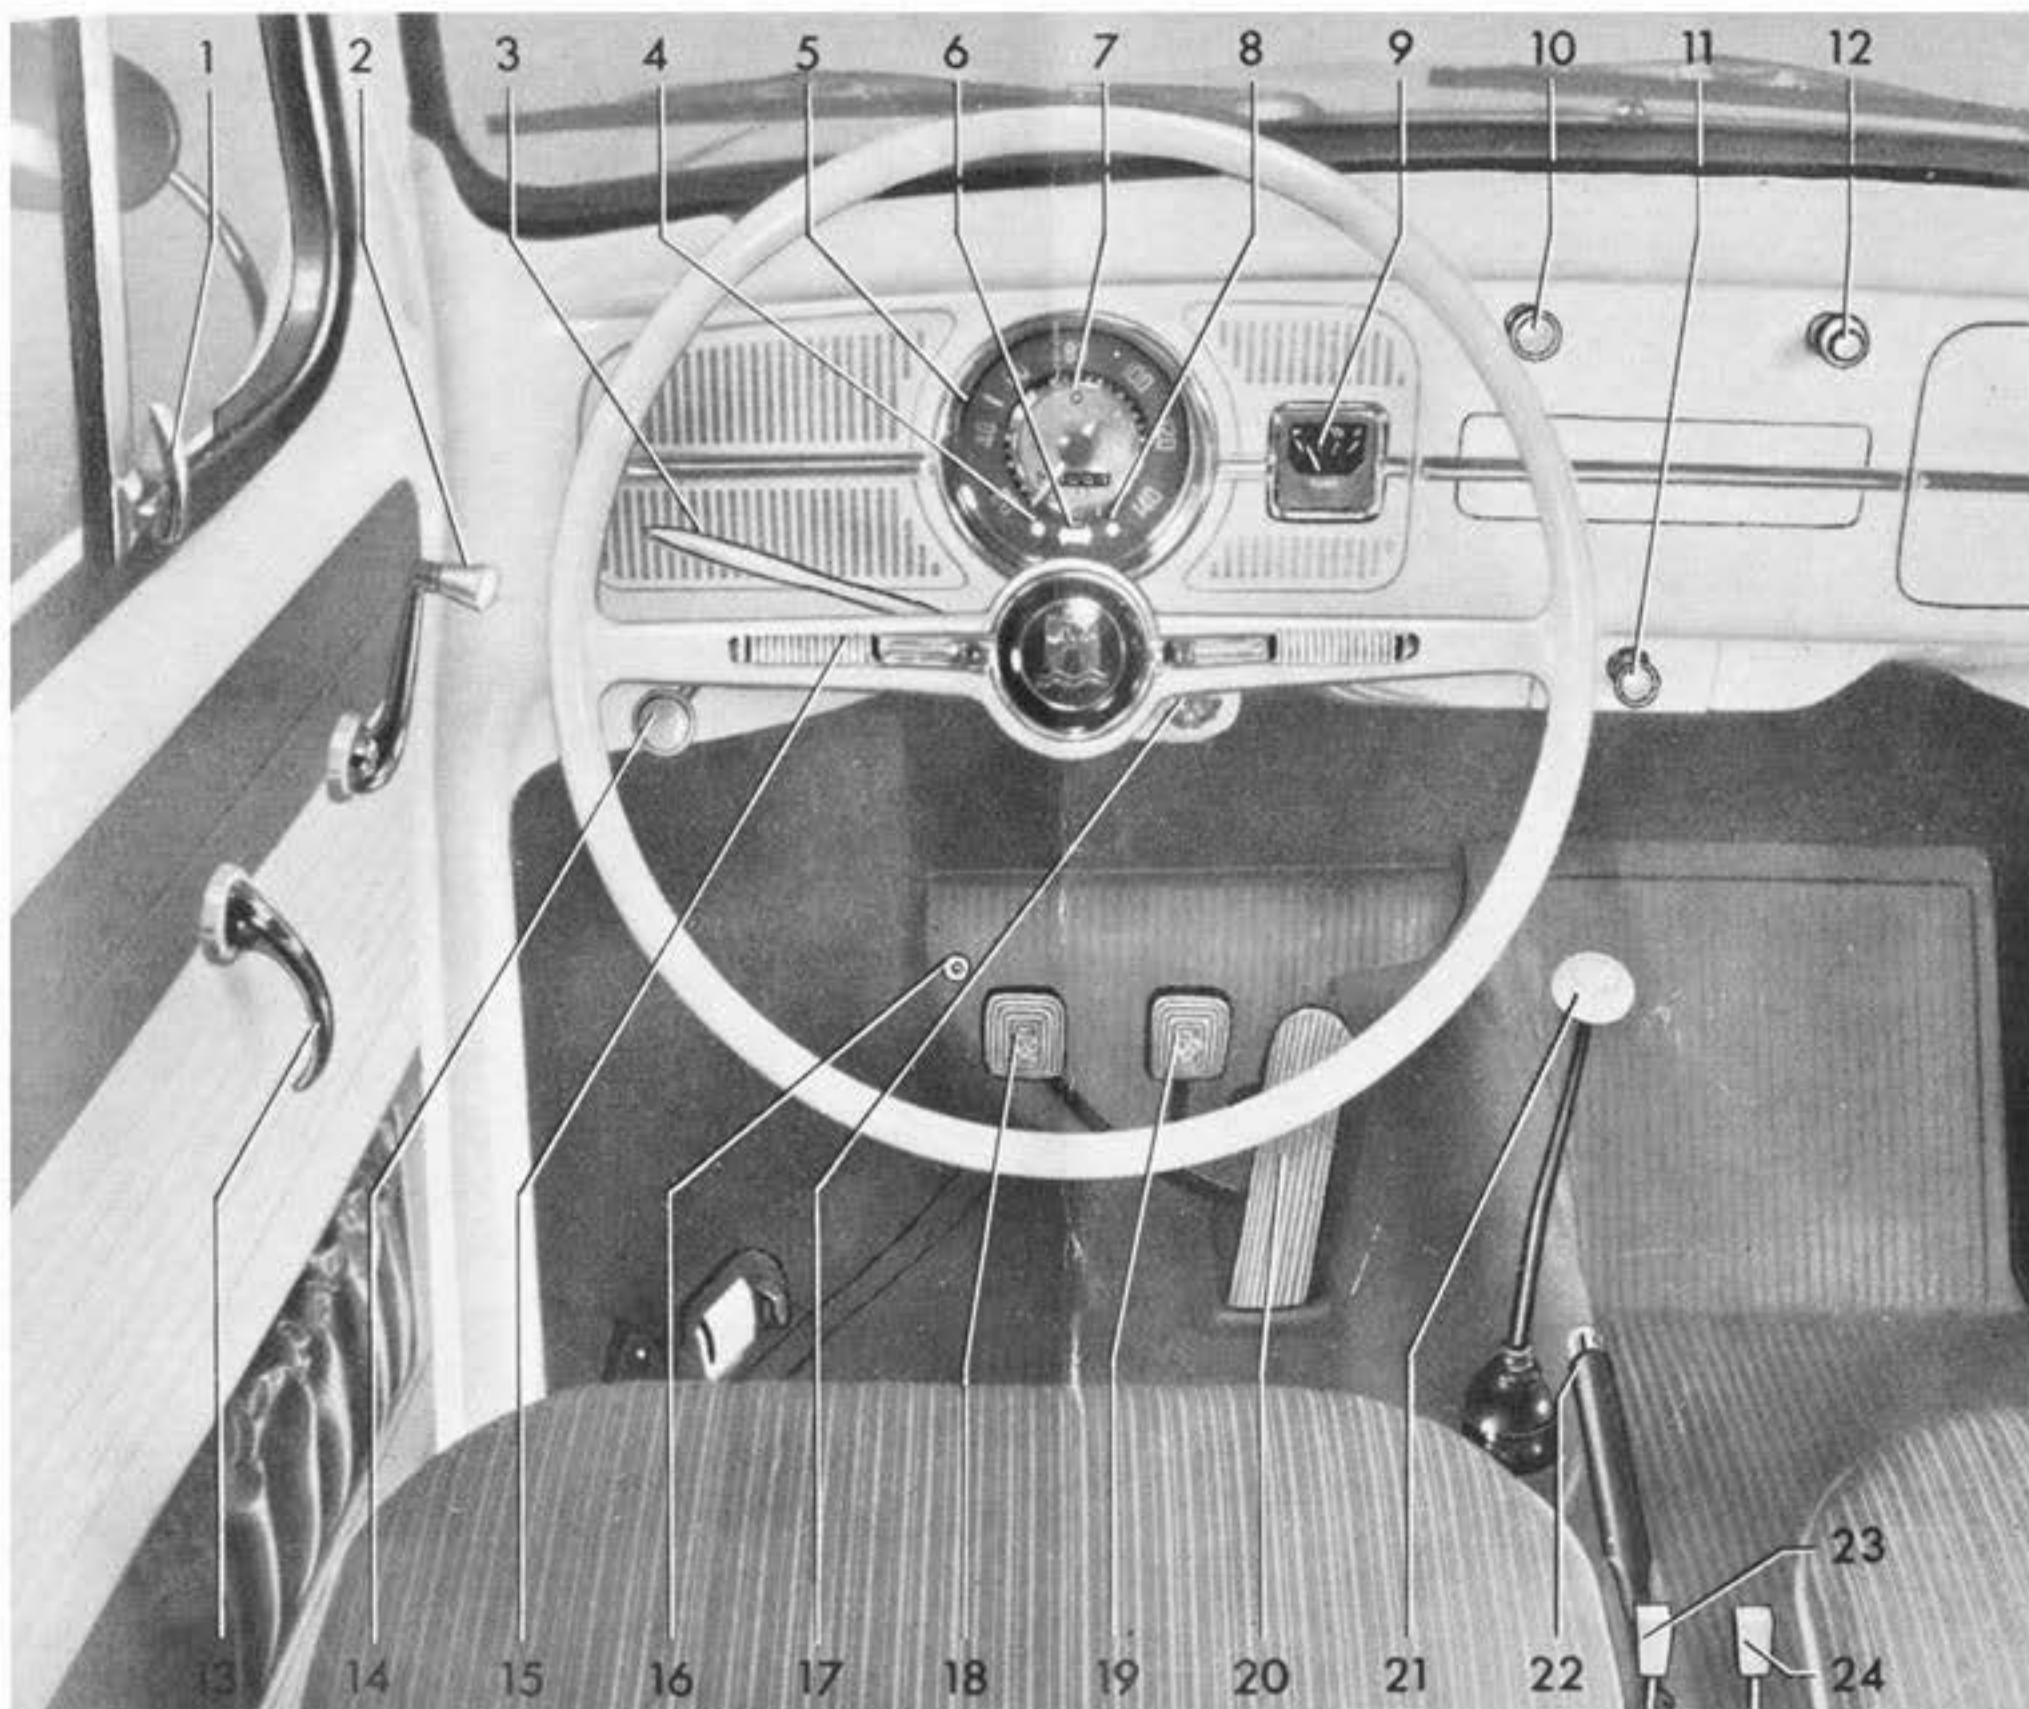

- 1 – Vent wing handle
- 2 – Window winder
- 3 – Flashing indicator lever
- 4 – Warning light – Red – Generator and cooling
- 5 – Speedometer
- 6 – Warning light – Green – Flashing indicators
- 7 – Warning light – Blue – Headlight high beam
- 8 – Warning light – Green – Oil pressure
- 9 – Fuel gauge
- 10 – Headlight and instrument light switch
- 11 – Ash tray
- 12 – Windshield wiper and washer switch

- 13 – Inner door handle
- 14 – Front hood control knob
- 15 – Horn lever
- 16 – Dimmer switch
- 17 – Steering ignition lock
- 18 – Clutch pedal
- 19 – Brake pedal
- 20 – Accelerator pedal
- 21 – Gear lever
- 22 – Hand brake lever
- 23 – Control lever for heating in rear foot well
- 24 – Heating control lever



# Operating Instructions

## Before driving off


acquaint yourself with the Volkswagen. You have been given a separate key for the door locks and the steering ignition lock. For cars not fitted with a steering ignition lock only one key is required for opening the doors and starting the car. You should take note of the key numbers so that you can get a replacement if you should lose a key.





**The doors** are opened with a press button, which is let into the door handle. To enter a locked vehicle, unlock the door on the driver's side first by turning the key one half of a turn in the lock. The door on the passenger's side can be unlocked from inside by turning the inner handle to the rear. The doors can be closed more easily if you open a window slightly.

On the Convertible, both doors can be unlocked from outside. To lock the vehicle, you need only move the inner door handle forward and then press the button in the door handle as you close the door. The door will not lock if it closes accidentally after the inner handle has been set. This prevents you from being locked out when the keys are still in the vehicle.

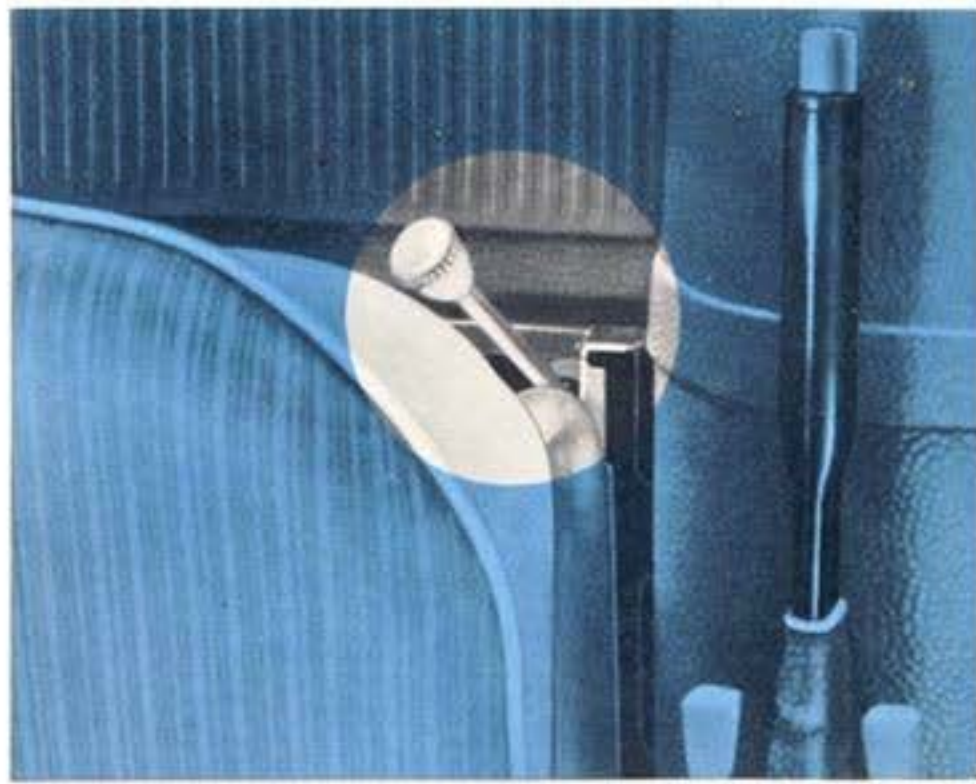

**The front seats** can be adjusted individually even when the vehicle is moving. To release the seat, just lift the lever at the front on the right. The seat can then be moved backwards or forward as desired. The seat runners are inclined so that the seat is raised as it is pushed forward and lowered as it is pushed to the rear.

The back rests of the front seats can be inclined to three different positions by moving a lever.





Sitting and driving for hours on end places a great strain on the human body. It is therefore essential to sit correctly when driving. Make full use of the possibilities of adjusting the seat to suit your individual requirements so that you still feel fresh even after driving for many hours.

**The rear view mirrors** are adjustable and should be set to give clear vision to the rear at all times without having to alter ones position. The height of the inner mirror of the Convertible can be altered by turning it 180° so as to give clear vision when the top is open.

**The sun vizors** can be swivelled towards the door windows and offer protection against the sun from the side.



**Turn indicator lever.** You can operate the turn indicator lever with your fingers without taking your hands off the steering wheel.

Lever upwards – right indicator  
Lever downwards – left indicator


A green dual arrow warning light situated in the speedometer flashes whilst the indicators are in operation. The indicators are self-cancelling.



**The windshield wipers** are switched on with the right-hand push-pull switch on the instrument panel. When switched off, the wipers return to the park position automatically.

**The windshield washer** is operated with the knob in the center of the windshield wiper switch. The washer is worked by compressed air so that by just holding the knob down you can spray water on to the windshield until the field of vision is quite clear.

Do not forget to check the windshield washer container from time to time. It is located under the front hood behind the spare wheel and holds

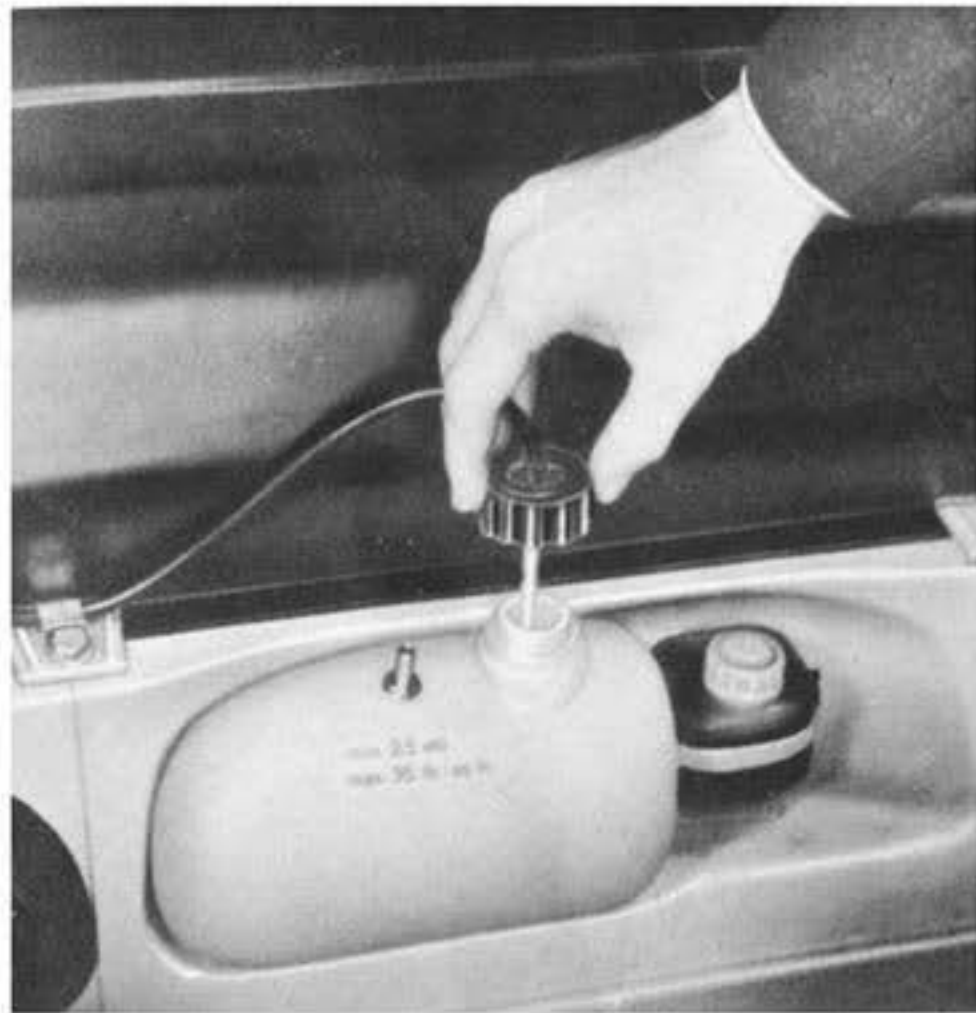

about 1 quart of water. As the air pressure in the container escapes when the cap is removed, it is advisable to refill the container at a filling station. The container can be filled until it overflows. The pipe in the container neck ensures that there is always sufficient air to operate the washer.

The correct air pressure is 2.5 kg./cm<sup>2</sup>. (36 psi.). The addition of 25% pure spirit to the water in winter will protect it from freezing down to a temperature of approximately  $-12^{\circ}\text{C}$  ( $10^{\circ}\text{F}$ ). An anti-freeze solution can be used instead of methylated spirits. The correct mixing proportions are given by the manufacturers.

The wiper blades should be removed occasionally and thoroughly cleaned with a fairly hard brush and methylated spirits or a strong detergent solution. Particularly during long dry periods they tend to become clogged with tar splashes, oil and insects. The blades should be replaced once a year.





**The lights** are switched on with the left-hand pull switch on the instrument panel. When pulled out to the first stop – you can feel the stop engage in this position – the parking lights, the rear lights and the license plate light are switched on. To switch the headlights on, pull the switch out to the second stop. The dimmer switch is on the left near the clutch pedal.

**The instrument lighting** can be varied in brightness by turning the lighting switch. It can also be switched off completely by turning the switch to the left as far as it will go.



**The interior light** is situated above the left door. The switch incorporated in the lamp fitting has three positions:

- Upper – Interior light comes on when a door is opened.
- Intermediate – Interior light switched off, with doors open.
- Lower – Interior light switched on, with doors closed.

On the Convertible the interior light is situated between the sun vizors in the mirror support. The switch positions are:

- Up – On
- Center – Off
- Down – Door contact switch



**The ash tray in the instrument panel** can be removed by depressing the spring. When reinserting it the spring engages automatically.


**The rear ash tray** must be pressed down slightly to remove it. After cleaning, it must be pressed back into the housing evenly at top and bottom.

**The ventilation** of the vehicle can be regulated to suit the weather conditions and the occupants by careful use of the vent wings. Even when it is quite cold, at least one vent wing should be opened slightly. A continuous change of air in the vehicle keeps the windows clear and prevents the otherwise inevitable misting-up caused by the moisture in the occupant's breath.

**The sliding roof** is operated by a crank which is situated in a recess between the sun vizors.

After pulling down the handle, the roof can be opened or closed as required. It will remain fixed in any position.

When closing, the sliding roof is cranked fully forward to the stop. Now turn the handle back a little and fold it into the recess.

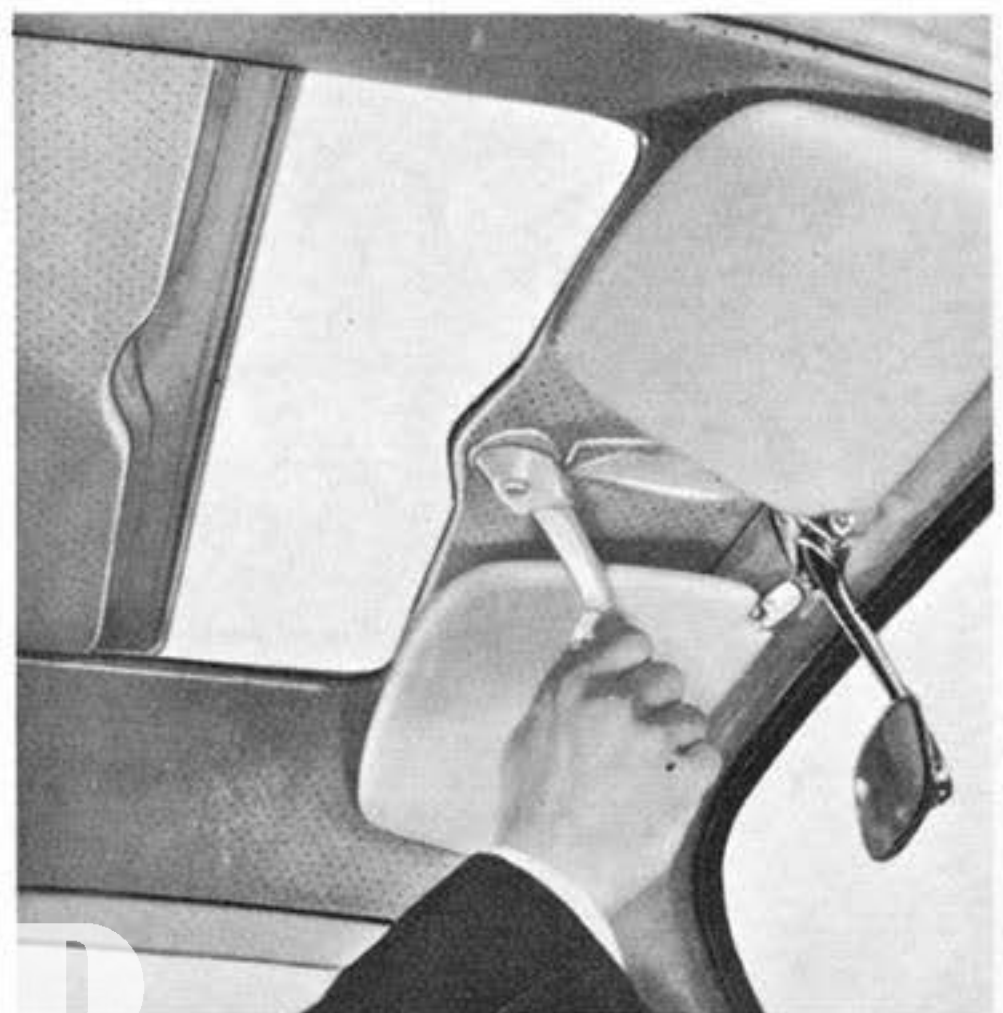





**The luggage compartment** under the front hood is theft-proof when the car is locked. The control knob for the hood is situated under the instrument panel on the left.

On the Convertible, the knob is fitted with a lock so that you can lock up the spare wheel, fuel tank and luggage when the vehicle is open. The key for the lock is also used for the door and the lockable glove box lid on the Convertible.

When closing the hood, ensure that the lock engages firmly.

There is a second luggage compartment behind the rear seats. This compartment is ideal for all




the things you need to have handy when on the move. The rear back rest can be folded forward when loading and unloading luggage. If you wish to carry very large pieces of luggage you can secure the back rest to the seat support in this position on the Sedan. In the normal position, the back rest is held by a rubber loop on the right-hand side.

**Safety belts** are obtainable from any VW workshop. The safety belts for the driver and front passenger are secured on the lock pillar and on the frame tunnel in the rear footwell. The belts for the passengers at the rear are attached on the left and right above the rear back rest and in the center of the luggage compartment floor behind the rear seat.





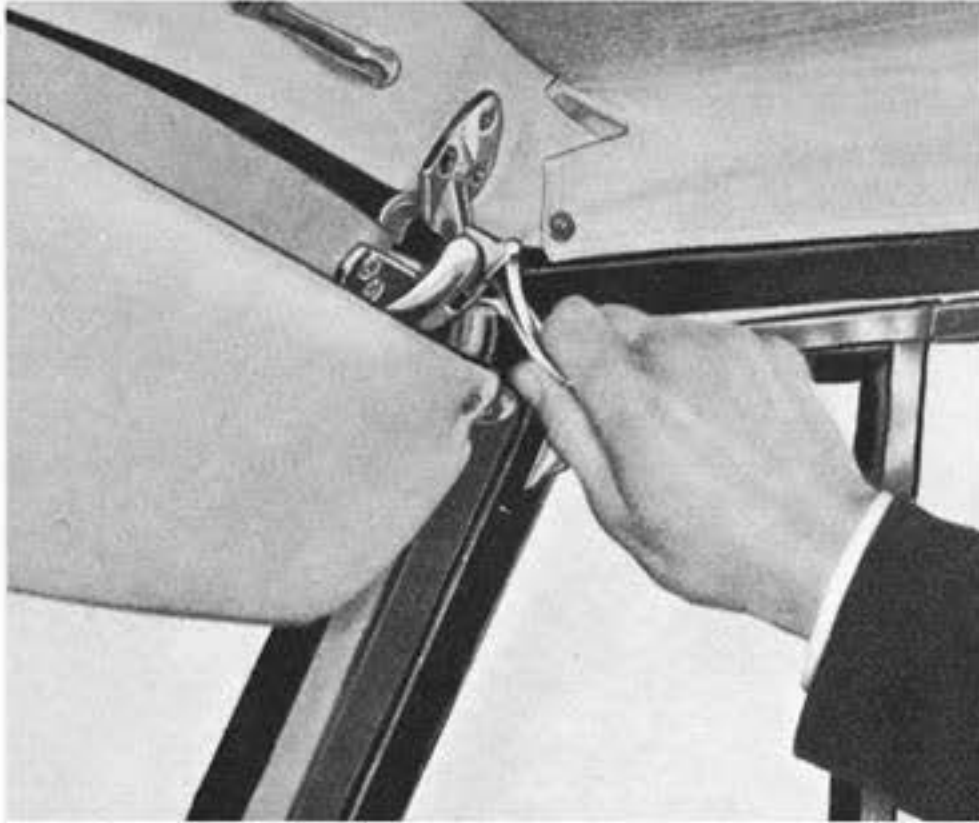


## The Convertible Top

can easily be opened and closed by one person. The service life of the top largely depends on the way the top is opened and closed.

The top must never be opened when wet.

After driving on dusty roads for long periods we recommend that you beat the top lightly and brush it off well with a soft brush before opening it in order to prevent the dust particles from damaging the material and causing friction marks. These marks can also be caused if the top is not held securely by the fasteners when it is open. When this is the case it is best to consult your VW workshop.

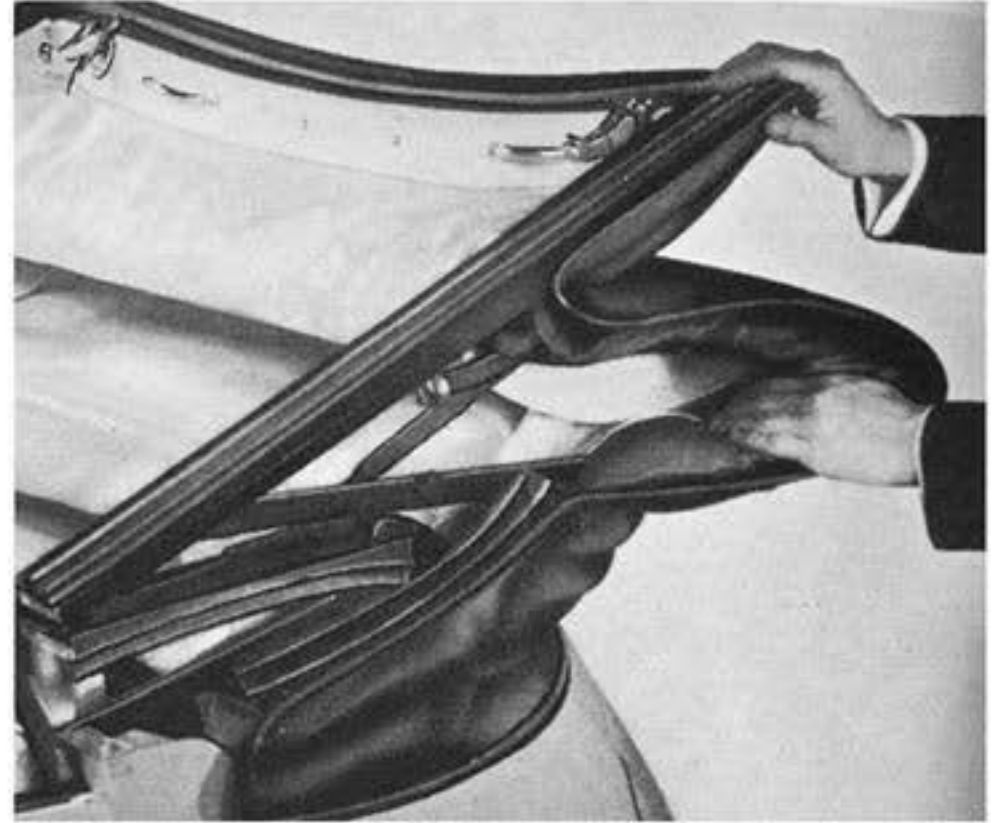

## To open the top

Release the front fasteners.

Raise the header slightly and fold back the top. Withdraw top cover from the linkages on both sides.

Push the top lining inward so that the linkages are free.

Place the caps of the top clamps over the header guides.



Press down the top until the spring-loaded catches (one on each side) engage.

Pull the protective boot over from the rear and secure it with the press studs provided. Ensure that the boot fits over the top material properly underneath and that the material does not hang down out of the boot. The trim moulding on the lower edge of the top should be exposed.

### To close the top

Release the fasteners of the boot and remove. It can then be stored in one of the two luggage compartments.

Press down the top and disengage the catches.


Raise the top.

Pull the top down until the header guides have entered the channels above the windshield frame.

Place the fastener caps over the noses of the brackets and turn up the levers.





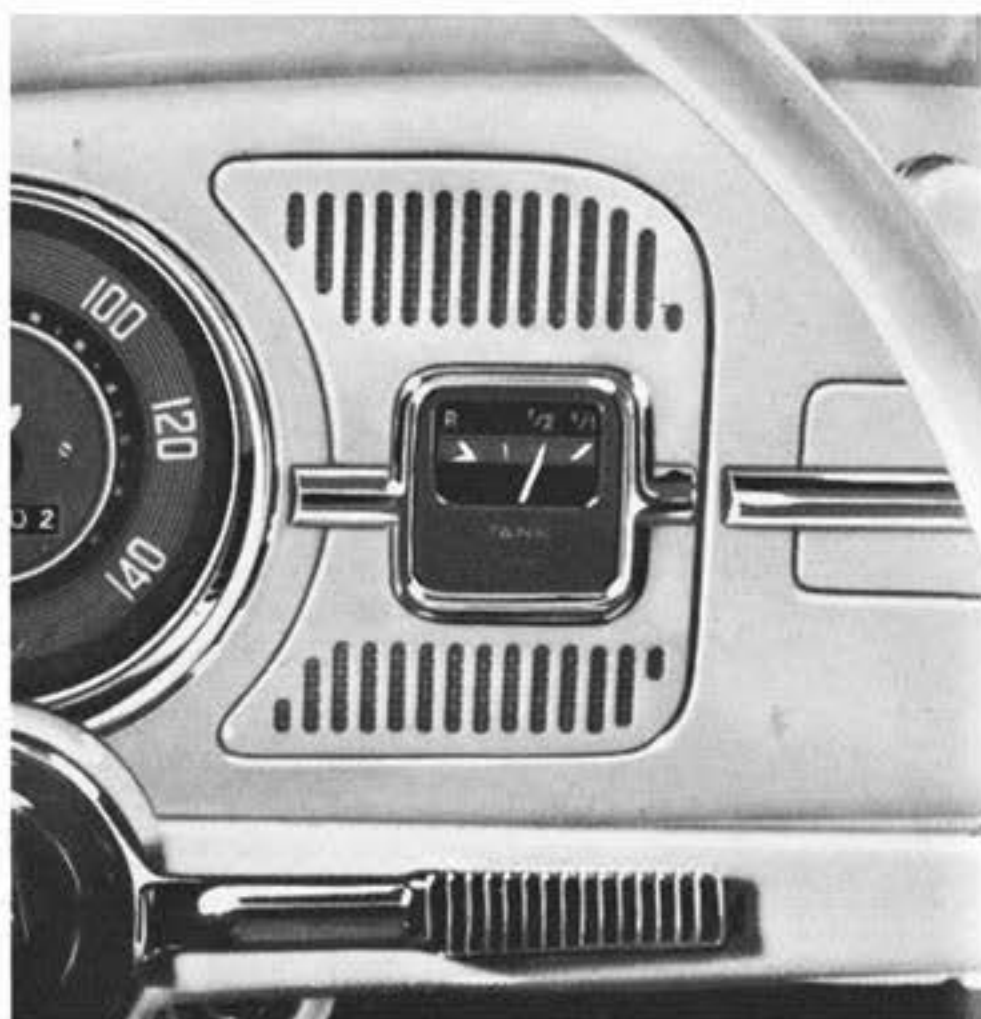

## Please check

**the brakes, lighting and the amount of fuel before every trip. The oil level and tires of your car should be checked at regular intervals.**

**The fuel tank** contains sufficient fuel when full, that is when the fuel gauge needle is hard over to the right, to cover a good 500 kilometers (300 miles). As soon as the needle moves to "R" (Reserve) it is time to refuel. There is still 5 liters left in the tank which is enough for about 60 kilometers (37 miles) so that you can reach the next filling station.

The choice of fuel type and brand is left entirely to you. The VW engine is so designed that it will run satisfactorily on all normal reputable fuels. All regular and premium mixtures are distinguished by their consistent composition, adequate anti-knock properties and freedom from harmful ingredients.

The tank holds 40 liters (10.6 US gallons, 8.8 imp. gallons). The filler neck is under the front hood which can be opened with the knob on the left under the instrument panel.

**The brakes** must be checked before starting out on a trip as the safety of your car depends mainly on them. When the car is in motion, depress the brake pedal a few times to make sure that the brakes are working efficiently.

**The stop and turn indicator lights** are an essential part of the lighting system. The ignition has to be switched on if you wish to check them.

If a turn indicator bulb is defective, the other turn indicator lights and the warning light in the speedometer dial will flash considerably quicker.


The stop lights re-act to the foot brake only.

**The oil level** should only be checked when the engine is not running. It should always be between the two marks on the dipstick and must never fall below the lower mark. Wipe the dipstick with a clean rag before checking the oil level.

If possible always use the same branded HD oil (for Service MS). It is not good practice to mix various brands of oil.

**Tires.** Correct tire pressures are essential for ensuring the excellent road-holding properties of your car. It is not too much to be expected for you to check the tire pressure occasionally.

When the car is fully loaded, or when driving fast on long journeys the front tire pressure should be 1.2 kg./cm<sup>2</sup>. (17 psi.) and 1.7 kg./cm<sup>2</sup>. (24 psi.) at the rear. Otherwise 1.1 kg./cm<sup>2</sup>. (16 psi.) pressure in the front and 1.4 kg./cm<sup>2</sup>. (20 psi.) in the rear is sufficient.

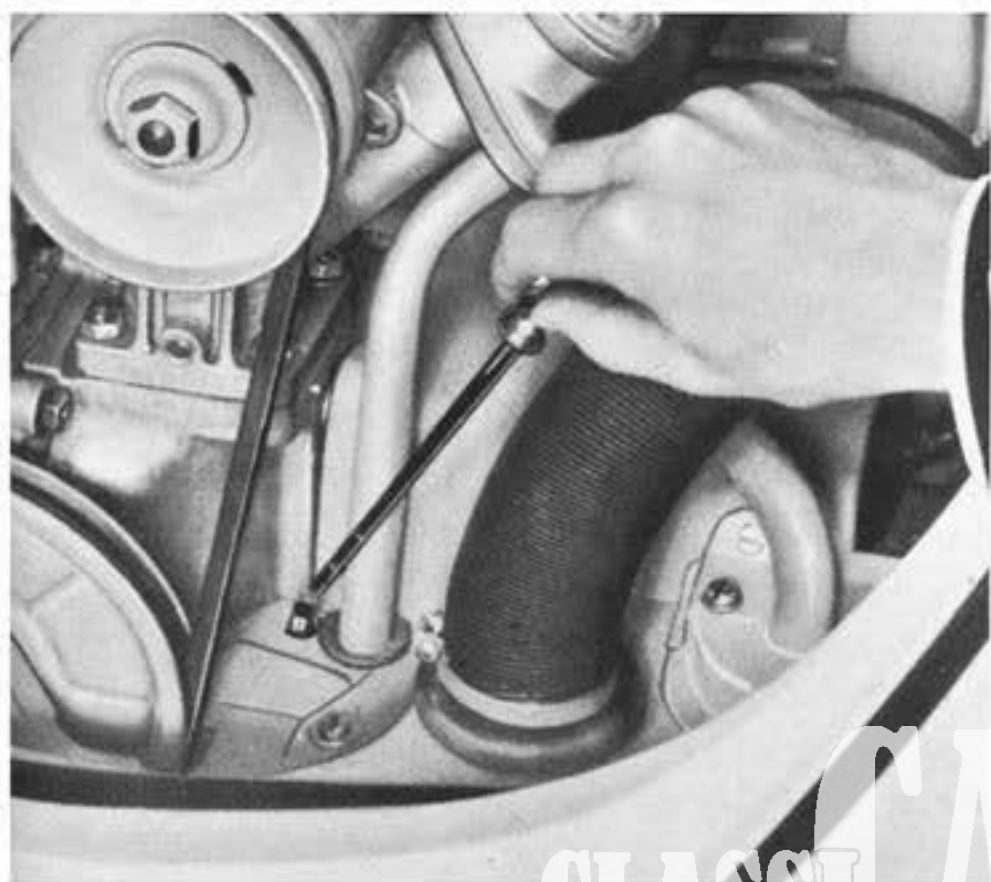





## Starting the engine

The ignition and starter are switched on, one after the other, by means of the combined starter-ignition switch. As starter operation stresses the battery heavily, other big current users, such as the headlights, windshield wiper and radio, should not be switched on when starting. Make sure, also, that the gear shift lever is in neutral.

First switch on the ignition by turning the key to the right until the red and green warning lights in the speedometer come on. Then operate the starter without delay by turning the key further to the right.

**At temperatures above freezing point** or when the engine is still warm, depress the accelerator pedal slightly while operating the starter. Depress the acceleration pedal fully only when the engine is very warm.

**At temperatures below freezing point** and when the engine is cold, depress the accelerator pedal fully and then release it before switching on the ignition. This enables the automatic choke to close the choke valve. As the engine and transmission oil tend to become thick when cold, you should also declutch when starting so that the starter motor only has to turn the engine.

As soon as the engine starts, release the ignition key so that the starter is switched off. You can move off at once. The automatic choke regulates the mixture and idling speed to suit the operating temperature. Do not race the engine when it is still cold.



If the engine does not start within the first 10 seconds, pause for about the same length of time to rest the battery before repeating the starter operation. The ignition will have to be switched off first and then on again as a non-repeat lock in the switch prevents the starter from being operated repeatedly when the ignition is on and thus being damaged by the engine when it is running. The starting procedure should not be interrupted if the engine is heard to fire a few times without starting.


**The red warning light for the generator and cooling** goes out as the engine speed increases. If this light comes on when you are driving, stop at once and check the belt which drives the generator. When this belt breaks, the cooling of the engine is interrupted. The proper way to replace the belt is described on page 42.

If the generator ceases to charge for any other reason, you can drive on, but only to the next workshop if possible as otherwise the battery will soon be run down.

**The green warning light for the oil pressure** goes out when the engine is started. If this warning light comes on whilst driving you must stop at once as the chances are that the oil circulation has been interrupted. Check the oil level at once. If the oil level is correct, get in contact with the nearest VW workshop.


If the light flickers occasionally when the engine is warm and running slowly it does not indicate trouble.

**Caution. Be careful when starting the engine in the garage. Provide ample ventilation so that the exhaust fumes, which contain carbon-monoxide gas, can escape.**

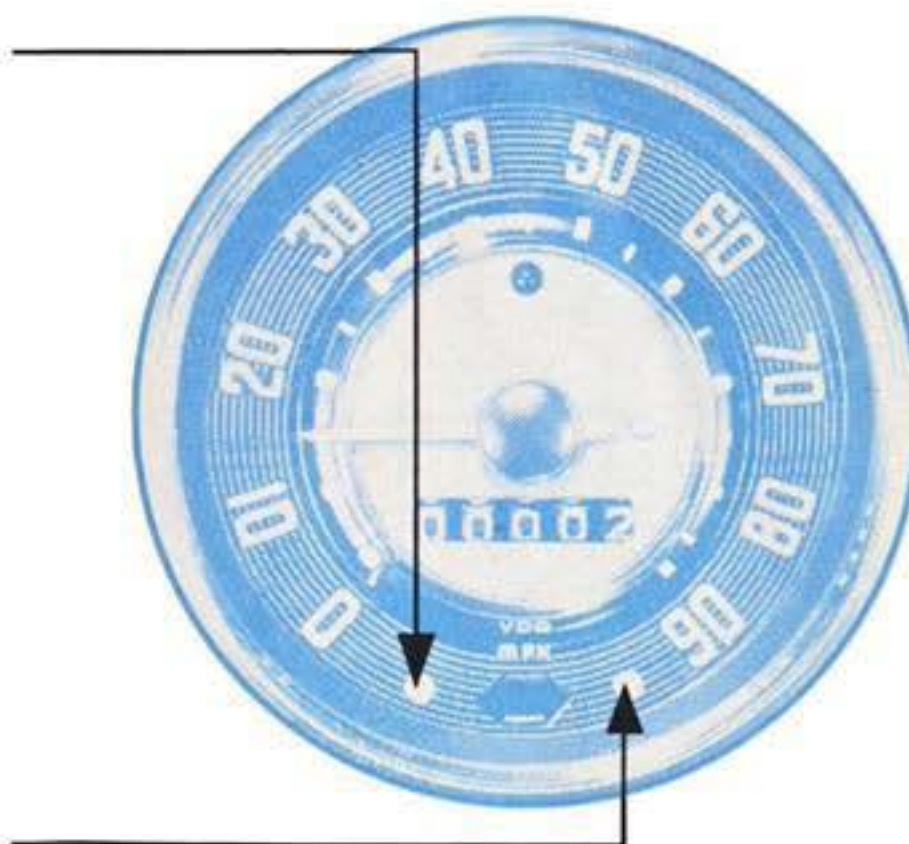



# Practical Driving

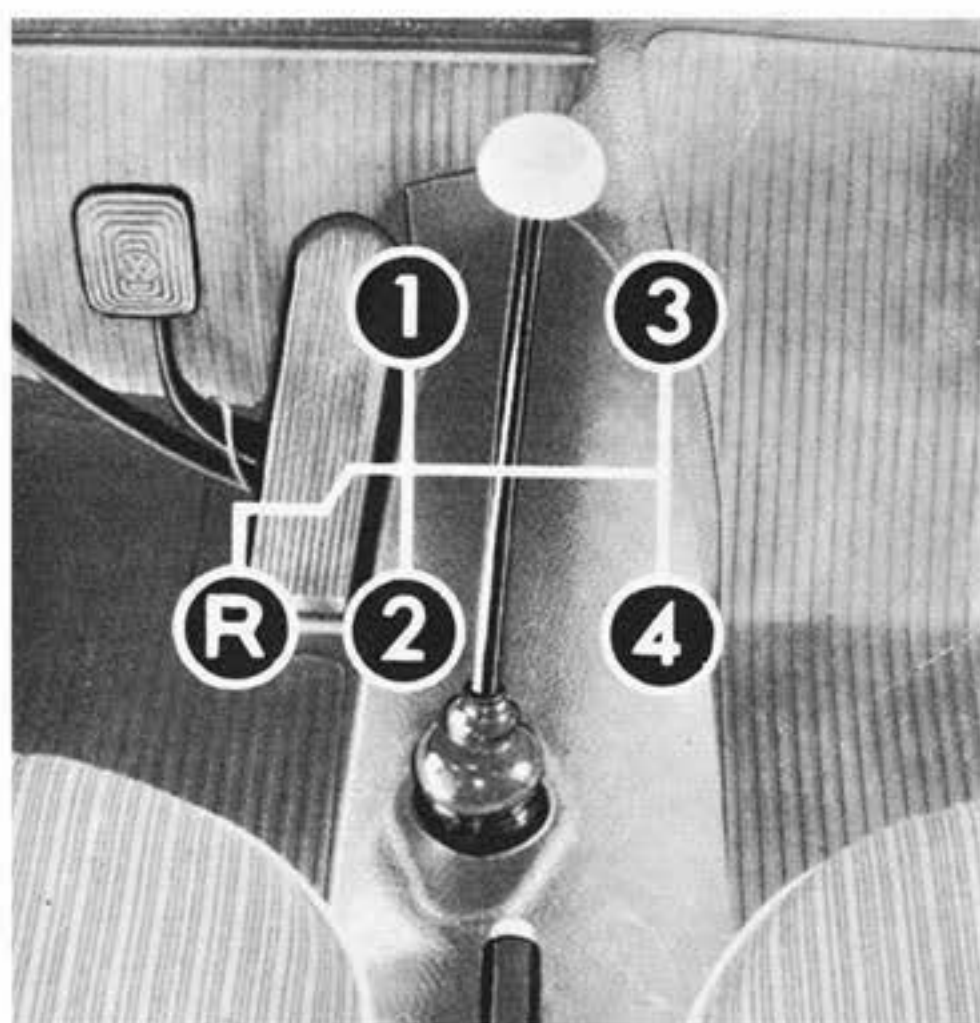

**Breaking-in instructions** are not necessary for your Volkswagen. The most modern production and inspection methods have made it possible to dispense with the initial speed restrictions which are normally required. You can drive the vehicle at full speed from the first day. It is advisable, however, to observe certain general driving rules.

## Gear shifting

Glance occasionally at the speedometer especially during the initial period.

**Shift the gears within the permissible speed ranges only:**

1st GEAR  
0-15 mph  
0-25 kph



**You can drive very economically between:**

Engage the reverse gear only when the car is stationary. A locking device prevents unintentional shifting. Depress the gear lever slightly and then move it to the left and to the rear to engage reverse.

## Shifting to a lower gear

Shift down to a lower gear in good time when on inclines and also when accelerating from low speeds. The transmission of your car is fully



**2nd GEAR**  
6–30 mph  
10–50 kph



**6 and 22 mph**  
**10 and 35 kph**

**3rd GEAR**  
15–45 mph  
25–75 kph



**15 and 35 mph**  
**25 and 55 kph**

**4th GEAR**  
25–72 mph  
40–115 kph



**25 and 56 mph**  
**40 and 90 kph**

synchronized so please do not hesitate to shift the gears.

Certain speed ranges have to be adhered to when shifting to a lower gear. Shifting down to a lower gear at excessive speeds puts an unnecessary strain on the transmission. On the other hand very low speeds in the individual gears are harmful to the engine. Shift down from 4th to 3rd gear approximately between 75 and 40 kph. (45 and

25 mph.) and from 3rd to 2nd gear between 50 and 25 kph. (30 and 15 mph.). The 1st gear is only used for moving off, driving at walking pace or on very steep inclines.

When shifting gears, it is absolutely essential to depress the clutch pedal fully. Incomplete declutching makes gear shifting difficult and leads to rapid wear of the synchronizer stop rings.



**Do not race or labor the engine in the individual gears. This practice can have a decisive effect on the life of the engine.**

A few instructions on clutch operation:


Shift to first gear shortly before moving off only.

When stopping temporarily, do not wait with the clutch pedal depressed and a gear engaged.

Do not use the clutch pedal as a footrest when driving.

**Economical operation is one of the outstanding features of your car. However, getting a few extra miles from each gallon depends on your driving habits:**

**Make good use of the lower speed ranges in the individual gears. The graph shows how the fuel consumption increases when you, to take one example, drive in 3rd gear in town traffic instead of using 4th gear. The same thing happens when you drive at unnecessarily high speeds in 1st or 2nd gear. Under normal circumstances you can shift into 2nd gear at 10 kph. (6 mph.), into 3rd gear at 25 - 35 kph. (15 - 21 mph.) and into top at 40 - 50 kph. (25 - 31 mph.).**

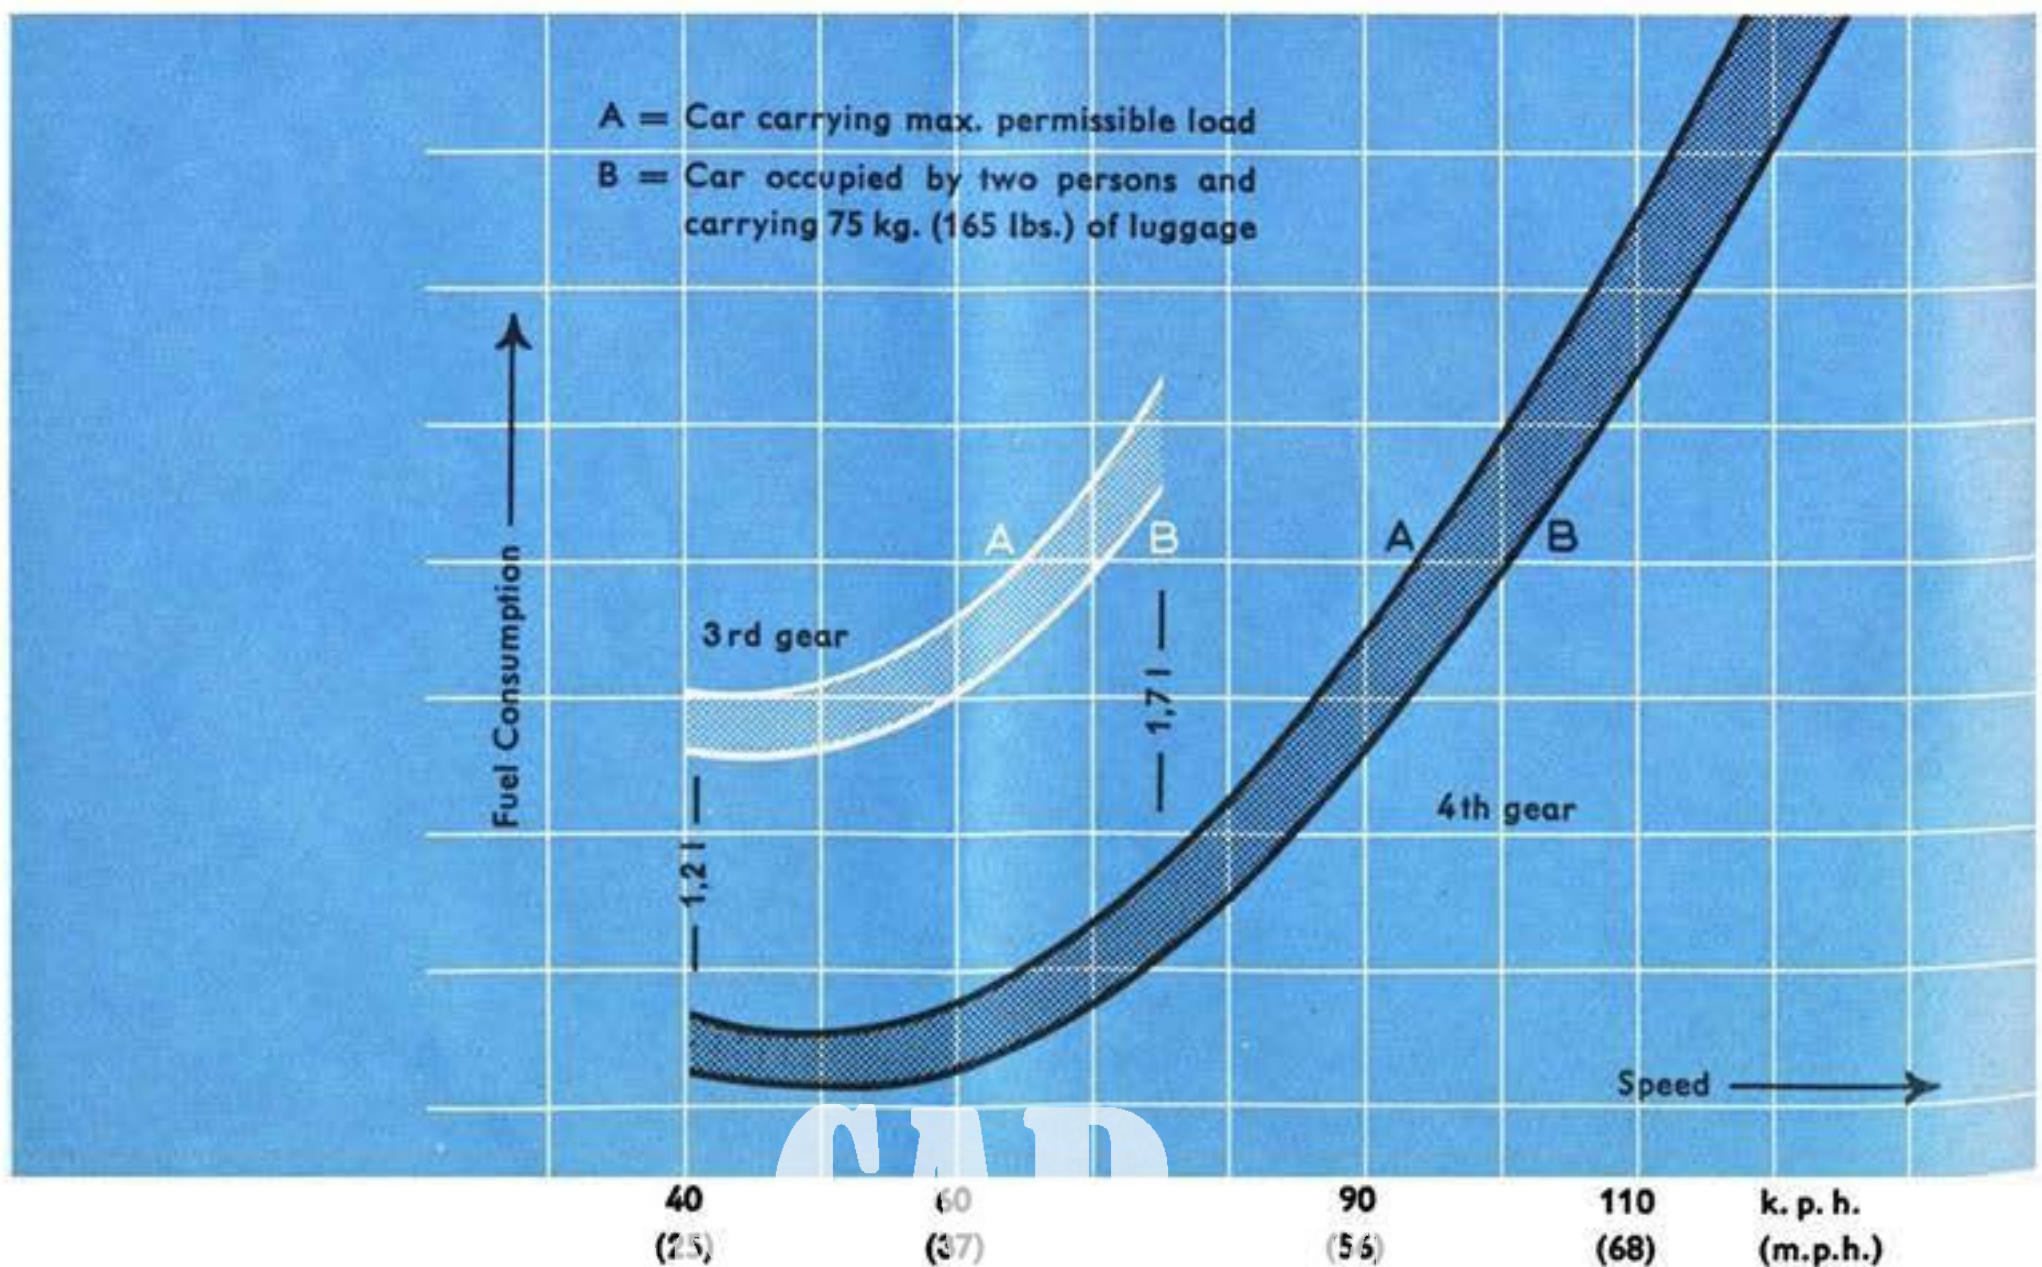



**Depress the pedal gradually when accelerating. Only use the full acceleration and particularly the excellent brakes of your vehicle when a critical traffic situation makes it absolutely essential.**

**Do not pump the accelerator pedal unnecessarily. Even the small quantity of fuel additionally discharged each time the accelerator pedal is depressed results in a marked increase in the overall fuel consumption.**

**Do not continue to depress the accelerator pedal when your speed begins to drop on an incline, shift down in good time so that you keep the engine running at the best speed.**

**Reduce your speed in good time before corners and when stopping. Do not coast downhill.**

**High speeds always result in higher fuel consumption figures. This can be seen very clearly in the graph, which also shows that the consumption does not increase uniformly but goes up rapidly.**

**However, you can drive quickly and economically if you accelerate to the desired speed and then ease the pedal back slowly to the point where the vehicle just remains at this speed.**

**This method can prove very economically, particularly on long motorway trips.**

**The most advantageous engine operating conditions result from brisk driving and correct gear shifting.**

## **Brakes**

The brake responds to even the slightest foot pressure. Apply the brakes carefully and avoid locking the wheels. Locked wheels will not shorten the braking distance but may cause you to lose control over the vehicle and will affect the tires.

When driving downhill, make use of the braking effect of the engine and shift to that gear which

you would use in driving uphill. The ignition must never be switched off when going downhill.

Violent braking can only be justified in an emergency. Nevertheless, it is advisable to check the full braking effect at certain intervals so that you will be familiar with the behaviour of the car and the actual braking distance.



## Parking

Parking in limited spaces can be made quite simple:


Stop your car level with the car in front of the space. Turn the steering wheel sharp to the right and reverse slowly into the gap:



When the front bumper of your car is level with the rear bumper of the car ahead of you, turn the steering wheel fully to the left and back up further towards the curb:



Now turn the steering wheel to the right again and pull up a little bit, until both ends of the car are as close to the curb as possible:

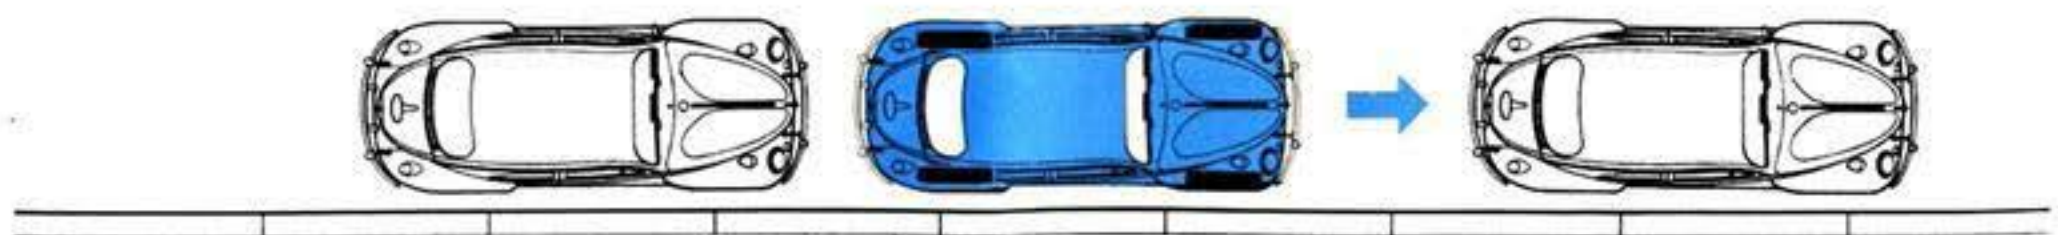

When parking on a steep slope, set the handbrake to stop the car rolling. As a precautionary measure, it is advisable to engage first or reverse gear in addition to the handbrake. And do not forget to take the key out of the ignition switch before you leave your car. If a steering-ignition lock is fitted, remove the key at the "Halt" position only when the vehicle is stationary. This locks the steering and protects the vehicle against theft.

## Towing

Just in case you wish to attach a towrope to your vehicle one day, please note that the bumpers are not suitable for this purpose. If you do not expect the towing effort to be excessive, the rope can be attached at the rear to a lower shock absorber bracket. Otherwise, we advise you to use the cross tube which houses the torsion bars for the rear suspension. Neither of these points are very easy to reach but they at least ensure that your desire to help does not result in damage to your vehicle.



At the front, the rope should be attached to the lower axle tube as near to the frame head as possible. It is important to ensure that the rope is located over the tube and then passed round between tube and stabilizer bar.





## Cold Weather Hints


Your car has two features which you will appreciate in the winter: Air cooling and heating. You can expose your car to bitter cold without fear. Its air-cooled engine will always be ready to start and supply warm air for the interior of the car.

**The warm air heating** can be fully regulated. The distribution of warm air can be varied to suit the wishes of the occupants by means of controllable outlets at foot level.

The right-hand lever between the front seats turns all the heating on and off and the left-hand lever controls the heating in the rear foot well. The outlets in the front foot well can be closed with slides.

At very low temperatures, it is advisable to always close the rear outlets when first moving off. This

Lever up – on  
Lever down – off

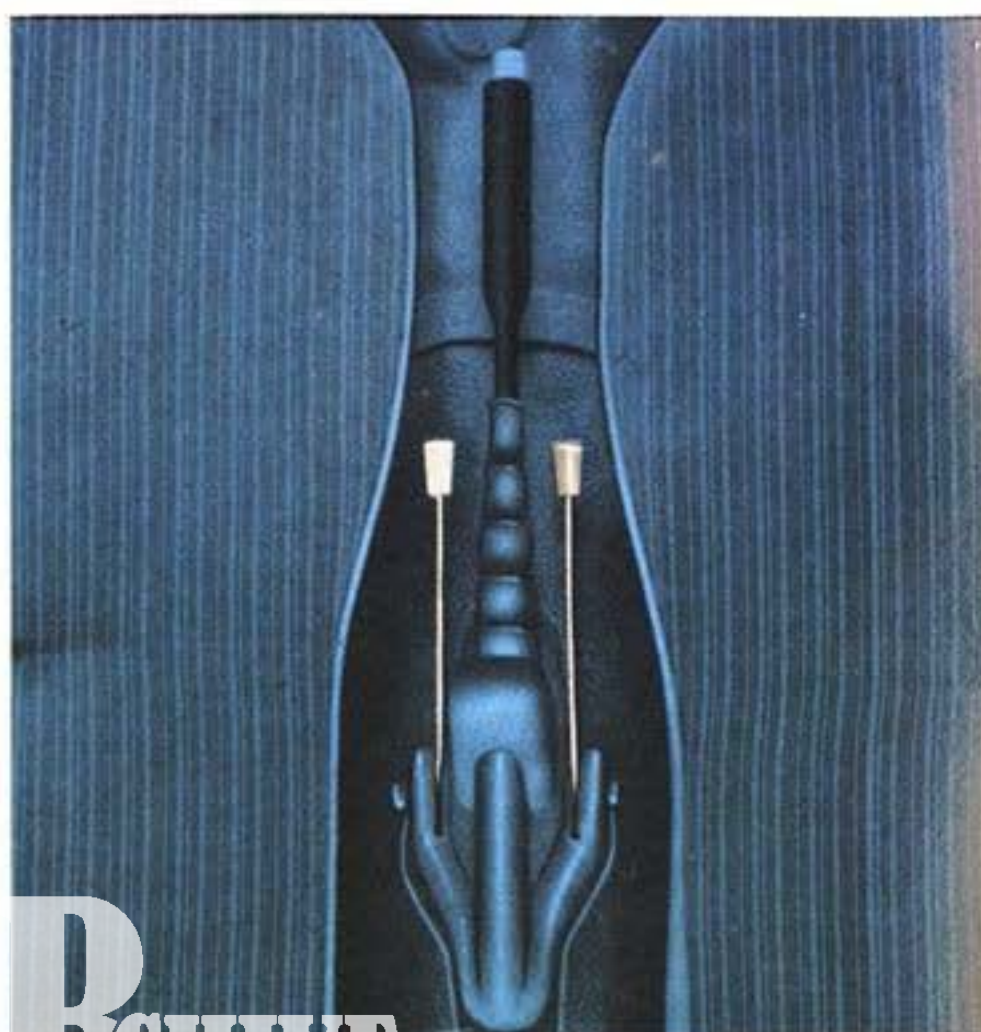



increases the flow of air to the windshield and also helps to prevent steaming up when air humidity is high. As soon as the windshield is clear, the rear foot level outlets should be opened so that the interior of the body heats up as quickly and uniformly as possible.

If you open a vent wing slightly when the heating is on, the heat output will increase noticeably because the fan can then force the warm air into the body more easily.

Never attempt to influence the cooling and heating of your car in winter by covering the air intake slots below the rear window. These slots must always remain open to ensure the flow of fresh air to the carburetor and fan.

**Engine oil.** SAE 20 W/20 oil will thicken at temperatures below freezing point and result in difficult starting. Change over to the thinner SAE 10W engine oil or a multigrade oil SAE 10 W - 30 at oil changes when temperatures under freezing point are expected.

Only if your car is mainly operated over short distances during the winter is it advisable to have the oil changed at more frequent intervals, say every 2,500 km. (1,500 miles), using the right HD oil. In the warmer seasons, additional oil changes are unnecessary and uneconomical.

In territories where exceptionally low temperatures prevail (below  $-25^{\circ}\text{C}/-13^{\circ}\text{F}$ ), the use of SAE 5 W engine oil is recommended. The oil should be changed every 1250 km. (750 miles).

**Transmission oil.** SAE 90 oil can generally be used all the year round. Only in countries with arctic climates is it necessary to replace it with the thinner SAE 80.

**The chassis** is naturally exposed to very severe conditions in the winter. The steadily increasing use of chemicals to de-ice the roads produces solutions which attack even the most durable paintwork after a time. The underside of your Volkswagen is sprayed with a wax-based compound to protect it from these influences. It is advisable to examine the protective film at the beginning of the winter and have it repaired by respraying so that the full protective effect is retained.

**The battery** requires special care in winter because of the increased consumption of current when starting the engine and using the lights at night. Furthermore, its efficiency decreases at lower temperatures. If the car is mostly used over short distances or in city traffic, it is advisable to have the battery recharged occasionally. The connections between battery and starting motor must be kept perfectly clean.

**The spark plugs** should not have an excessively large gap especially in winter. The normal spark plug gap is 0.7 mm. (.028"). In extremely cold weather the gap can be reduced to between 0.4 and 0.5 mm. (.016" and .020") to facilitate starting.



**The brakes** are exposed to splash water and condensation which in winter is apt to freeze in the brake drums. Therefore, when parking your car, do not set the handbrake, but shift to first or to reverse gear.

**The door lock** can freeze up in winter, especially if water gets into the lock cylinder when washing the car. Do not aim the water jet directly at the lock, but instead, cover up the key hole when washing. A frozen lock can be opened by warming the key before insertion and then squirting anti-freeze into the lock cylinder straight away.

**Tires** with badly worn treads are very dangerous particularly in the winter so ensure that they are replaced in good time.

M+S tires with special heavy treads give good road holding in snow and slush. They can be fitted to all four wheels. M+S tires should however, not be fitted on the front wheels only.

Better still are the M+S ice tires (spiked) which increase the safety margin even on hard snow and ice. Even with these tires, which should always be fitted to all four wheels, you should not allow yourself to be misled into driving faster than you would under the same conditions with normal M+S tires.

In general, special winter tires only have real advantages when conditions on the roads are really wintry. For safety reasons, it is not advisable to drive a vehicle fitted with any type of winter tire at top speed. You cannot expect a winter tire to have the same degree of adhesion on dry snow free roads as a normal tire. Furthermore, under these conditions M+S tires wear rapidly, particularly at high speeds.

**Snow chains**, in conjunction with normal and winter tires, can only be used on the rear wheels. Only thin chains which do not stand clear of the tire tread and walls more than 13 mm., including tensioner, are suitable. When driving over long stretches of road which are free of snow the chains should be removed. They serve no useful purpose here and merely damage the tires and wear out quickly.

## Care of the Tires

Apart from the tire pressures, your driving habits also affect the service life of the tires considerably. Rapid acceleration, violent braking and cornering result in more excessive wear as compared to careful driving.

Avoid overloading the car and protect the tires from intense sunlight, fuel or oil.

The tires should be checked occasionally for foreign matter and external damage. The tires should always be replaced when the tread has worn down to a depth of 1 mm. (.04") which is the absolute minimum required for safe usage. If the tires show signs of uneven wear after a considerable mileage consult your local VW dealer.

For smooth running at high speeds and long tire life, it is important to have the wheels balanced statically and dynamically. As the wheels can get out of balance owing to natural tire wear, they should be balanced every 10,000 km. (6,000 miles).

When mounting the tires, the red mark should be positioned at the valve. This will ensure that the lack of balance is neutralised to a certain extent.



## Changing wheels

The spare wheel, jack and tools are found under the front hood which is opened by means of the knob under the instrument panel. On the Sedan the jack is secured by a clip near the spare wheel.




Set the hand brake.

Take off the wheel cap with the removal tool and loosen the wheel bolts about one turn with the wrench and operating bar.

Insert the jack in the square tube below the sill panel and push down the jack base plate until it makes contact with the ground.

Insert the operating bar into the jack and raise the car until the wheel is clear of the ground.

Remove wheel bolts and take off the wheel.

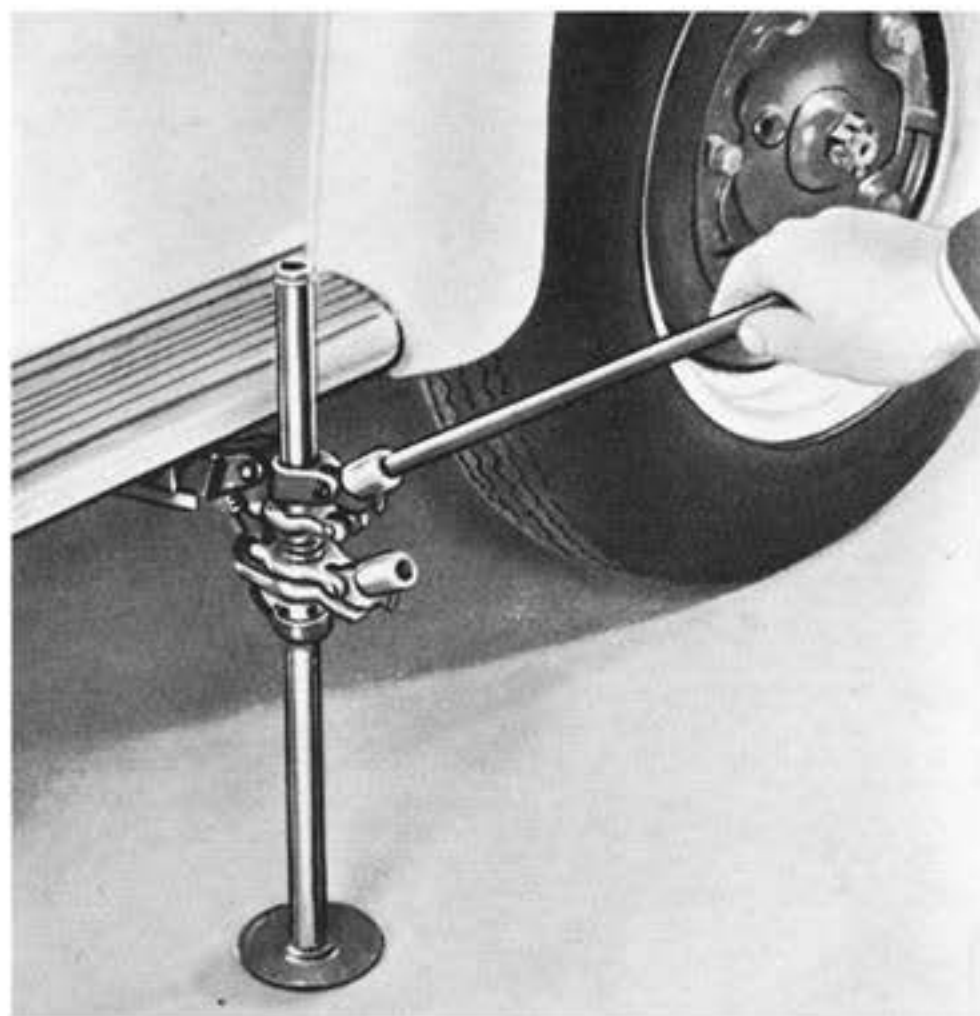



Raise the car until the five holes in the wheel are nearly lined up with the holes in the brake drum.

Insert one wheel bolt and tighten it to such degree as to allow the wheel to be swung round this point by hand until the remaining holes in the wheel and brake drum coincide.

Insert the other wheel bolts.



Tighten the screws until the wheel, centered by the spherical shape of the screw heads, contacts the brake drum evenly.

Place the bar in the jack and lower the vehicle.

Tighten the bolts evenly.

Install wheel cap and make sure that it is tightly seated.



## Care of the Car

**Clean and smart appearance.** To keep your car looking smart and new should be a matter of pride to the driver or owner. It is our object to provide you with paintwork which not only looks good and has a sparkling lustre but is most durable. A chemical treatment protects the body against rust and anchors the synthetic resin enamel to the metal.

Even the best paint work requires regular care. You will realise the importance of this if you consider that the paint is exposed to sunshine, rain, dust and dirt.

**Wash** your new car frequently during the first weeks as this is good for the finish. When washing you require a soft sponge for the body, a soft brush for the wheels, a sturdy, long-handled brush for the chassis, and plenty of water.

The chassis and underneath part of the body should first be flushed with water to soak off the dirt, and afterwards a brush should be used.

Spray the exterior finish of body and wheels evenly with water until dirt is soaked off. Do not allow a powerful jet of water to hit the painted surface. Using plenty of clear water, remove dirt with a sponge. Clean the sponge at short intervals to avoid scratching the paint work.

There are many proved auto soaps and detergents available which greatly facilitate this job. Do not buy just any product, let your VW dealer advise you. It is of utmost importance to rinse the body



thoroughly with water to ensure that no traces of the detergent remain on the body. After washing, dry off with a clean chamois to prevent water spots from forming.

**Preservation (Waxing)** should be carried out for the first time after approximately 8 to 10 weeks and afterwards, if possible, at regular intervals of between 6 and 8 weeks. Waxing means to restore to the finish certain substances it has lost by exposure to the weather. At the same time a protective water-repellent coat of wax is applied to the body.

The "Genuine VW Preservative" (L 190) was specially produced for the Volkswagen and is obtainable from every VW dealer. After washing and drying the car thoroughly, apply the preservative with a soft cloth. Let it dry for approximately 20 minutes and then rub it down with polishing cotton or a soft polishing cloth until iridescent colours can no longer be seen when you are standing at an angle to the polished area.

Do not forget to wax the car after each detergent washing as the intensive cleansing properties of the chemical detergent will partially dissolve the protective film of wax.

**Polishing.** You should polish your car only if its appearance has been affected as a result of insufficient care, or if the application of the preservative no longer restores the original lustre. Avoid the use of abrasives or chemically harmful products.

A special polish for the synthetic-resin enamel finish is also available from your Volkswagen dealer under the designation "Genuine VW Polishing Fluid" (L 170). Prior to applying the polish, the car must be washed and dried carefully. The polish should be applied with a soft clean cloth or polishing cotton – use a straight horizontal or vertical motion rather than a circular motion. After rubbing for some time you will notice a slight resistance, which indicates that the ingredients of the polish have settled in the finish and that the solvent has evaporated. Now take clean polishing cotton and rub the body down until the high polish is restored.

To prevent the polishing fluid from drying off prematurely, do not apply it on too large an area of the body at a time. A subsequent application of the preservative and your efforts will be rewarded with a long-lasting shine.

---

**Never wash, wax or polish the car in sunlight.**

---



**Tar spots.** Tar splashes have a tendency to corrode the finish within a short time and should be removed as soon as possible with Genuine VW Preservative.

On the road you usually have nothing at your disposal but fuel. Kerosene or turpentine may also be used. After this, the treated spots should be washed with a mild, luke warm detergent solution, and rinsed, in order to remove traces of the cleansing agent.

**Insects** are caught, especially in hot weather, on the front of the car and on the windshield. Insects should not be allowed to remain on the paint finish for long and should be removed with water and a sponge. Once baked on they can only be removed with luke warm detergent solution.

**Parking under trees.** Vehicles which are parked under trees for long periods in summer are often found to be covered with spots. These spots can be removed fairly easily with luke warm detergent solution if the treatment is not delayed too long. It is advisable to apply a coat of preservative afterwards.

**Chrome parts** should be treated with "Genuine VW Chrome Cleaner Chromlin" when dry. Apply Chromlin thinly and allow to dry for 10 minutes before polishing with a dry cloth.

## Care of the Convertible Top

The appearance and life of the top greatly depend on proper care and maintenance.

Never use benzine, benzole, spot remover or other solvent solutions to remove spots as these fluids will attack the rubber layer in the roof and influence the water-proofing and service life of the material. Try rubbing the spot carefully with an eraser followed by brushing with a soft brush. This will avoid premature bleaching caused by washing too often with soap solutions.

Only when very dirty, and not more than twice a year, should the top be washed. Use only clear water without chemical or other additions, and a good quality soap powder. The car shampoos which are often used nowadays also have a detrimental affect on the impregnation of the top material and can cause leakage even after one application.

Before washing the top should be lightly beaten and brushed. Dissolve the soap compound in a bucket of lukewarm water (2 dessert spoonfuls to 1 gallon of water). Moisten the top with clear water and apply the solution with a soft brush in one direction only. Then rinse the top with clear water and brush at the same time. If necessary, scrub with suds again.

The final rinsing should be continued until all traces of soap are removed and the water runs off quite clear. The soap suds should then be washed off the paintwork of the vehicle and the surface dried with a leather. The top must be left up until dry.

**Cloth upholstery.** If a vacuum cleaner is not available, the upholstery should be cleaned thoroughly with a brush or whisk broom. Stains can generally be removed with luke warm soap suds. Grease and oil stains are removed with cleaning paste or cleaning fluid. Do not pour the cleaning fluid directly on the upholstery as otherwise rings will form. Moisten a clean, uncoloured cloth with the fluid and rub with a circular motion, starting outside the spot and working inwards.

**Leatherette** can best be cleaned with a soft cloth or soft brush. If very dirty, use suds of any luke warm detergent solution or a dry foam cleaner.

The seating surface and front sides of the backrests may only be cleaned with a dry foam cleaner. The seating surface and the backrest are made of an air-permeable leatherette and liquid cleaners would immediately penetrate into the textile backing.

Grease and paint spots should be wiped off before they dry on. Soaked-in spots can be removed by carefully using a rag moistened with fuel or alcohol. Spots caused by shoe polish can be removed with turpentine. Use these agents carefully and sparingly as they tend to dissolve the dust-repellent finish of the leatherette. Solvents such as trichlorethylene or paint thinner must not be used for cleaning.

After cleaning, the leatherette should be dried thoroughly with a soft cloth. So-called preservatives are not suitable for leatherette because they do not soak into the material and will merely collect dust and make clothing dirty.

**The windows** can be cleaned best with a clean sponge and warm water. A glass cleaning solution should only be added to the water in exceptional cases as these solutions tend to affect the paint preservative. Always use a special clean leather to dry the windows. This leather must not be used for the paintwork in any circumstances as most paint cleaners and polishes contain ingredients which will cause unpleasant streaks to appear on the windshield when it rains, even if only the smallest trace is present.

These streaks can only be removed with a good windshield cleaner and a lot of care, not forgetting the windshield wiper blades.

**Door and window weatherstrips.** It is important to keep the rubber parts undamaged and supple to ensure perfect sealing. To retain the original flexibility of the rubber, these parts should be coated occasionally with talcum powder.

Friction noises occurring between the side window frames and the weatherstrips on the Convertible can also be easily eliminated by applying talcum powder or glycerine to them.

**Airing the interior.** If the car is left in your garage for a long period, it must be aired regularly. Permit air to circulate freely by opening the doors and lowering the windows to prevent the formation of mould and damp stains.



# Lubrication Service


To lubricate correctly means to lubricate carefully and at the prescribed intervals. Therefore, do not omit to have the lubrication service carried out at regular intervals. A lubrication chart can be found on page 73 indicating the correct mileages at which to lubricate.

The Service Booklet makes it possible for you to have your car lubricated at our authorized workshops by skilled personnel, at the lowest cost and in a minimum of time. You really cannot afford to miss this opportunity.

## Engine

Regular oil changes are necessary even if the very best branded oils are used. Dirty oil in your engine simply means increased wear and a shorter service life.

Draining engine oil

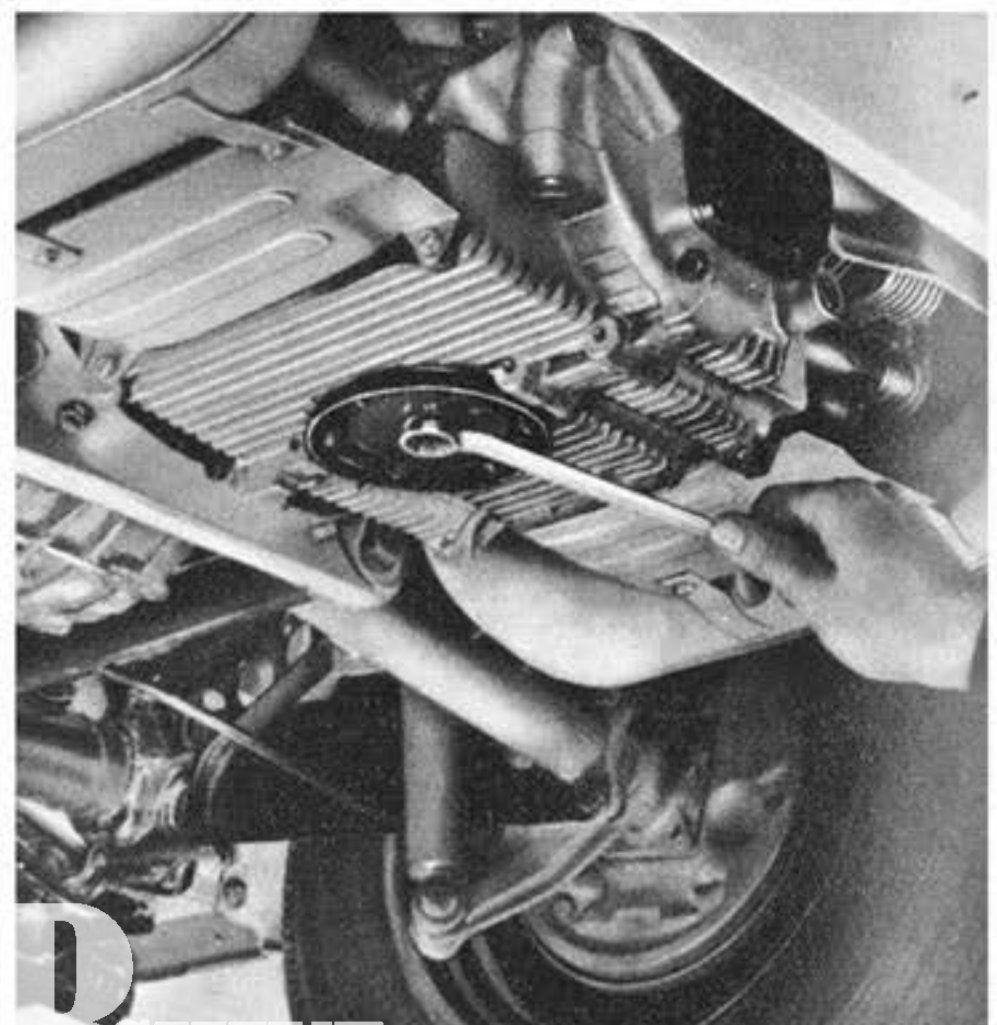


The oil is drained, when warm, by removing the plug in the oil strainer cover plate. Flushing of the engine is unnecessary. However, the oil strainer must be removed and cleaned at every oil change. The two gaskets and the washers for the cap nuts must be renewed each time. The engine is refilled with 2.5 liters of HD oil (5.3 US pints/4.4 Imp. pints).

It is superfluous and uneconomical under normal operating conditions to change the oil at shorter intervals than every 5,000 km. (3,000 miles). We recommend oil changes at more frequent periods, i. e. at intervals of 2,500 km. (1,500 miles) only if you do not drive much in winter and in doing so mostly cover short distances in city traffic.

Cleaning oil strainer



Putting engine oil in

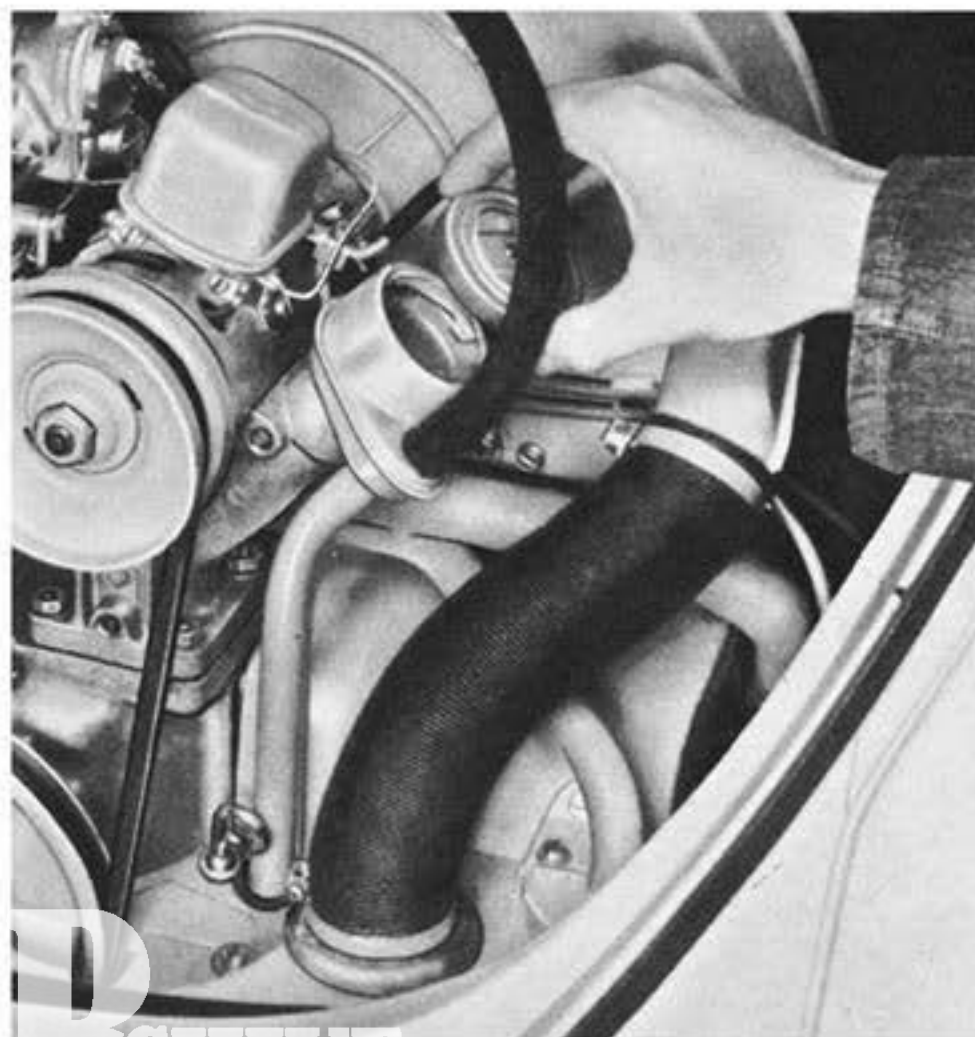



## Types of lubricant

HD oils are prescribed for the engine lubrication. HD oil is an oil with proved oxidation stability, bearing corrosion preventive properties and detergent-dispersant characteristics which tend to hold in suspension foreign contaminants which would normally deposit on engine parts. These foreign contaminants will drain out with the oil at the periodical oil changes. The detergent properties of HD oil will make the fresh oil darker after a short time of operation. This is quite natural and there is no reason whatsoever to change the oil earlier than called for in the Lubrication Chart.

## Some more information on oils

The quality of branded oils is such that the choice is left to your discretion. In cases of doubt your authorized VW dealer will be glad to assist you. We recommend that you select "your" oil after the first 500 km. (300 miles) and stick to it at all future oil changes.

Viscosity of the lubricant is an indication of its resistance to flow at a given temperature. The SAE numbers, such as SAE 30, SAE 10 W etc. classify lubricants in terms of viscosity. The outer temperature is decisive when selecting the viscosity.

**SAE 30** is suitable for tropical climates with temperatures above 30°C (86°F).

**SAE 20 W/20** is suitable for temperatures between 30°C and 0°C.

**SAE 10 W** should always be used in the cold season if the temperature is expected to fall below 0°C (32°F) by the next oil change.

**SAE 5 W** is only for use in countries with arctic climates and temperatures below -25°C (-13°F) in place of SAE 10.

**SAE 10 W-30** is a multigrade oil and can be used in summer and winter.

Temporary deviations in the temperatures for the various viscosity grades are of no importance. It is permissible to mix oils of different viscosity grades when it is necessary to add oil between the oil changes, and the outside temperature no longer corresponds to the viscosity grade of the oil in the engine. It is, however, essential that the same brand of oil be used.

In some countries the API classification is applied (API = American Petroleum Institute). According to this classification, the HD oils suitable for the VW engine are referred to as "For Service MS".


No additives of any kind should be mixed with HD oils.

## Transmission

The transmission and differential gears are combined in the transmission case and both lubricated with hypoid oil. The oil should be up to the edge of the filler hole. At oil changes – at 500 km. (300 miles), 5000 km. (3000 miles) and then again at 50,000 km. (30,000 miles) – the old oil is drained by removing both the magnetic drain plugs while the oil is at operating temperature. The magnetic drain plugs should be thoroughly cleaned. The transmission is filled with 2.5 litres (5.3 U.S. pints/ 4.4 Imp. pints) of branded hypoid oil.

Additives should not be used with hypoid oils.

Draining transmission oil

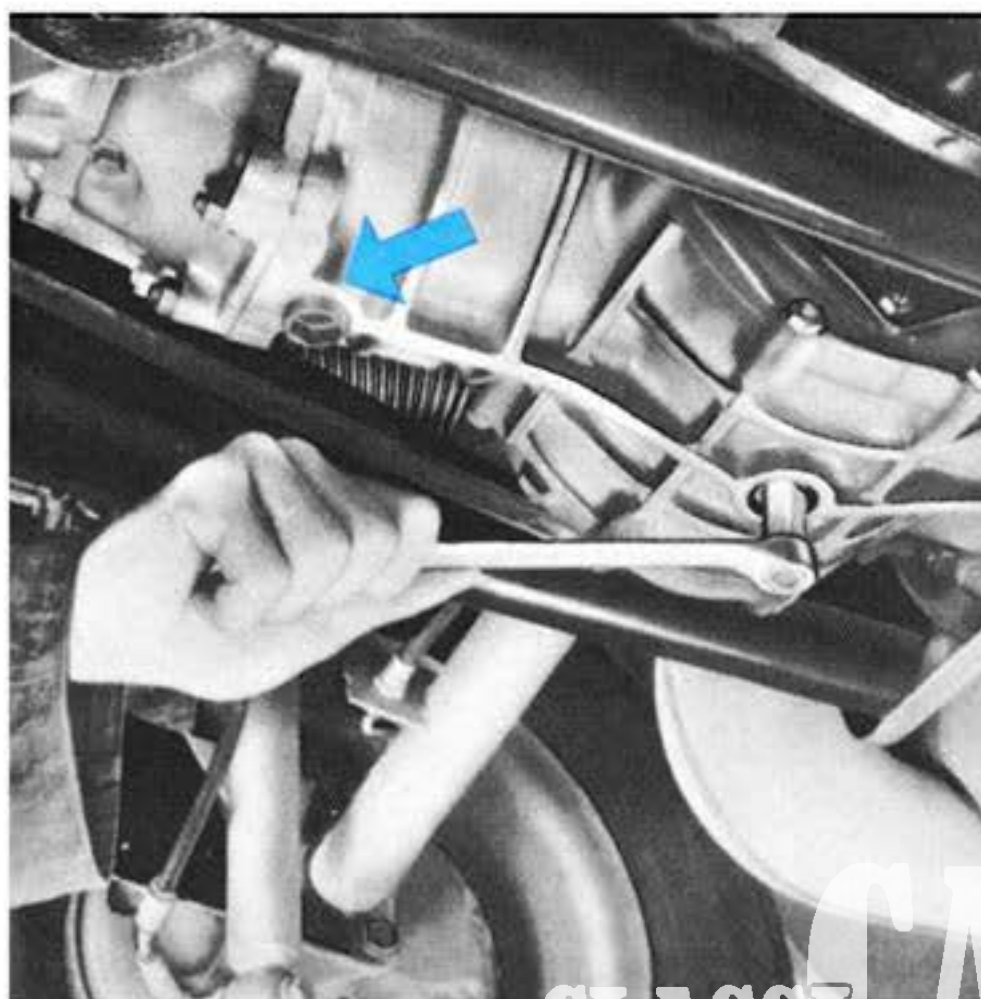


Putting transmission oil in





## Chassis

The front axle bearing points can only be lubricated properly when the axle is free of load, that is, with the vehicle lifted. There are eight points on the front axle which must be lubricated every 2500 km. (1500 miles). If the vehicle is frequently driven on bad roads it is advisable to grease the king pins again approximately every 1250 km. (750 miles).

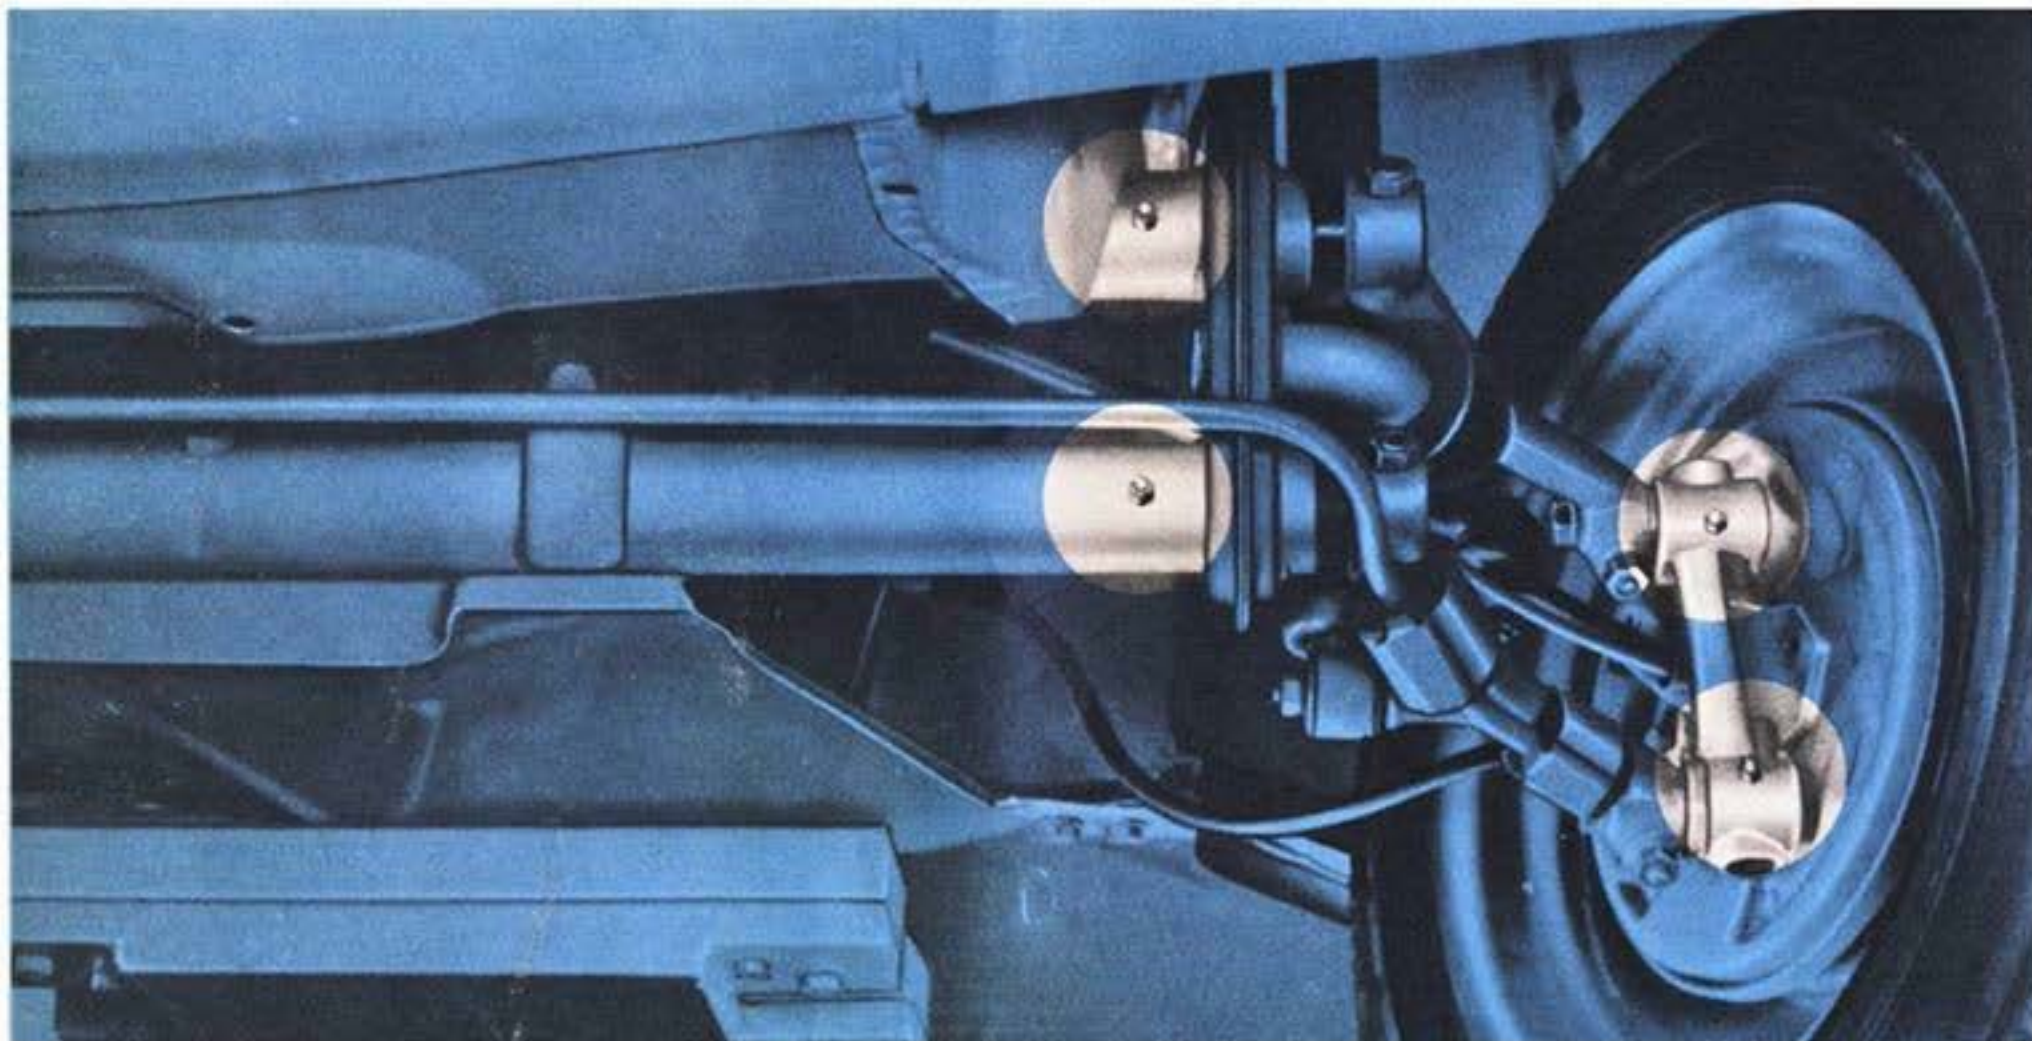

Before greasing, the nipples should be wiped clean with a rag to prevent dirt from getting into the bearings. Grease must not be allowed to get on to tires and brake hoses. Even small quantities should be wiped off immediately.

Please check the dust seals on the maintenance-free tie rod ends for damage and security at every lubrication service. Damaged dust seals should be replaced as soon as possible.

Every year, preferably at the beginning of the cold season, the clutch, accelerator and heating control cables and the clutch cable adjusting nut should be checked and cleaned and greased if necessary.

## The front wheel bearings

are packed with grease at the factory. The caps on the front wheels hubs must be free from grease.

Every 50,000 km. (30,000 miles) the bearings should be carefully cleaned and packed with the grease prescribed under "Lubricants".


The brake drums must be removed for this purpose. Finally the front wheel bearings must be adjusted. In order to avoid damage to the bearings, this operation should, if possible, be carried out in a VW workshop only.



## Doors and hoods

The door hinges should be cleaned carefully and then lubricated thoroughly at every lubrication service, or better still, every week.

The door lock is lubricated with oil through a

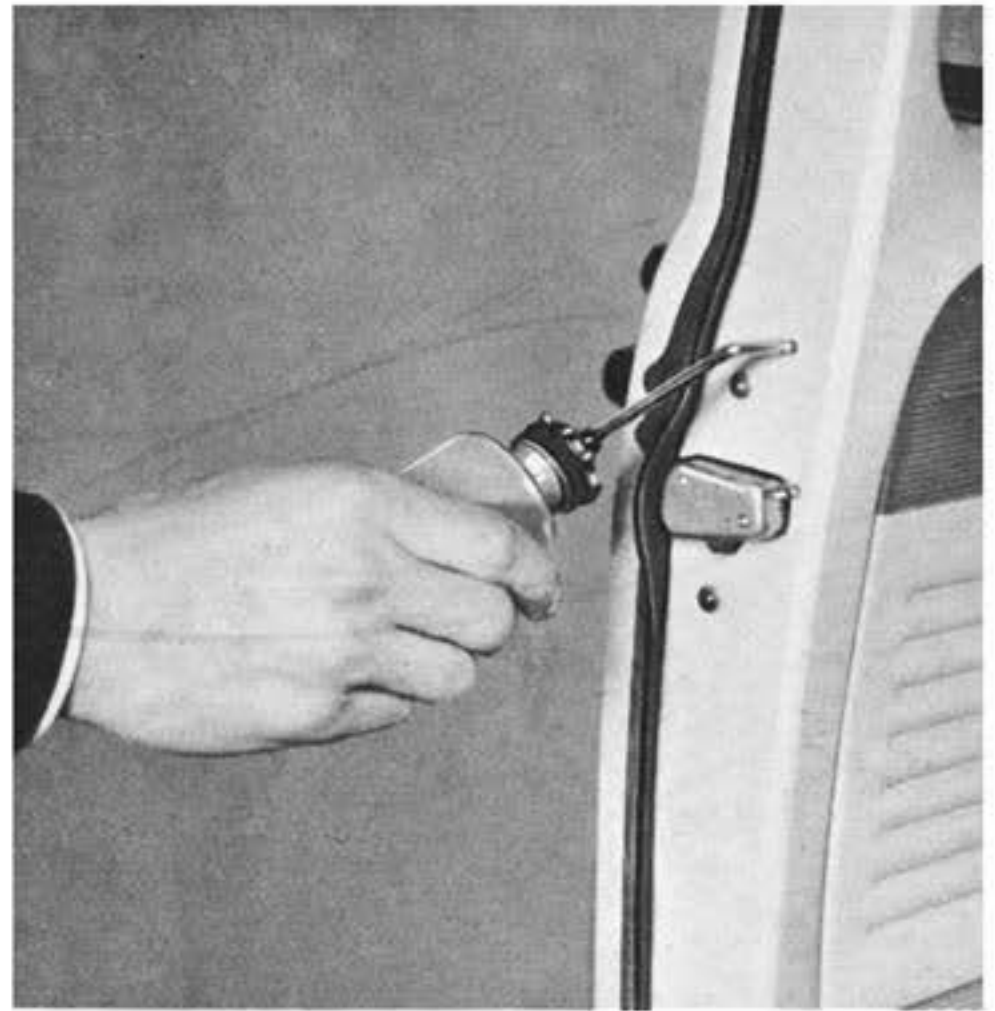

hole on the lock side of the door. The lock cylinder should be treated with graphite when necessary. It is usual sufficient to dip the key in graphite and then turn it to and fro a few times in the lock.

The sliding surfaces of the striker plates should be greased lightly.

The hood hinges are to be oiled and the hood locks greased lightly.





### Front seats

If the front seats become hard to push, the seat runners should be greased lightly from above and below. Before greasing, the runners must be cleaned with a cloth. The seats can be taken out of the runners by pushing them right forward. When installing the seat, hook the spring in again.



### Convertible Top


The pivots of the top linkage are lubricated with a few drops of oil when necessary, after removing dirt and dust from the lubrication points. Great care must be taken when doing this because oil which gets on to the top material not only causes spots, it also tends to destroy the waterproof rubber layer in the material.

The Volkswagen Service Organization has made available for you an extensive network of authorized VW workshops staffed with well trained and experienced personnel, and equipped with all the special tools required to service your car. If ever you should need service when touring and away from home, look for the well-known VW Service Sign. Here you will receive prompt and expert assistance.

In case you cannot get to an authorized VW workshop quickly and have to carry out small repairs yourself, we have listed here the most important tasks which are normally dealt with at the maintenance checks. However, it is important that repair jobs which are beyond your capacity should be performed by the nearest VW workshop. Your car is then in capable hands. This will save you time, inconvenience, and money.

## Maintenance Service



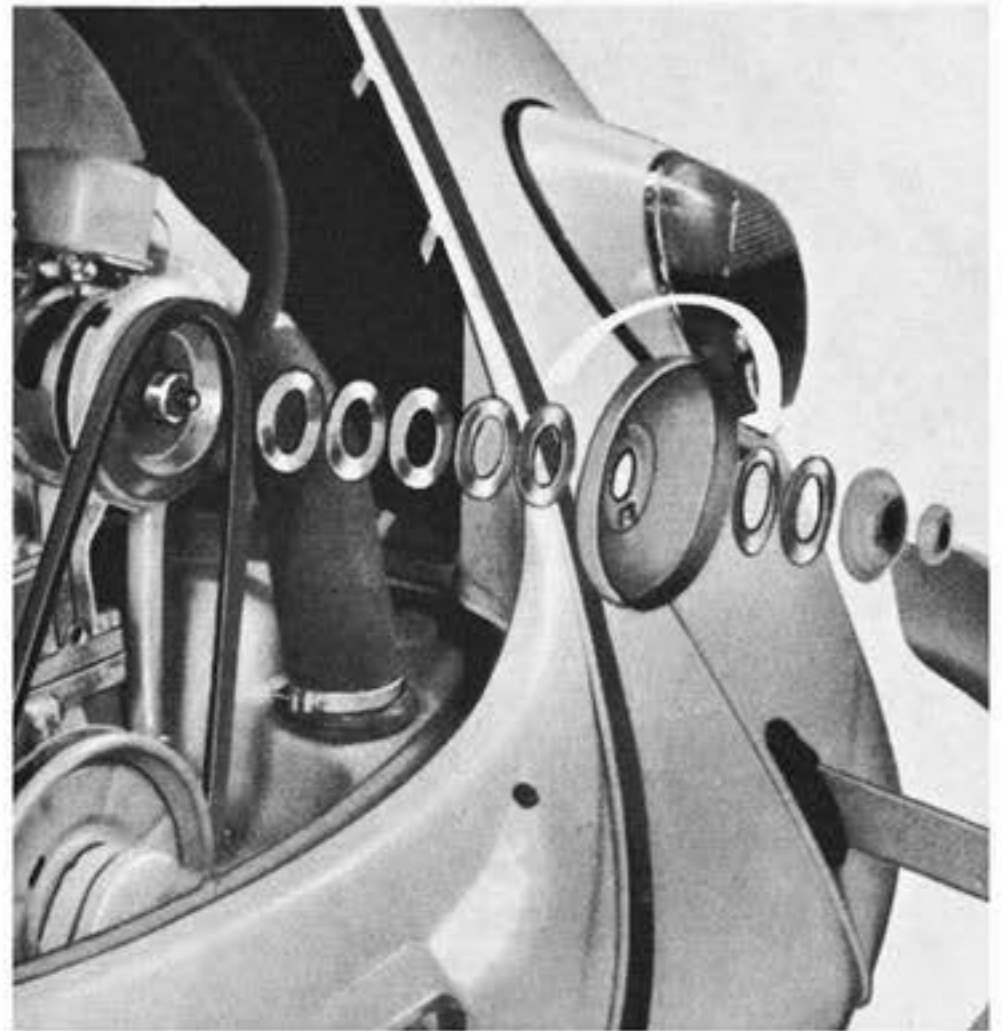

## Checking the V-belt

The belt which drives the generator and the fan should be checked at regular intervals for tension and wear. When pressed with the thumb it should yield approximately 1.5 cm. (.6") and should not show signs of excessive wear.

To adjust the belt, remove the rear half of the pulley on the generator. When loosening and tightening the nut, insert a screwdriver in the slot in the front half of the pulley and support it against the upper housing screw in the generator. To replace the belt, the cover plate for the crankshaft pulley must also be taken off after removing the securing screws.

The belt is tensioned by increasing or decreasing the number of washers between the pulley halves. Taking washers out increases the tension and putting them in decreases it.

New belts stretch slightly at first and must be checked after 500 kms. (300 miles) and the tension corrected. The tension does not change any more after this so it is not necessary to re-adjust the belt again. To have the belt too tight is just as bad as having it too loose.

Even though the belt normally has a long service life, it is advisable to always carry a spare.




## Checking air cleaner

The oil bath air cleaner should be checked every 5000 km. (3000 miles).

All the dust present in the air drawn in by the engine is retained by the filter insert in the upper part of the air cleaner and washed out when the vehicle is in motion by the oil in the lower part of the cleaner. In time, this causes a layer of sludge to form at the bottom of the lower part. If the cleaner check reveals that there is only 4–5 mm. (.16–.2") of oil above the sludge layer, the lower part should be carefully cleaned and filled with fresh oil. The top part does not need cleaning. However, if the filter insert has become so dirty due to delayed cleaning or oil shortage that the air inlet holes on the underside are partly blocked, the encrusted dirt should be removed, preferably with a small piece of wood.

A dirty filter insert not only reduces the engine output, it can also cause premature wear in the engine. If the local conditions are such that the vehicle is frequently driven over very dusty roads it is advisable to clean the air cleaner more often.

The warm air control flap should be checked each time for freedom of movement. This flap regulates the flow of pre-heated air to the carburetor in conjunction with the speed of the engine.

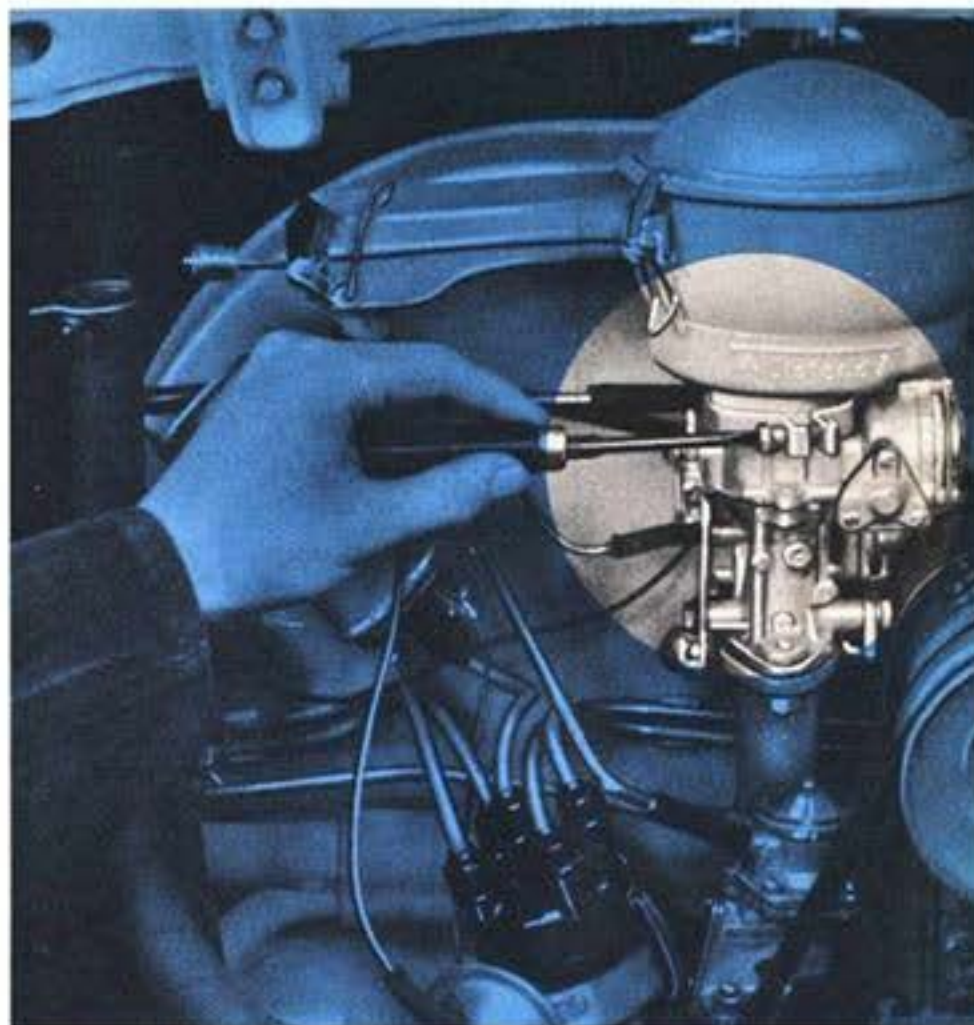

## Servicing air cleaner

Pull crankcase breather hose off air cleaner.

Pull pre-heater hose off air cleaner intake elbow.

Loosen air cleaner clamp screw.


Take air cleaner off carburetor and disassemble.

Never lay the upper part down with the filter element upwards.

Clean the lower part thoroughly and fill to the mark with fresh SAE 20 engine oil.

When installing the air cleaner, ensure that the red line on the clamp is in line with the left rib on the upper part of the carburetor.



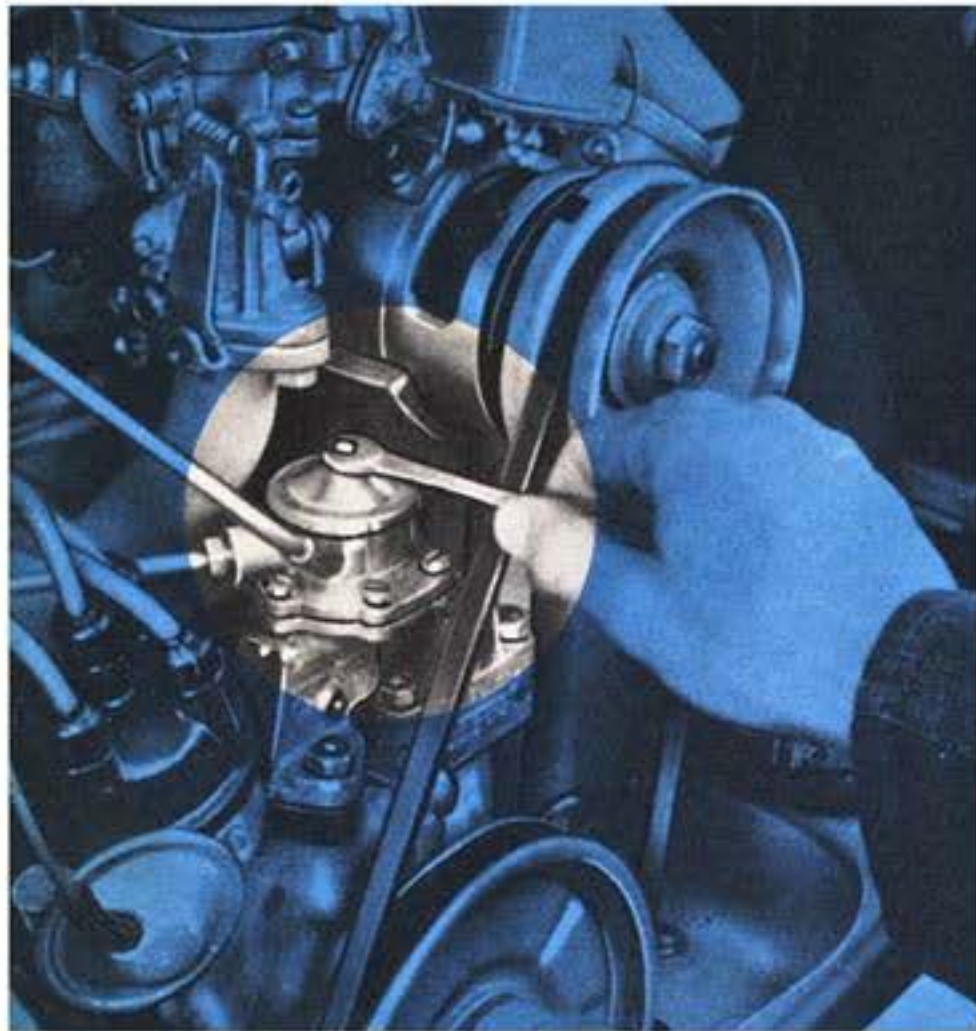

## **Cleaning the fuel pump filter**

The fuel pump filter prevents foreign matter and water from entering the carburetor. It should be removed and cleaned at the prescribed intervals. Install clip on fuel hose between frame fork and engine compartment.

Remove retaining screw and take off cover.

Take out filter and wash it in benzine.

When installing the filter do not omit the gasket for the cover.

## **Ignition timing**

Particular attention must be paid to correct ignition timing. In many cases, poor performance, high fuel consumption and even damage to the engine can be the result of incorrect ignition setting. The ignition must not be advanced arbitrarily.

Before setting the ignition timing the breaker contact point gap must be checked. With the breaker arm fully lifted the clearance should be 0.4 mm. (.016"). The initial spark advance must be set to 10° before top dead centre.

The ignition timing must only be set with the engine cold or when it is slightly warm.

## **Cleaning contact points**

The contact points must be smooth and make even contact with each other. Dirty contacts should be cleaned and, if pitted, smoothed with a contact file. Whilst doing this, the contact points are pressed lightly together. Afterwards the ignition distributor should be blown out carefully with air. If the points are badly burnt they must be replaced.

## Lubricating ignition distributor

The breaker arm fiber block in the ignition distributor should always be lightly greased with lithium grease. Every 5000 km. (3000 miles) check whether this location must be cleaned and provided with new grease. Only a very small amount of grease should be used and none of it must come in contact with the breaker points as otherwise the ignition will be affected.

## Adjusting contact points

Remove distributor cap and rotor.


Turn the engine by means of the generator until the contact arm rests on the highest point of the cam lobe.

Loosen the breaker point locking screw.

Insert a screwdriver between the two lugs on the contact plate and the slot in the point carrier and adjust the gap to 0.4 mm. (.016").


Tighten locking screw and install rotor.

After the contact points have been adjusted, the ignition timing must be reset.

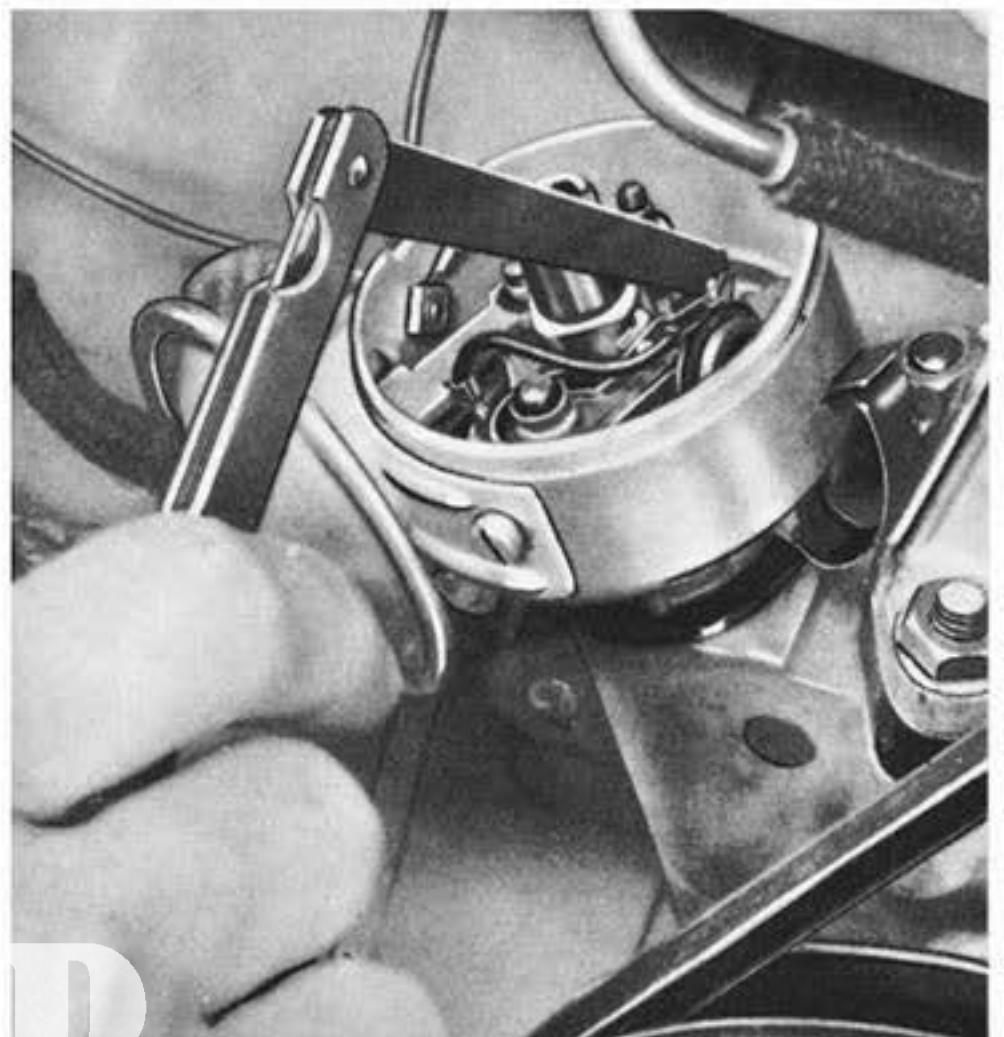



## Setting ignition timing

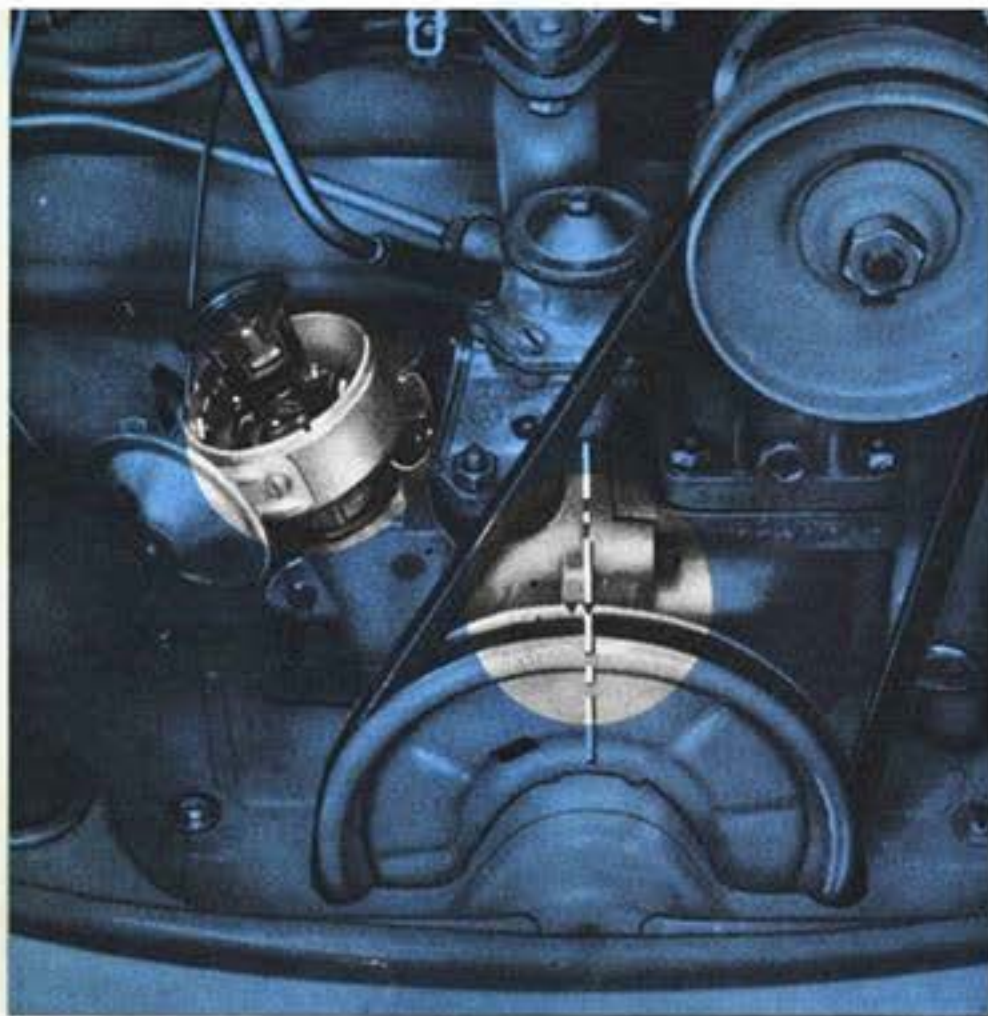

Turn the engine clockwise until the right-hand mark on the crankshaft pulley lines up with the crankcase joint and the distributor rotor arm is in line with the number 1 cylinder mark on rim of distributor.

Loosen clamp screw on distributor retainer.

Connect a 6 Volt test lamp to terminal 1 of the ignition coil and to ground.

Switch on ignition.



Rotate the distributor clockwise until the contact points are closed and then slowly anti-clockwise until the contact points just start to open and the test lamp comes on.

Tighten the clamping screw of distributor retainer.

Install distributor cap.

The ignition is correctly set if, on cranking the engine slowly clockwise, the test lamp comes on when the right-hand mark on the crankshaft pulley is in line with the crankcase joint. Before-hand, the engine should be turned back anti-clockwise approximately a quarter of a revolution to take up the play in the distributor drive.



## Checking the spark plugs



The appearance of the electrodes and insulation gives valuable information on the adjustment and condition of the engine:

medium grey – correct carburetor adjustment and proper performance of spark plug

black – mixture too rich

light grey – mixture too lean

oiled up – failure of spark plug or piston ring blow-by


The spark plugs have an average service life of approximately 15,000 km. (10,000 miles) and should, therefore, be replaced in time.

To prevent any breakdowns in the ignition system, the spark plugs should be removed every 5,000 km. (3,000 miles) and checked. Deposits can easily be removed with a brush and a chip of wood. Moreover, the insulator should be clean and dry on the outside in order to avoid short circuit and tracking. If necessary, adjust the spark plug gap which should be 0.7 mm. (.028").

Do not omit the gasket when screwing in the spark plug. Do not overtighten the spark plugs.




## Checking the compression

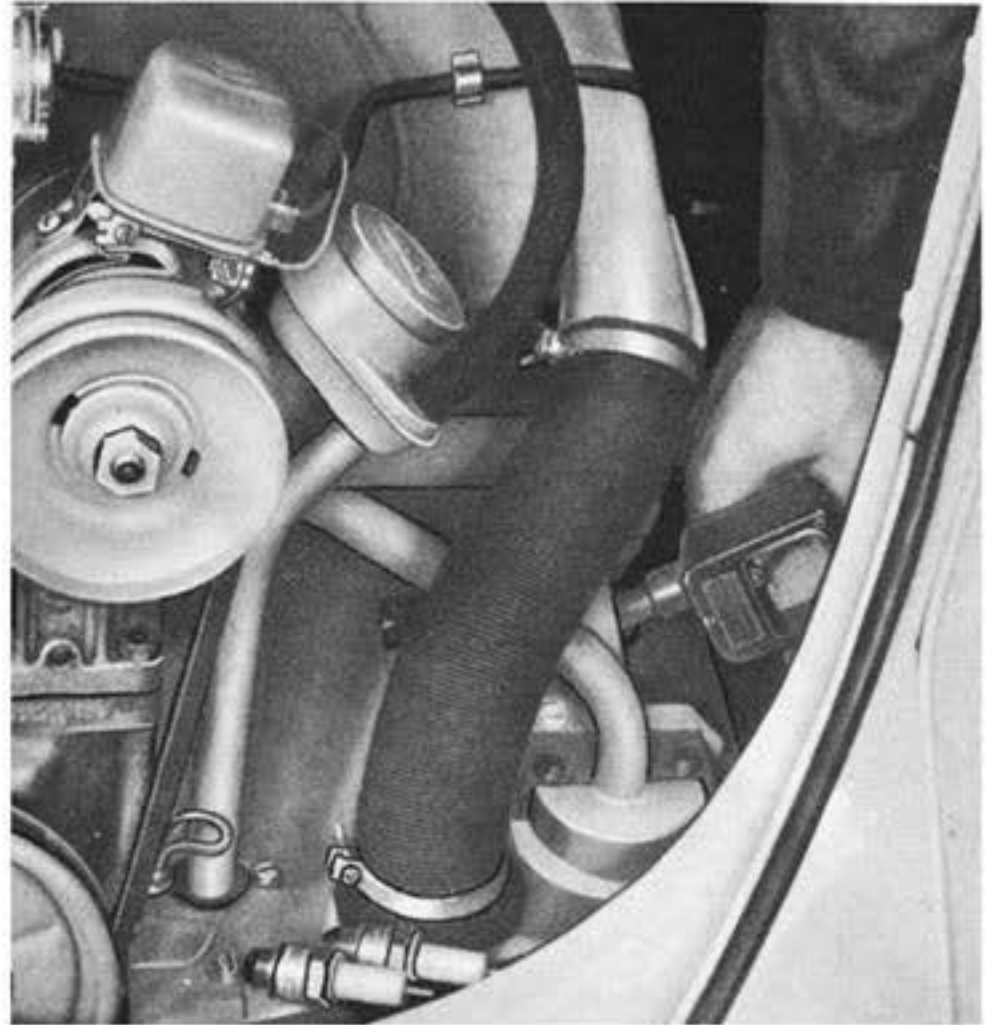

The compression is checked by inserting a suitable gauge into the spark plug hole when the engine is warm. All the spark plugs should be removed. The accelerator pedal is then depressed fully and the engine turned over with the starter until the gauge reading shows no further change.

The pressure should be at least 6 kg./cm<sup>2</sup>. (85 psi.). It is important that only a good accurate instrument is used and a good seal obtained between instrument and spark plug seat.

## Adjusting the valves

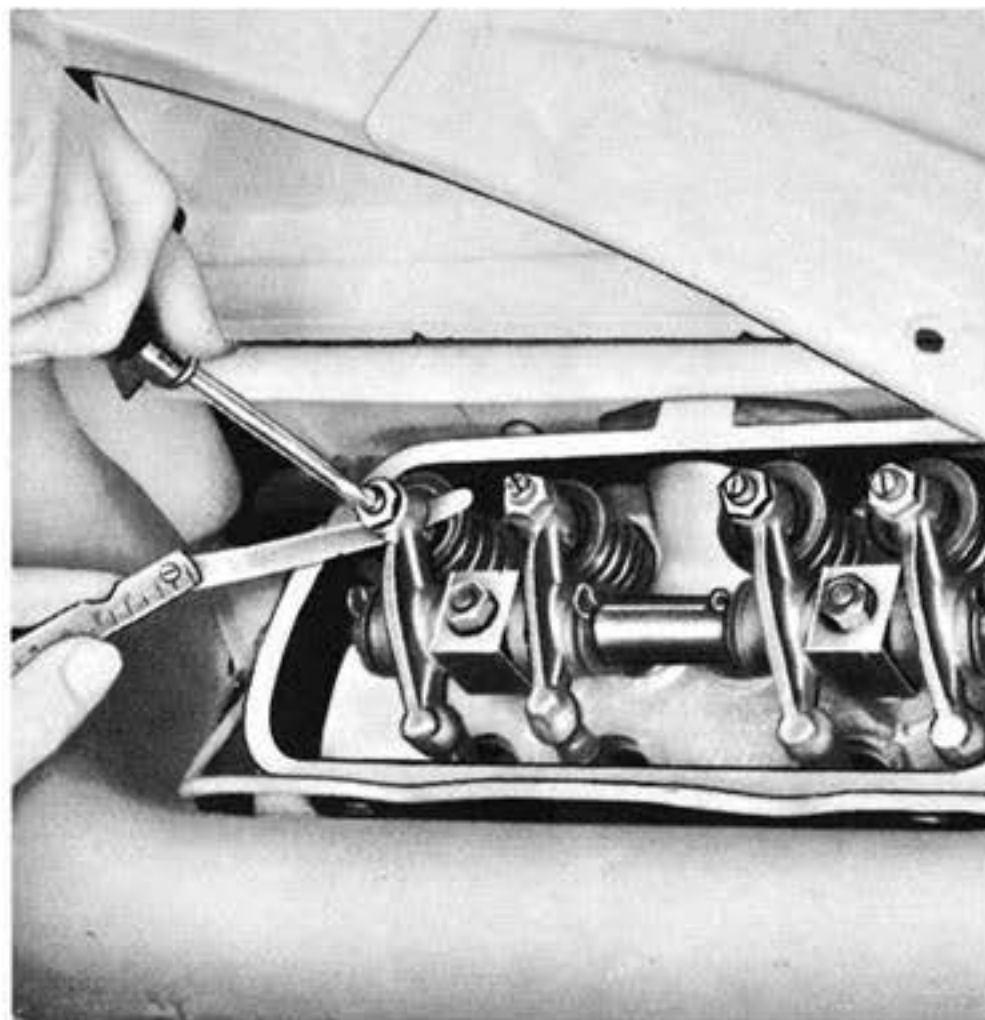

The valves must only be adjusted when the engine is cold or slightly warm. The valve clearance is 0.20 mm. (.008") for the intake and 0.30 mm. (.012") for the exhaust valves.

When adjusting, both valves must be closed i. e. the piston of the corresponding cylinder must be at T.D.C. on the compression stroke. The arrangement of the cylinders can be seen by the numbers 1 to 4 on the engine cover plates. Valve adjustment is carried out in the following sequence: cylinders 1, 2, 3, 4.

Remove distributor cap.

Turn the engine until the rotor arm points to the No. 1 cylinder mark on the rim of the distributor.

Remove cylinder head cover.

Loosen the adjusting screw lock nuts for the valves of No. 1 cylinder.

Adjust valve clearance with a feeler gauge.

Hold the adjusting screws and tighten the lock nuts.

To adjust the valves for cylinders No. 2, 3 and 4, turn the engine further anti-clockwise until the rotor arm is 90° offset each time.



## Adjusting the carburetor

Each carburetor is checked at the factory and adjusted to the engine. Special knowledge and experience is required for checking and adjusting the carburetor with automatic choke and for carrying out repairs on the acceleration pump. For this reason, these operations should only be carried out by a VW workshop. Do not alter the adjustment by replacing the jets by other than the prescribed sizes. This would be detrimental under normal operating conditions and is not permissible.

Only the idling speed may require occasional readjustment. The adjustment must be carried out when the engine is at operating temperature. Check that the idling adjusting screw is no longer resting on the fact idle cam of the automatic choke.

Turn the idling adjusting screw until an idling speed of about 550 rpm. has been attained (1).


Turn the volumn control screw clockwise until the engine speed begins to drop. Then give it a  $\frac{1}{4}$  to  $\frac{1}{3}$  of a turn in anti-clockwise direction (2).

Re-adjust the idling adjusting screw (1).


The adjustment is correct if the engine does not stall when the throttle is either suddenly opened or shut.

Poor idling may also be the result of damaged gaskets, loose intake manifold flanges, faulty ignition or leaky valves.

1

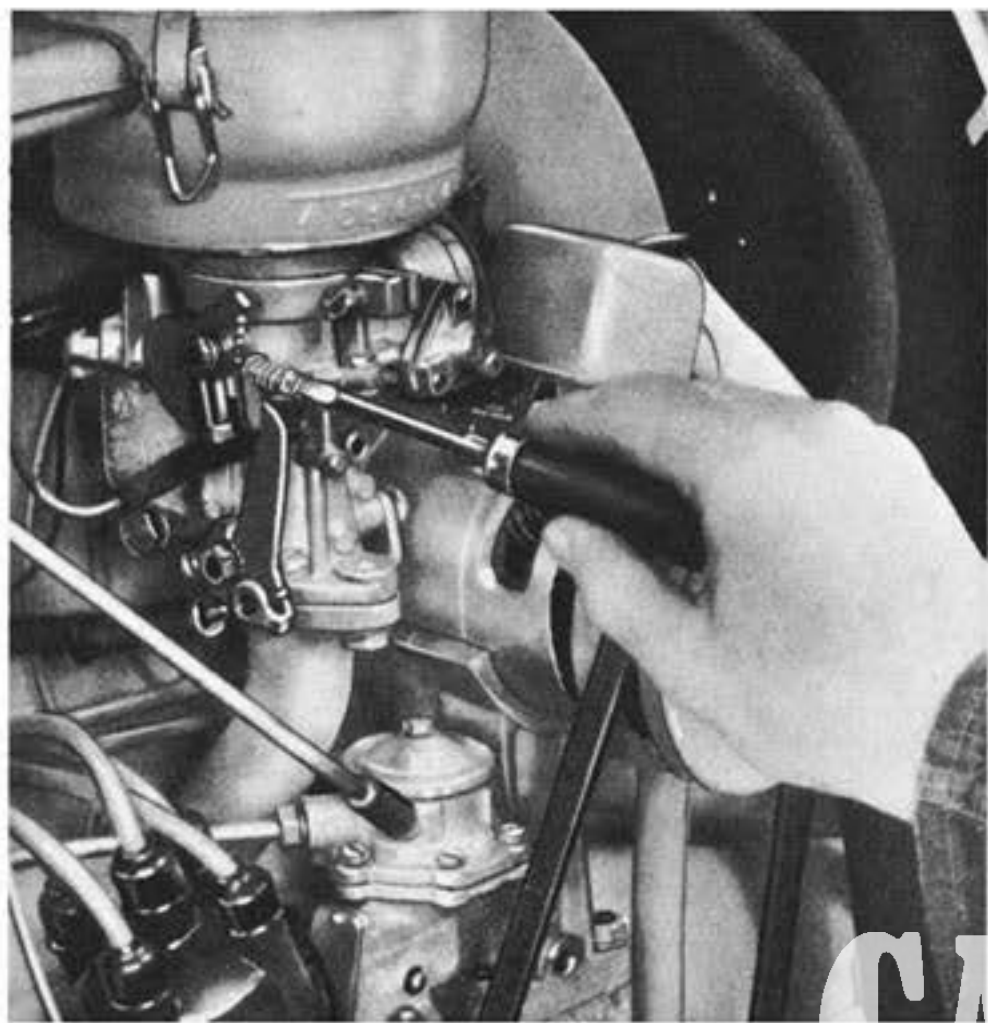

2

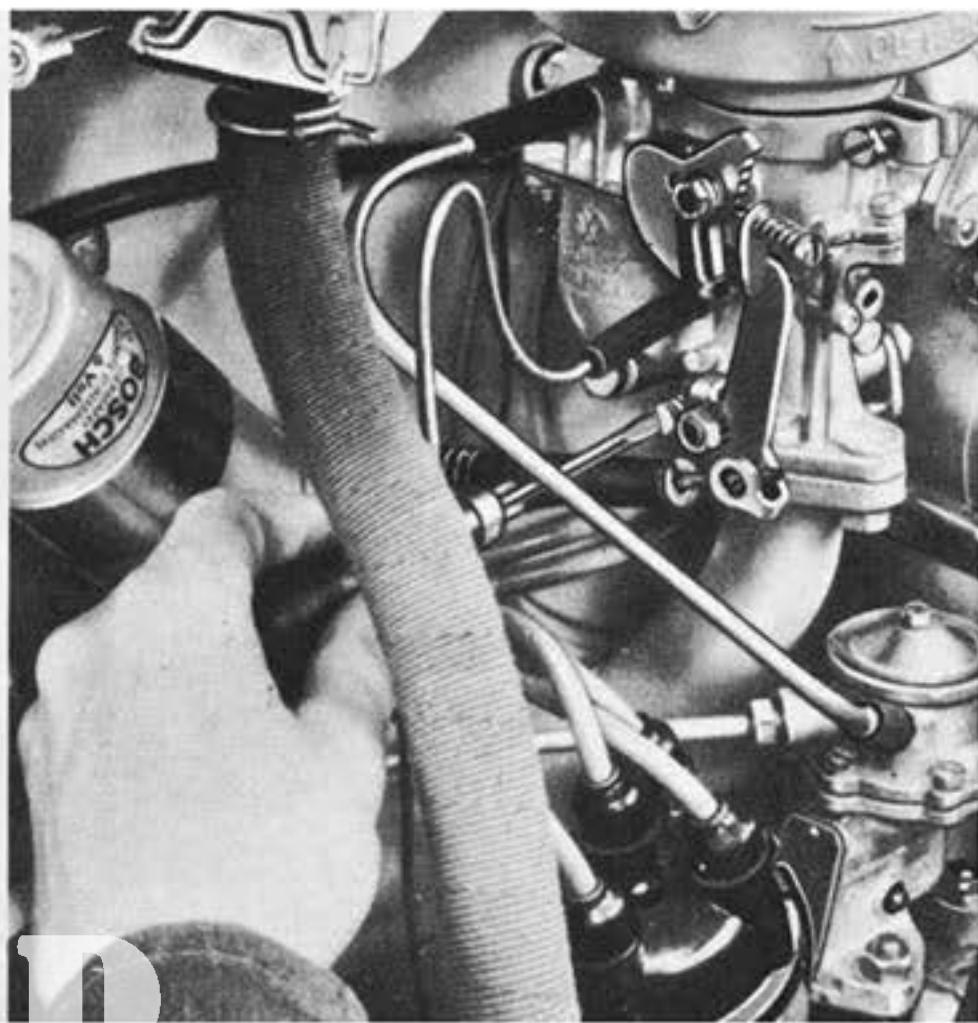



## Checking clutch pedal free-play

Easy gear shifting and complete transmission of engine performance to gears and wheels can only be guaranteed if the clutch is adjusted as specified.

Measured at the clutch pedal, this free-play should be between 10 and 20 mm./4 and .8 in. (a). The clearance is adjusted by an adjusting nut on the cable end.

Release lock nut on the threaded cable end. Adjust free-play by turning the nut.

Depress clutch pedal several times and recheck pedal free-play.

Hold adjusting nut and tighten lock nut.

Lubricate bearing point between operating lever and adjusting nut with universal grease.





## Adjusting front wheel bearings

The adjustment of the front wheel bearings should, if possible, be carried out in a VW workshop only. Incorrect adjustment of the bearings can cause severe damage in a short time.

Raise front of car.

Bend up lock plates and loosen nuts. The nuts of the left front wheel have left-hand threads.

Remove outer nut and insert a new lock plate.

Tighten inner nut until the thrust washer between bearing and nut can just be moved with a screwdriver when the lock nut is fully tightened.

Bend up the lock plate alternately.



## Checking and adjusting torsion arm link pins


The torsion arm link pins in the front suspension have hardly any detectable play when adjusted properly. In the course of time, the play increases due to natural wear and it must, therefore, be checked at the specified intervals of 5,000 km. (3,000 miles).

To check the play, the vehicle is lifted and the wheels moved to and fro at right angles to the direction of motion. When axial play is noticeable between the torsion arm link and the torsion arms, the link pins must be adjusted.

First grease torsion arm link pins thoroughly.

Loosen pinch bolts at torsion arm eyes.

Fully tighten link pins first, then back off about  $\frac{1}{8}$  of a turn.

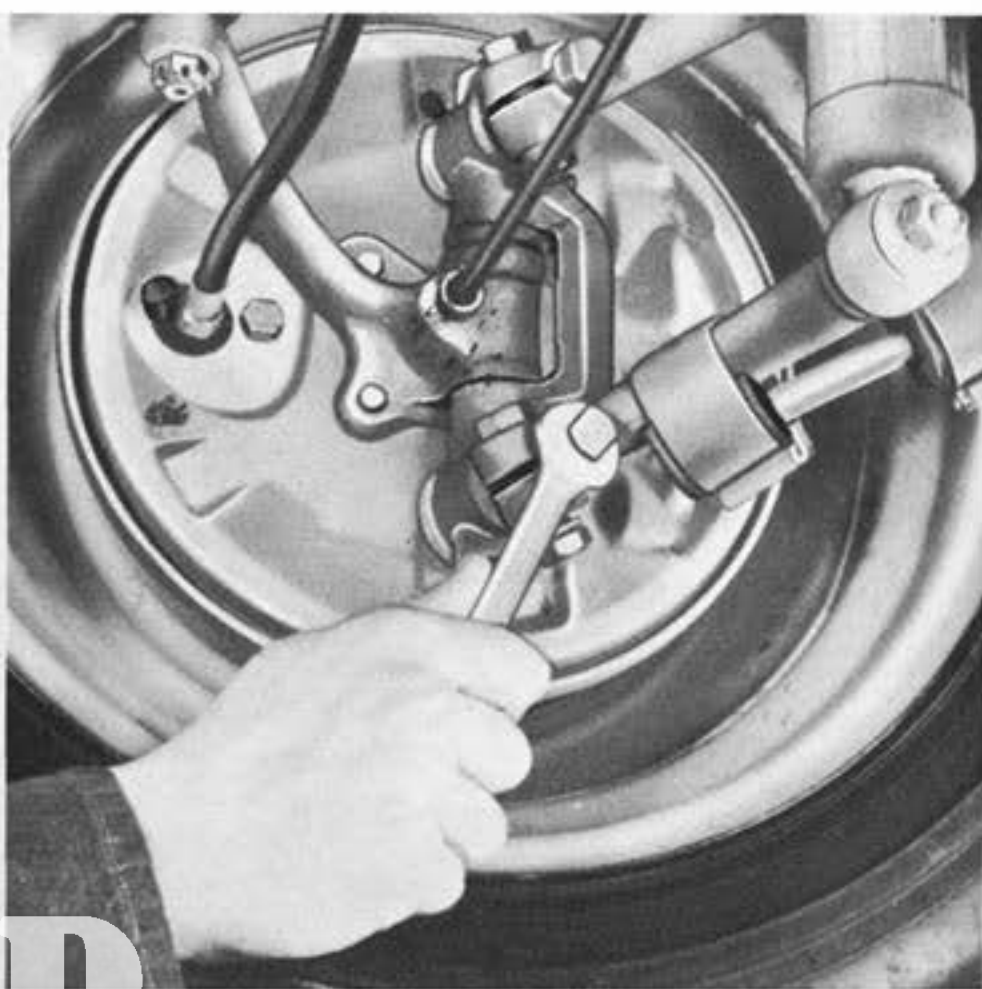

Tighten the link pins until the resistance of the shoulder making contact can be felt.

Tighten pinch bolts.

If the range of adjustment is insufficient, the shims are worn and should be replaced in a VW workshop.

The toe-in should be checked and corrected if necessary each time the torsion arm link pins have been adjusted.

## Toe-in adjustment

When the car is unladen the toe-in should be 2–4 mm. (.08"–.16"). The adjustment can only be carried out by a workshop which is equipped with a track gauge. Deviations from these values will have a detrimental effect on roadholding and tire wear.

## Checking the steering

The steering should not have an excessive amount of play in the straight ahead position. Moreover, the wheels must self-center after cornering.

To check the steering move the steering wheel lightly to and fro until resistance is felt in both directions. The steering gear is correctly adjusted if there is not more than 25 mm. (1") play when measured at the steering wheel circumference.

Adjustments to the steering require special experience as well as special tools, and these operations should be carried out in a VW workshop only.

## Checking and adjusting brakes

As a result of natural wear, the clearance between brake shoes and drum will increase during the

course of time. If the foot brake pedal travel becomes excessive, the brakes must be relined or re-adjusted.

The brake lining wear must be checked through the inspection hole in the brake drums every 5,000 km. (3,000 miles). The brake lining thickness must not be less than 2.5 mm. (.1"). Moreover, check the brake system for damage, leaks and corrosion. Damaged brake lines must be replaced immediately.

Spongy brake pedal travel indicates the presence of air in the system. Before bleeding the brakes, check the brake fluid level in the reservoir behind the spare wheel. The reservoir should be at least three quarters full. Only use Genuine VW Brake Fluid or Lockheed Brake Fluid when topping up.

Handle the brake fluid carefully as it will damage the paint work severely.





## Adjusting the foot brake

The brake shoes are adjusted individually on all four wheels. Before and after adjustment, completely depress the brake pedal several times to centralize the brake shoes in the drums. When adjusting the rear brakes, the hand brake must be released.

Remove wheel cap.

Jack up a wheel and turn it until the hole in the brake drum is in line with one of the two adjusting nuts.



Turn the adjusting nut with a screwdriver in the direction indicated by the arrow until a slight drag is noted when wheel is turned by hand.

Repeat procedure on the other adjusting nut. Note that the two nuts turn in opposite direction.

Back off the adjusting nuts 3 to 4 teeth until the wheel rotates freely.

Install wheel cap and make sure that it is correctly seated.

Repeat the above operations on the other wheels.

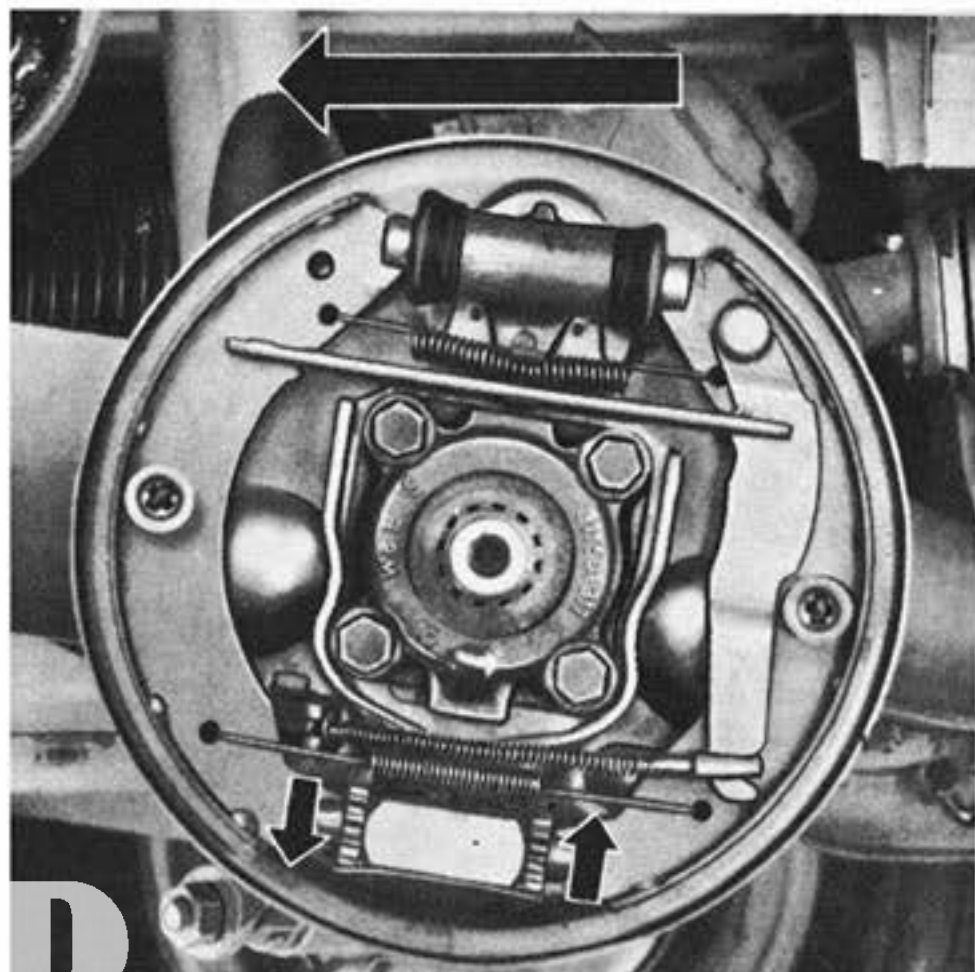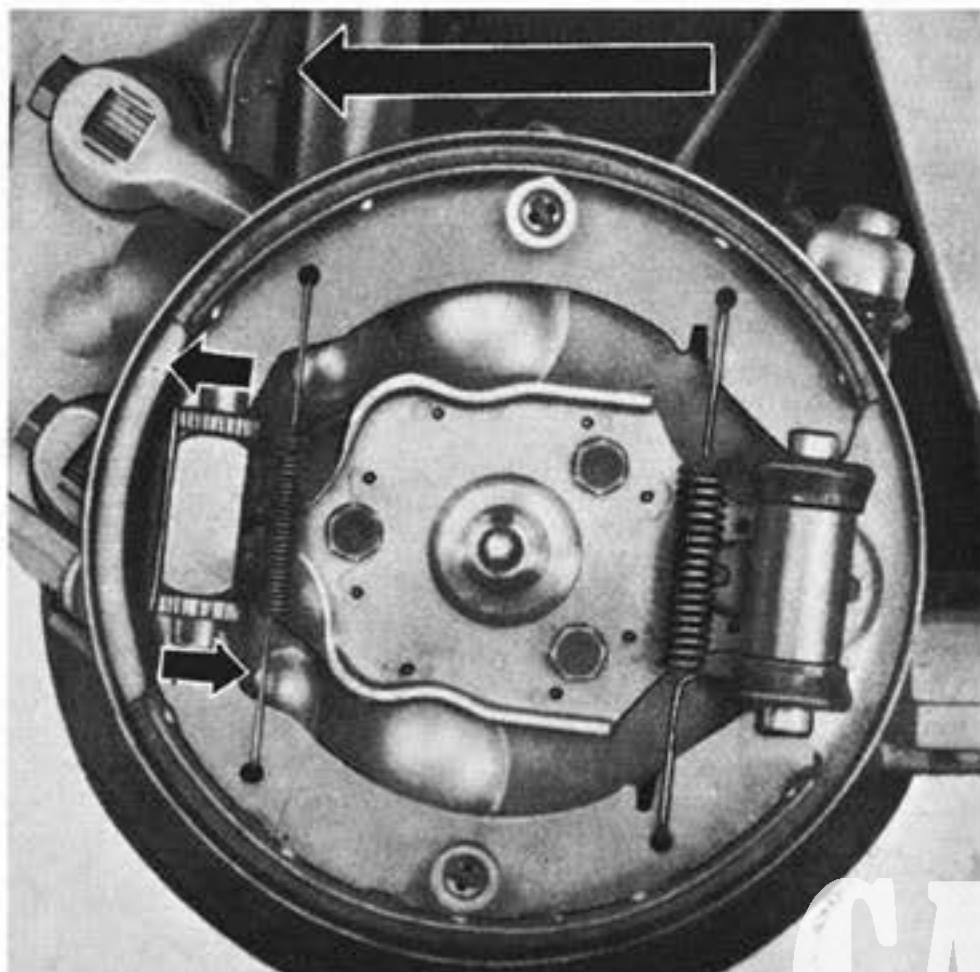



## Bleeding the brakes

When bleeding the brakes, always begin with the wheel which is farthest away from the master brake cylinder. The sequence for cars with left-hand drive is as follows: Right and left rear wheels, then the right front and finally the left front wheel.

Remove rubber cap of the bleeder valve and attach bleeder hose.

Submerge the free end of the hose in a glass container partially filled with brake fluid. The end of the drain hose should, if possible, be above the level of the bleeder valve.

Slacken the bleeder valve between  $\frac{1}{2}$  and 1 turn using a 7 mm. wrench.


Pump the brake pedal several times until the air bubbles cease to appear.

Keep the brake pedal in the fully depressed position until the bleeder valve is closed.

Remove the bleeder hose and replace rubber cap.

Repeat the above operations on the other wheels. Make sure that the brake fluid level in the reservoir is sufficient to ensure that air is not drawn in. After bleeding the complete system, check the brake fluid level and top up if necessary.



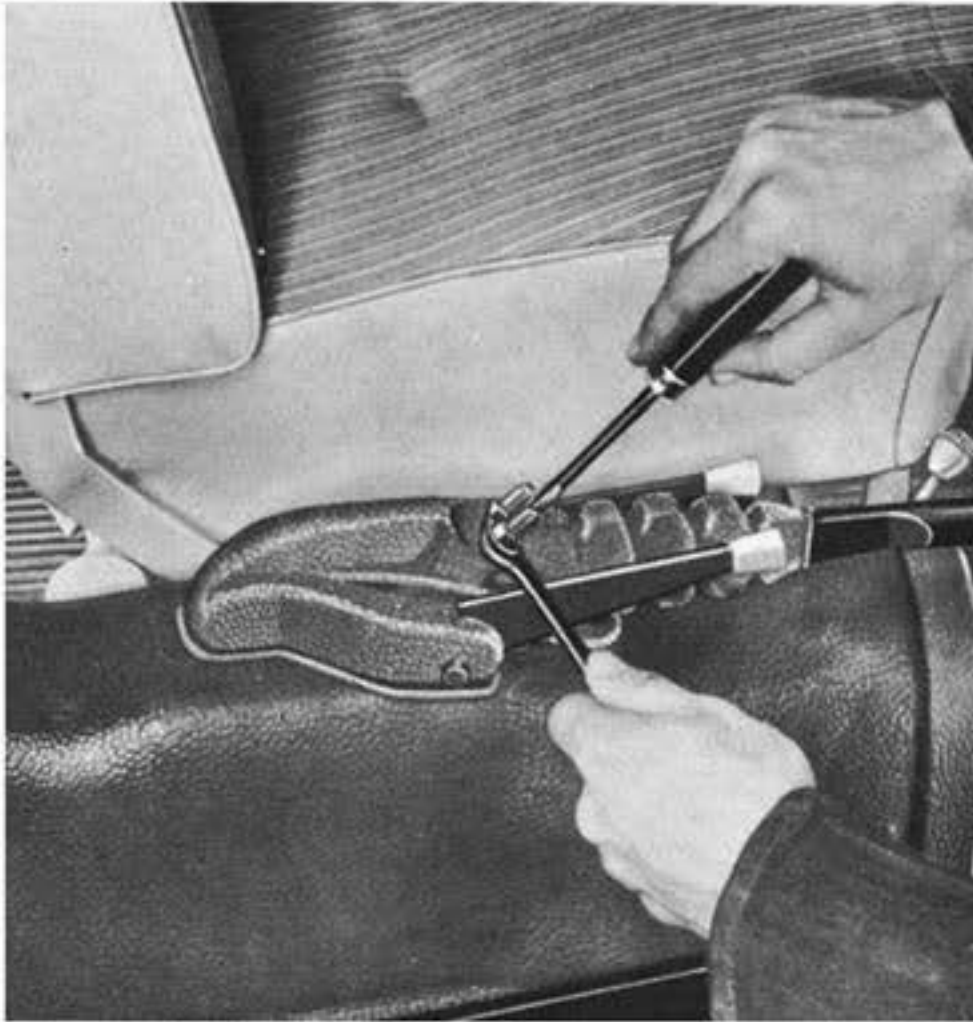

## **Adjusting hand brake**

The hand brake is adjusted at the hand brake lever. The adjusting nuts are accessible through a slot in the side of the cover.

Raise both rear wheels.

Back off lock nuts and tighten the adjusting nuts until the rear wheels are just free to turn when the hand brake is released.

Pull up the hand brake lever by two notches and make sure both the rear wheels have the same braking effect. At the fourth notch it should be impossible to turn the wheels by hand.

Lock the adjusting nuts again carefully.

## **Checking the battery**

Ready starting of the engine depends upon the condition of the battery. It should, therefore, be checked and maintained regularly. The battery cover can be removed by raising the rear seat and opening the battery snap fastener.

The acid level must always be slightly above the plates. The acid level has to be adjusted in accordance with the acid level mark. Depending on the type of battery, either the lower edge of the insert or the bar above the plates must just be covered. Losses by evaporation can be replenished by adding distilled water. Do not add acid unless some of the electrolyte has been spilled. The acid can boil over and cause damage. For this reason exercise care when topping up.



The battery should be checked with a cell tester. This is a voltmeter in parallel with a heavy resistance. The voltage of each cell should not fall below 1.6 Volts while the reading is being taken (10–15 seconds). Otherwise the cell is discharged or defective. The normal voltage is 2 Volts.

The battery poles should be cleaned with a clean cloth, or in the event of heavy corrosion with a stiff brush. The battery poles and cable terminals should be coated with grease. Make sure that the battery is correctly grounded.

The state of charge of the battery can be checked with a hydrometer. The specific gravity of the acid will increase with the charging of the battery. The gravity can be read from a scale.

Battery fully charged	1.285 = 32° Bé
Battery semi-charged	1.230 = 27° Bé
Battery discharged	1.142 = 18° Bé

When laying your vehicle up for a prolonged period, it is advisable to take the battery to a workshop for storage. A battery which is not in constant use will discharge itself in time and this can result in permanent damage to the plates if the battery is not checked about every 4 weeks and charged as necessary.



## Headlight adjustment

When adjusting the headlights, ensure that the tires are inflated to the correct pressure and the rear seat loaded with one person or a weight of 70 kg. (154 lbs.).

If a headlight aiming device is not available, proceed as follows:

### 1 - Headlights with asymmetrical low beams

Position the vehicle on a level surface 5 m. (16 ft. 5 ins.) away from a vertical wall.

Draw two crosses with setting lines on the wall to the measurements in sketch 1. The longitudinal center line of the vehicle must be aligned exactly with the centre between the two crosses and at right angles to the wall.

Aim the headlights individually by turning the two slotted screws in the head lamp rim with the beams dimmed. Cover up the second headlight.

The headlights are correctly aimed when the light-dark border line is horizontal on the adjusting line to the left of the cross and the angle on the light-dark border line is exactly on the cross.

### 2 - Sealed-Beam Headlights

Position the vehicle on a level surface 7.6 m. (25 ft.) away from a vertical wall.

Draw three setting lines on the wall to the measurements in sketch 2. The longitudinal center line of the vehicle must be aligned with the center between the two vertical lines and at right angles to the wall.


Aim the headlights individually by turning the two slotted screws in the head lamp rim with high beams switched on. Cover up the second headlight.

The headlights are correctly aimed when the oval-shaped bright zone is intersected exactly in the center by the two setting lines.

A - Horizontal adjustment



B - Vertical adjustment

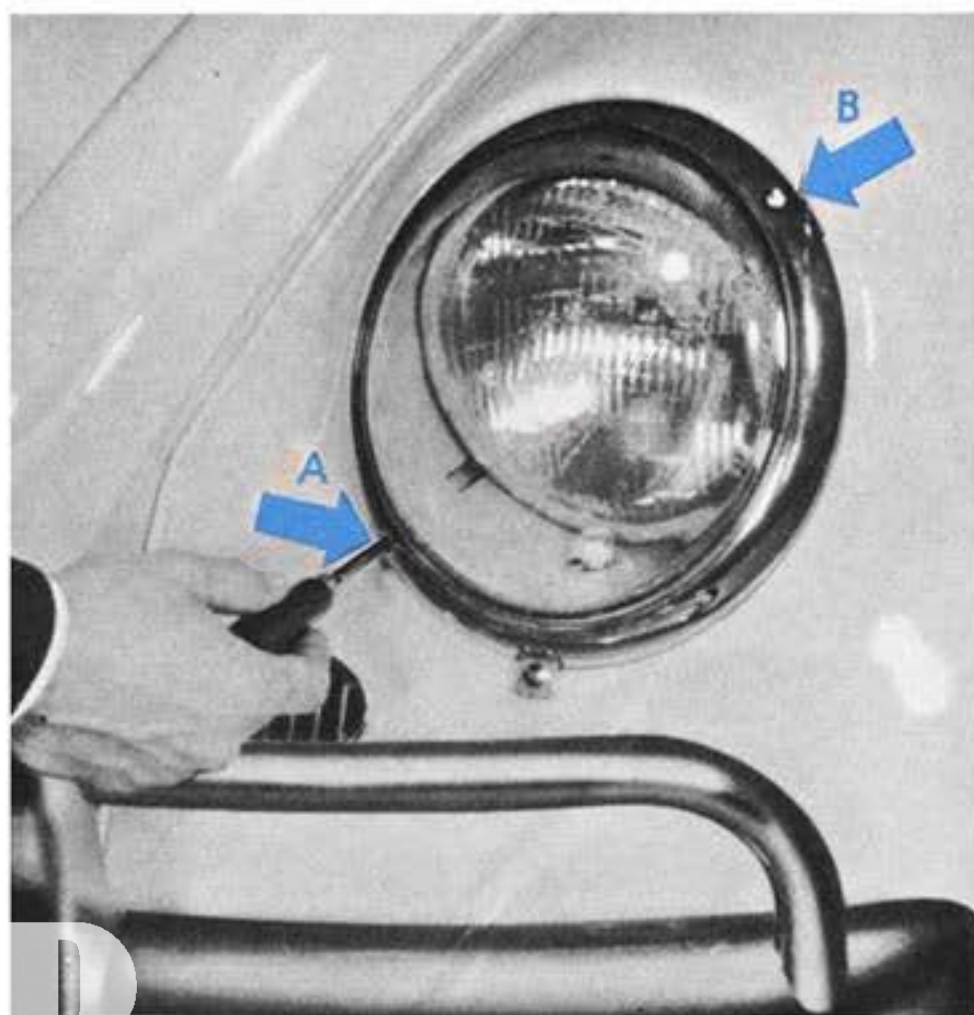



#### Sketch 1

- a – 1004 mm. (39.5")
- b – Height of headlight center from floor
- c – 50 mm./2" (at a distance of 5 m. from the screen)

#### Sketch 2

- a – Height of headlight center from floor
- b – Distance of horizontal setting line from headlight center line (2")
- c – Distance between headlights (39.5")


### Headlight bulb replacement

Loosen the slotted fixing screw at the bottom of the headlight rim. Pull out the lens and reflector unit. Turn the cap to the left and take the holder out of the reflector. Pull the connector off the bulb base and replace the bulb.

When installing the new lamp, hold it with a clean cloth or paper serviette and not with the bare hand.

The lug in the lamp holder must engage in the notch provided in the reflector.

Install the cap so that the contact strip is on the base of the parking light bulb.

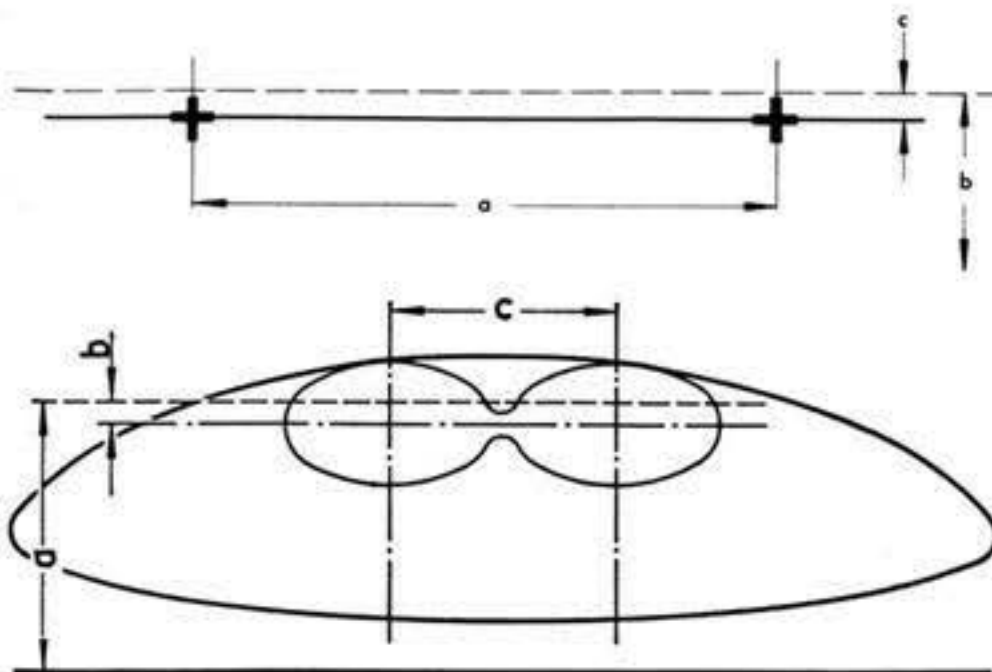

### Replacement of Sealed-Beam units

Loosen the screw in the bottom center of the rim and take out the complete headlight unit. Pull cable connector off the Sealed-Beam unit and disconnect the two cables from the parking light bulb holder.


Remove the five retaining clips and replace the Sealed-Beam unit.

The parking light bulb can be replaced after removing the bulb holder.

When installing the headlight, ensure that the Sealed-Beam unit and the sealing ring between lamp and fender are located correctly.





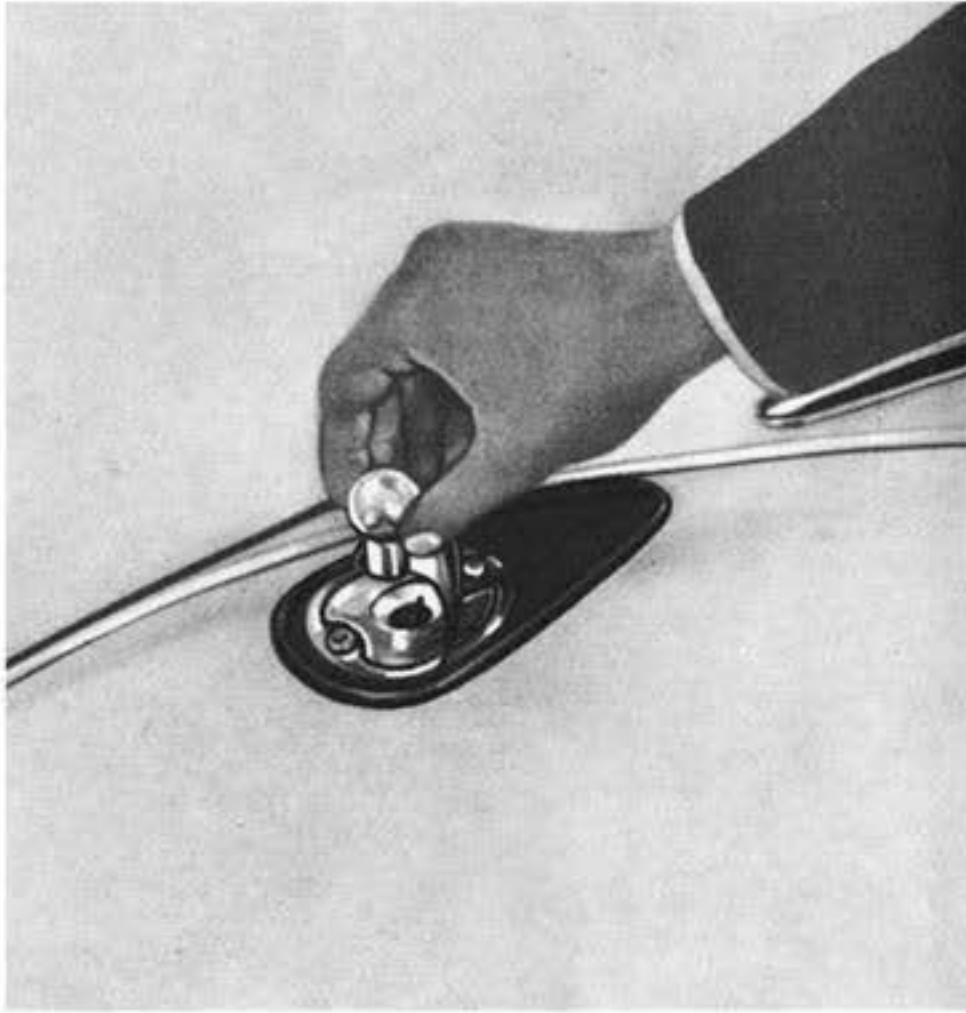

### **Front turn indicator bulb replacement**

Remove the Phillips screw, take off the housing and lens, and replace the bulb.

When installing make sure that the seal is correctly seated.



### **Replacing the rear indicator or stop and tail light bulbs**

Remove two Phillips screws.

Take off lens.

Replace bulb.

Top – Indicator bulb  
Bottom – Stop and tail light bulb

When replacing the stop and tail light bulb the retaining pin nearest to the bulb glass must point downwards. The Phillips screws in the glass insert should be tightened evenly but not excessively.



### License plate light bulb replacement


Open rear hood.

Remove screws on each side of lens and take off lens with bulb holder.

Pull bulb holder out of lens.

Replace bulb.

On installation, ensure that the cable grommet fits properly.

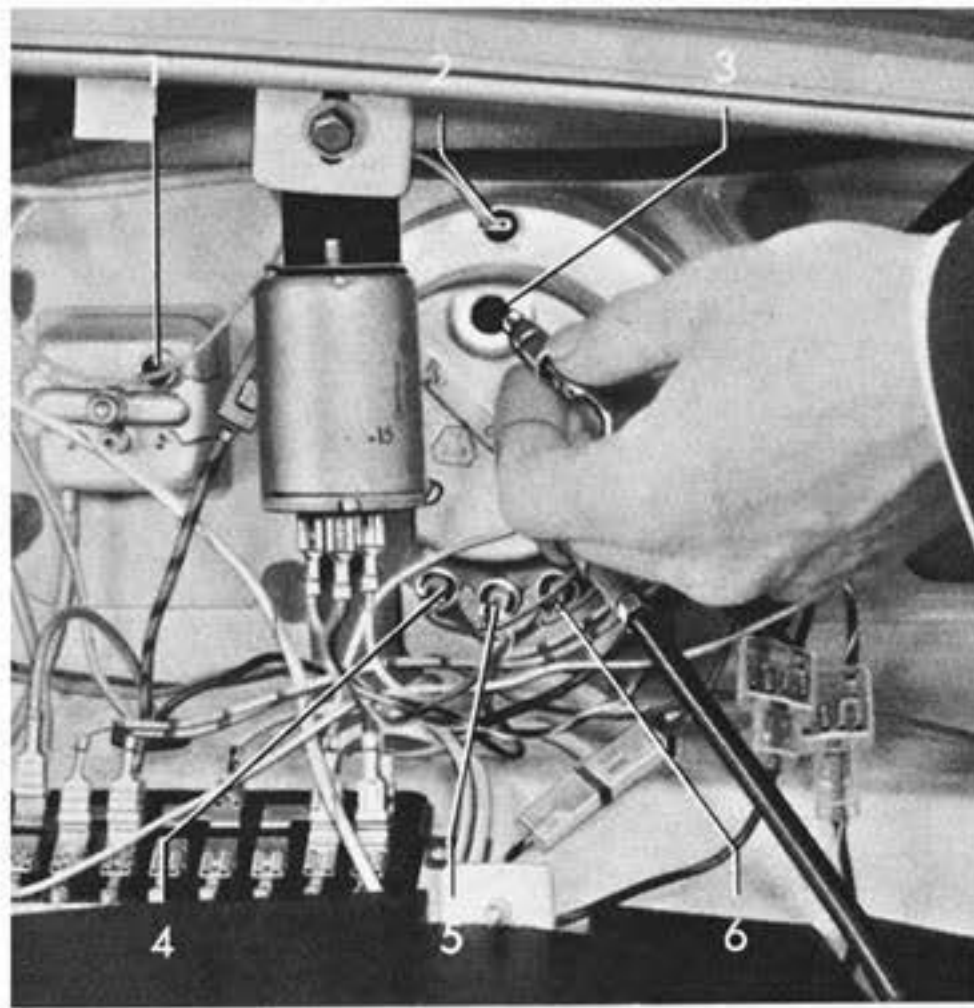

### Warning and instrument light bulb replacement

The warning lights for oil pressure charging flashing indicator and headlight high beam as well as the speedometer and fuel gauge lights are accessible after lifting the front hood and removing the cover at back of the instrument panel. The bulb sockets can easily be pulled out of their holders.

- 1 – Fuel gauge light
- 2 – Speedometer light

Warning lamps:

- 3 – Headlights
- 4 – Oil pressure
- 5 – Flashing indicators
- 6 – Generator




## Replacing fuses

The fuse box, with transparent cover is located under the instrument panel near the steering column.

When a fuse has blown it is not sufficient merely to replace it with a new one. Inspect the electrical system for evidence of short circuits or other faults which may have caused the fuse to blow.

Under no circumstances use fuses which have been patched up with tin foil or wire as they would be liable to cause severe damage. We suggest that you always carry a few spare fuses (16 amp. for wipers, brake light, flasher relay and horn and 8 amp. for all other electrical equipment).

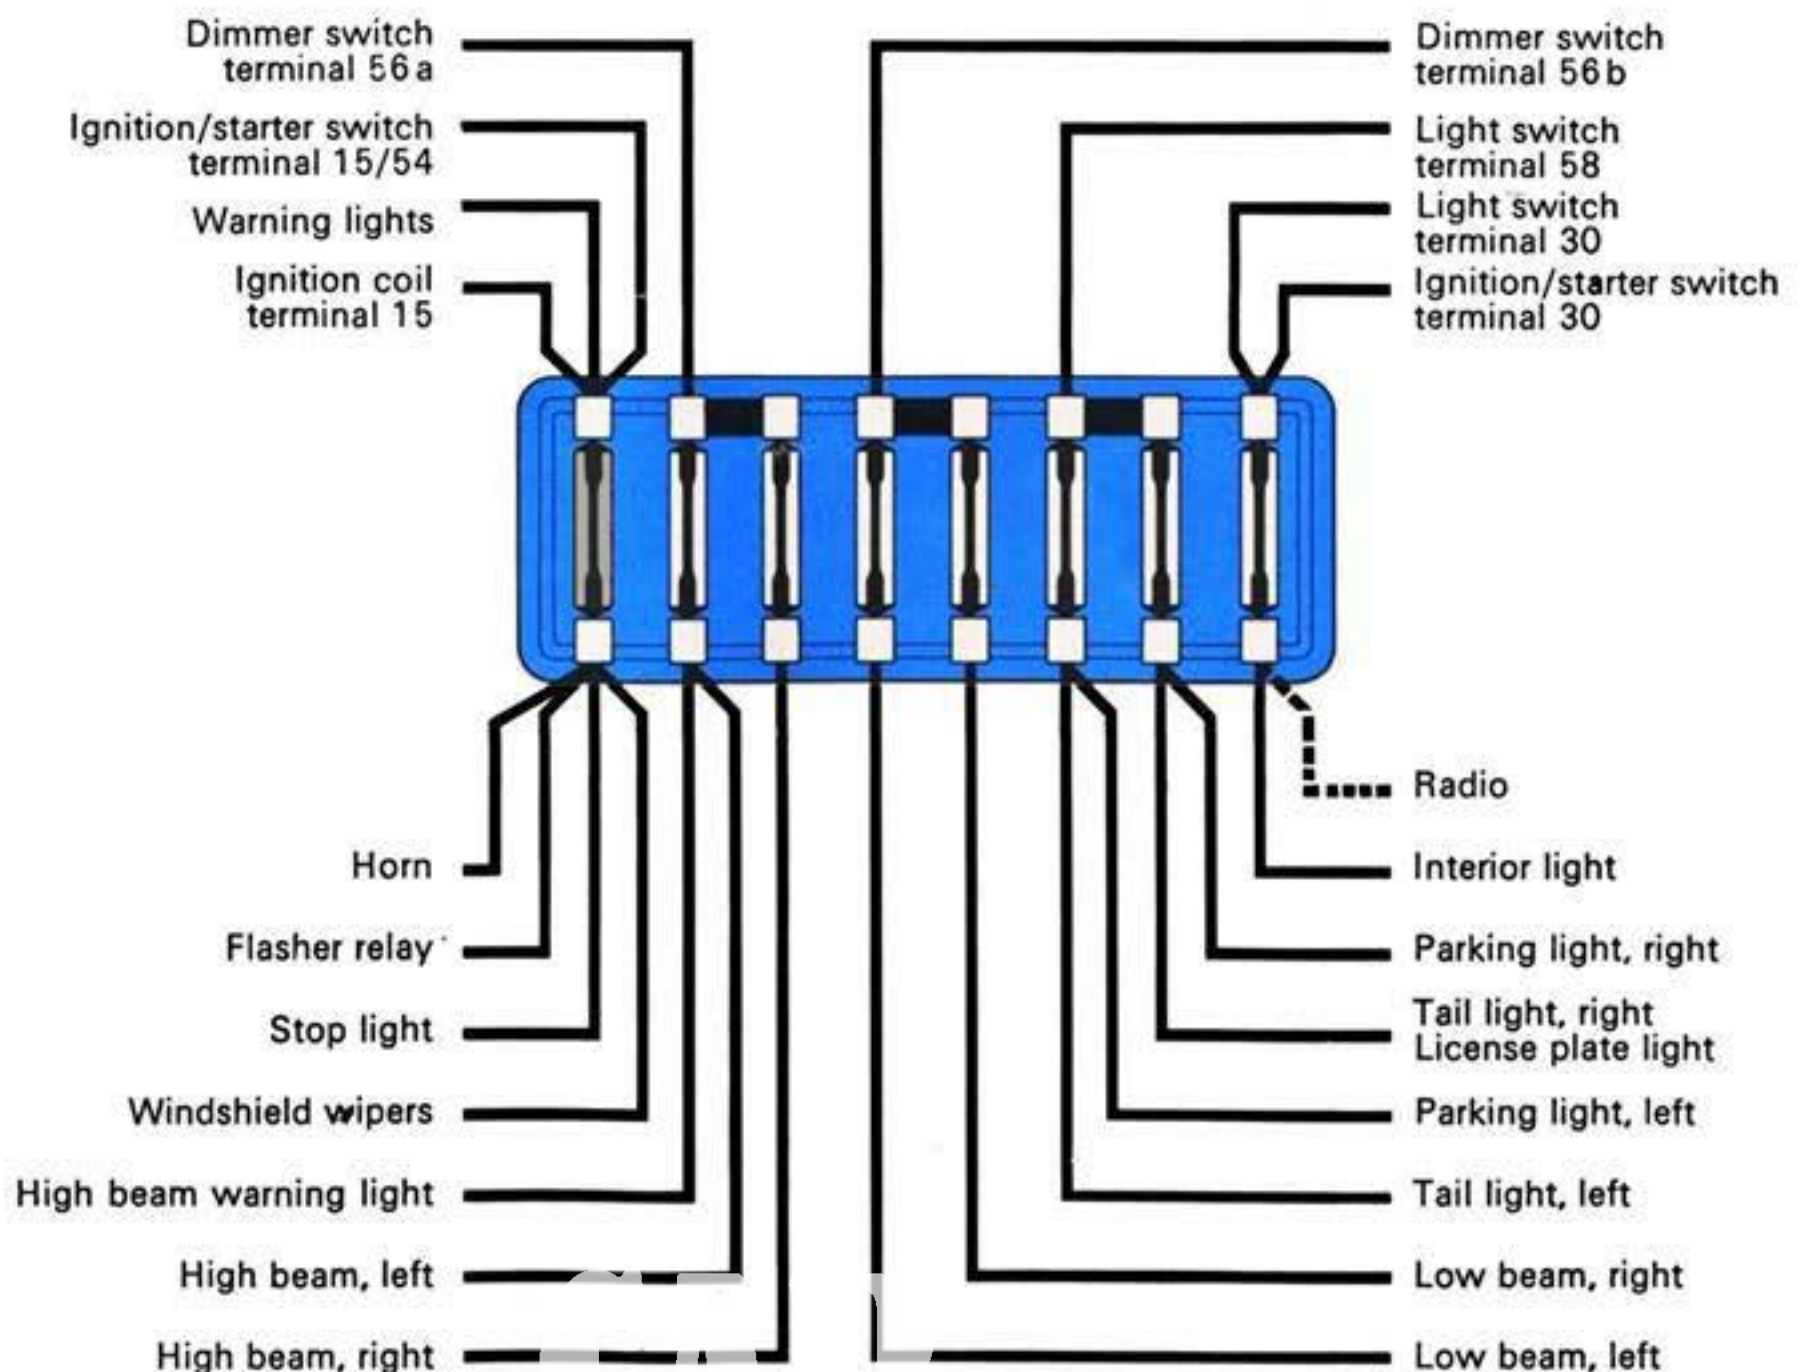

## Adjustment of door lock

There is no need to adjust the Volkswagen door locks regularly. If the door rattles or jams the wedge can easily be adjusted.

Check the 3 striker plate screws for security. Tighten if necessary.

Adjust the striker plate so that door and pillars are a flush fit. The lock housing on the door must have about the same clearance at top and bottom when sliding into the striker plate.

Hold the adjusting screw with a screwdriver and loosen lock nut with an 11 mm. wrench.


Turn the adjusting screw to the left if the door is rattling and to the right if it jams. A quarter to half a turn will usually suffice to bring the shoulder for the wedge into the proper position.

The locking device is properly adjusted if resistance can be felt when opening the door with the inside handle. If, however, there is too much resistance or if the door jumps open on its own, turn the shoulder back slightly. This is done by turning the adjusting screw to the right.

After adjustment, hold the screw with a screwdriver and tighten lock nut.






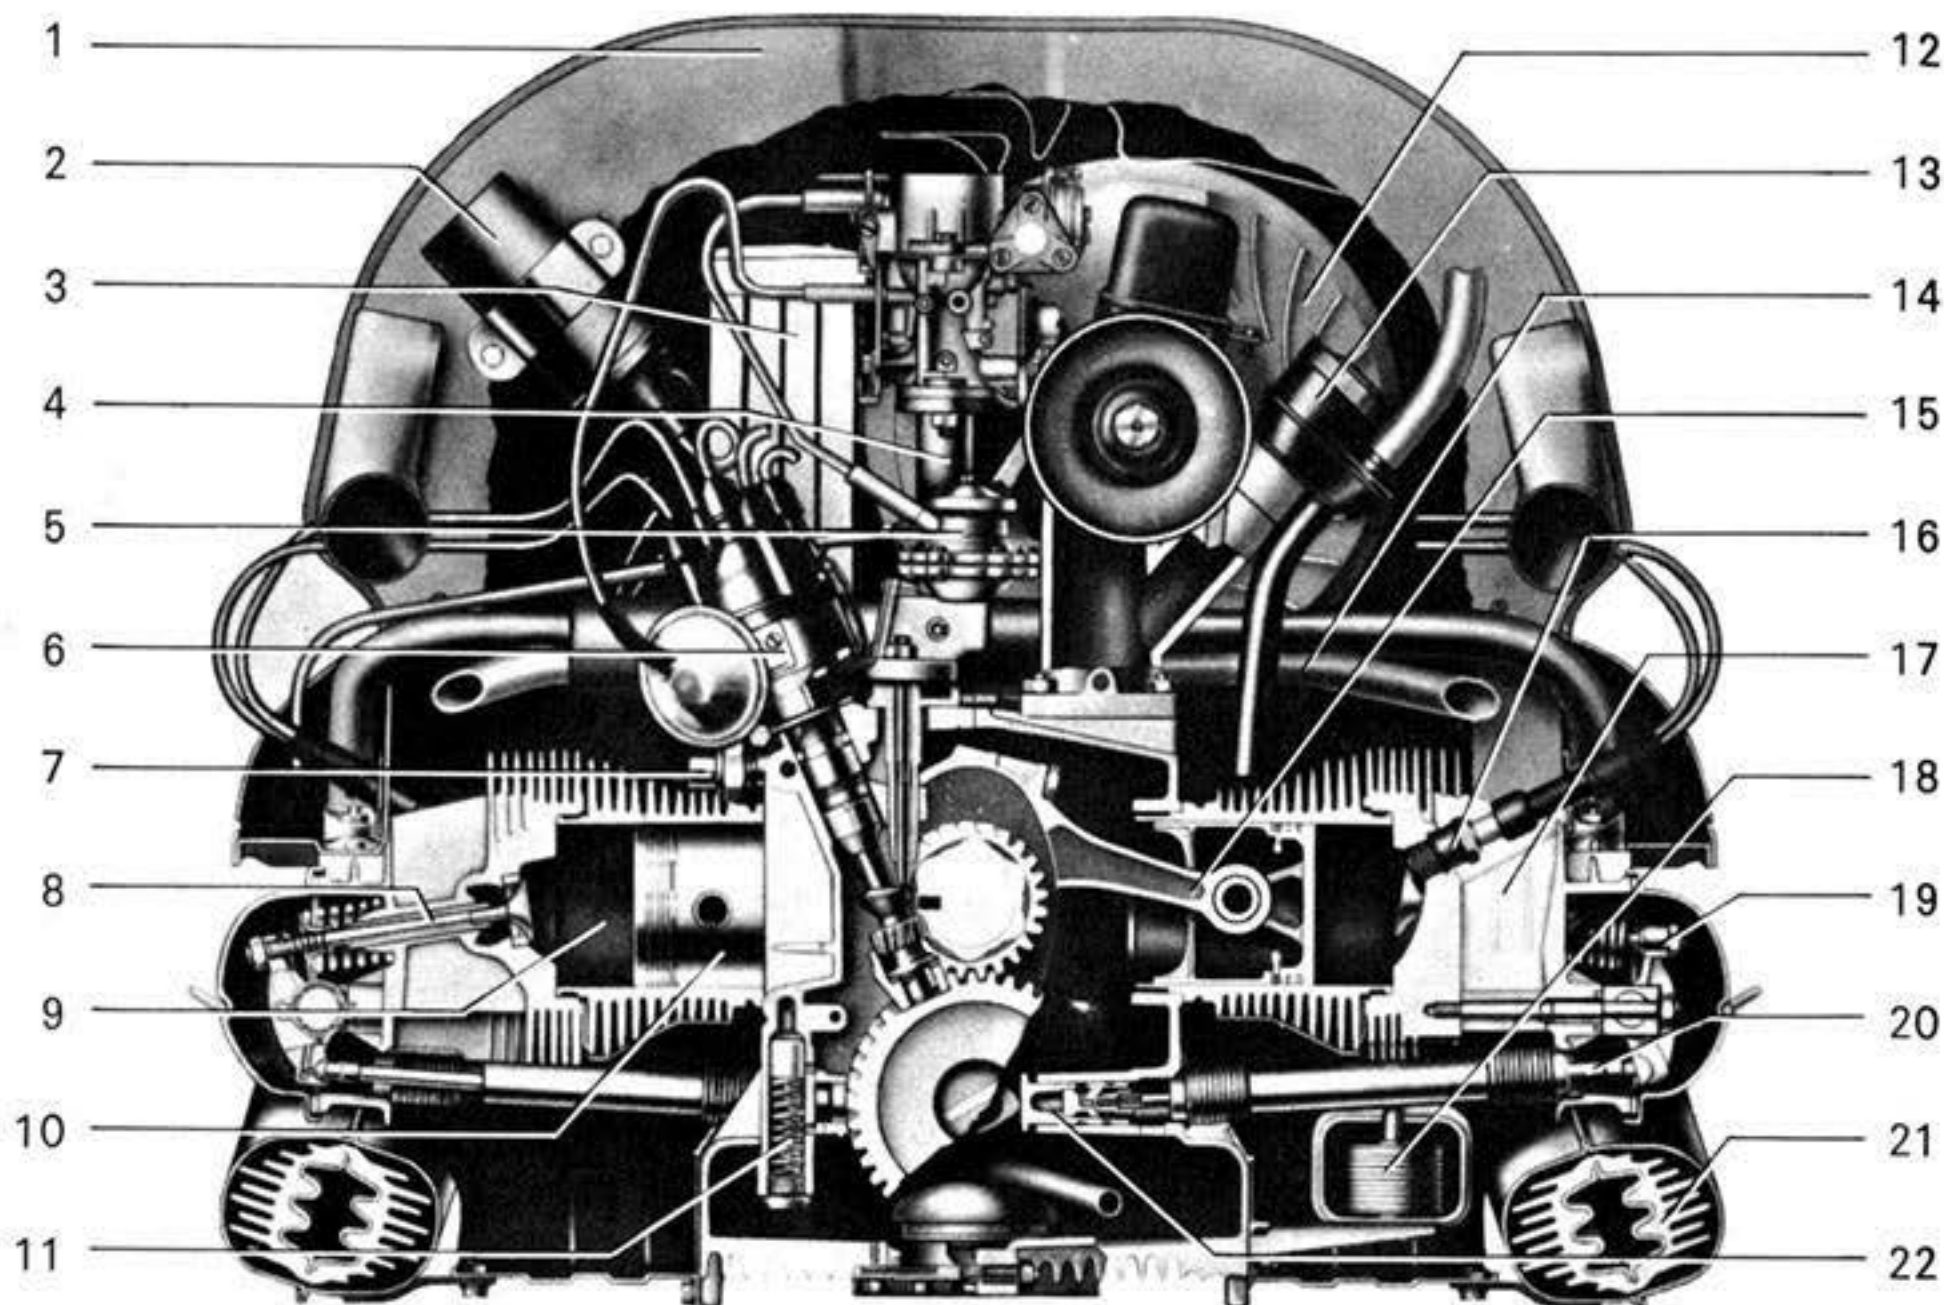

## General Description

### Engine

The engine located in the rear of the car is attached by four bolts to the recessed flange of the rubber mounted transmission case. The crankcase is made of a light alloy. Two pairs of cylinders are horizontally opposed. Each pair has a common cylinder head made of light alloy. The overhead valves are located in the cylinder heads and are operated by the camshaft via cam followers push rods and rocker arms. The short crankshaft rests in four bearings and is induction hardened at its bearing surfaces. The camshaft is driven from it by means of helical gears. The connecting rods are provided with lead-bronze-bearings. The pistons are of light alloy with steel inserts.

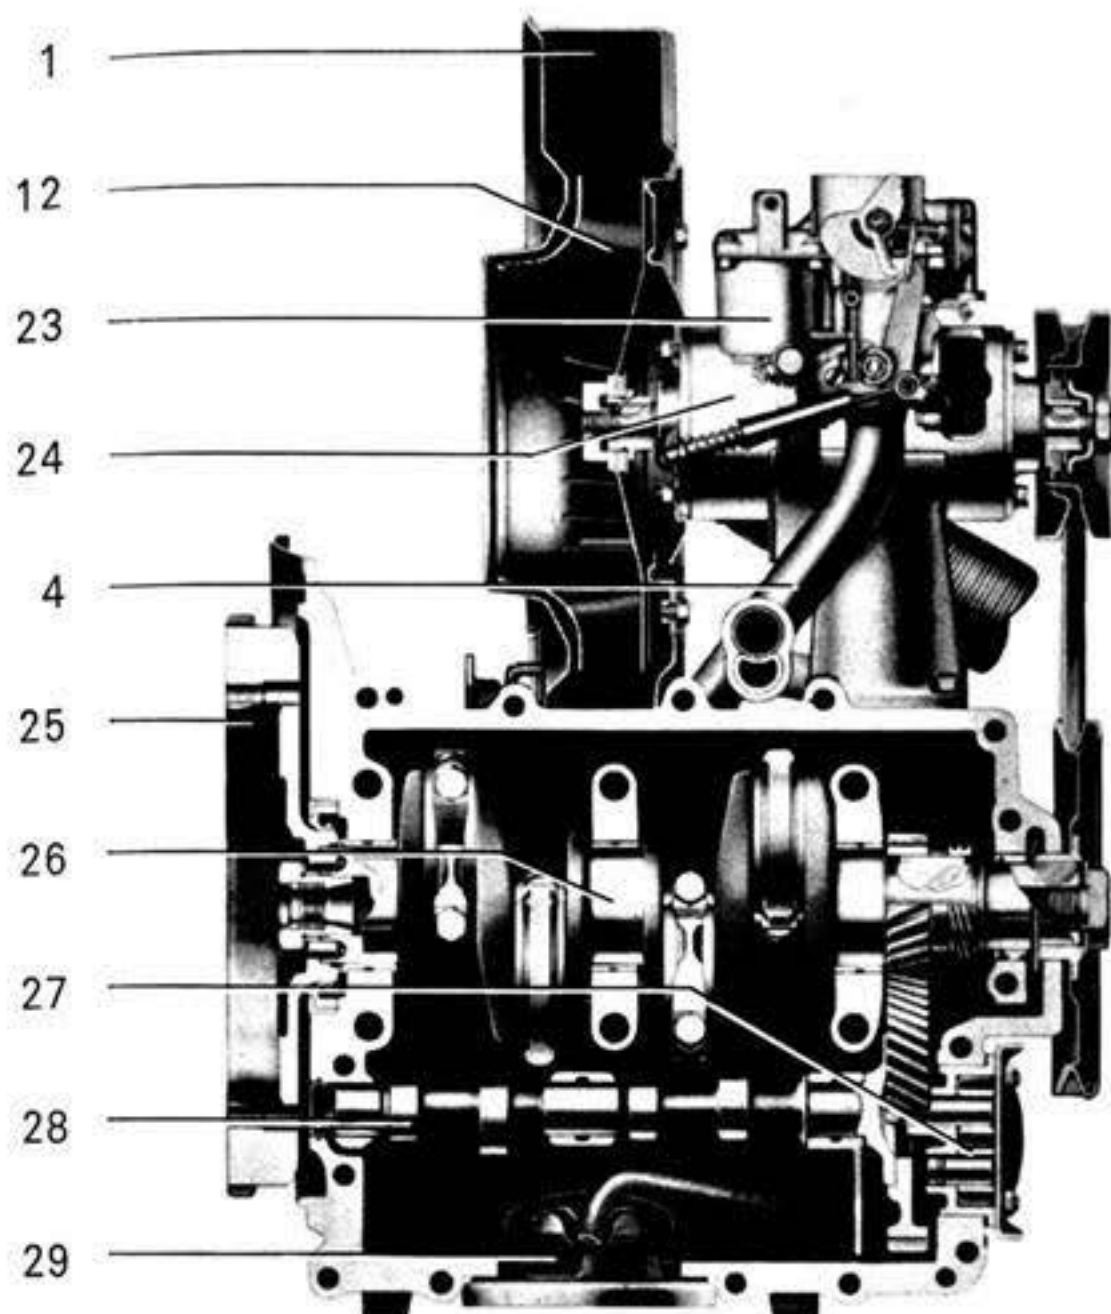

- 1 – Fan housing
- 2 – Ignition coil
- 3 – Oil cooler
- 4 – Intake manifold
- 5 – Fuel pump
- 6 – Distributor
- 7 – Oil pressure switch
- 8 – Valve
- 9 – Cylinder
- 10 – Piston
- 11 – Oil pressure relief valve
- 12 – Fan
- 13 – Oil filler and breather
- 14 – Pre-heating pipe
- 15 – Connecting rod
- 16 – Spark plug
- 17 – Cylinder head
- 18 – Thermostat
- 19 – Rocker arm
- 20 – Push rod
- 21 – Heat exchanger
- 22 – Cam follower
- 23 – Carburetor
- 24 – Generator
- 25 – Flywheel
- 26 – Crankshaft
- 27 – Oil pump
- 28 – Camshaft
- 29 – Oil strainer



A down-draft carburetor with automatic choke and accelerator pump supplies the fuel-air mixture to the cylinders.

The engine is equipped with battery ignition. The spark advance is controlled automatically by a vacuum mechanism. The generator is driven by a V belt. The generator pulley can be adjusted to alter the V belt tension.

The oil pump of the pressure lubrication system is driven by the camshaft. The oil is drawn from the crankcase via a strainer and forced via an oil cooler to the lubrication points. When the oil is thick an oil pressure relief valve enables the oil to flow direct to the lubrication points by by-passing the oil cooler.

The engine is cooled by a fan mounted at the generator. The fan sucks in air through an opening in the fan housing and forces it through the fins of the cylinders. The flow of cooling air is regulated by a thermostat and this ensures a constant operating temperature.



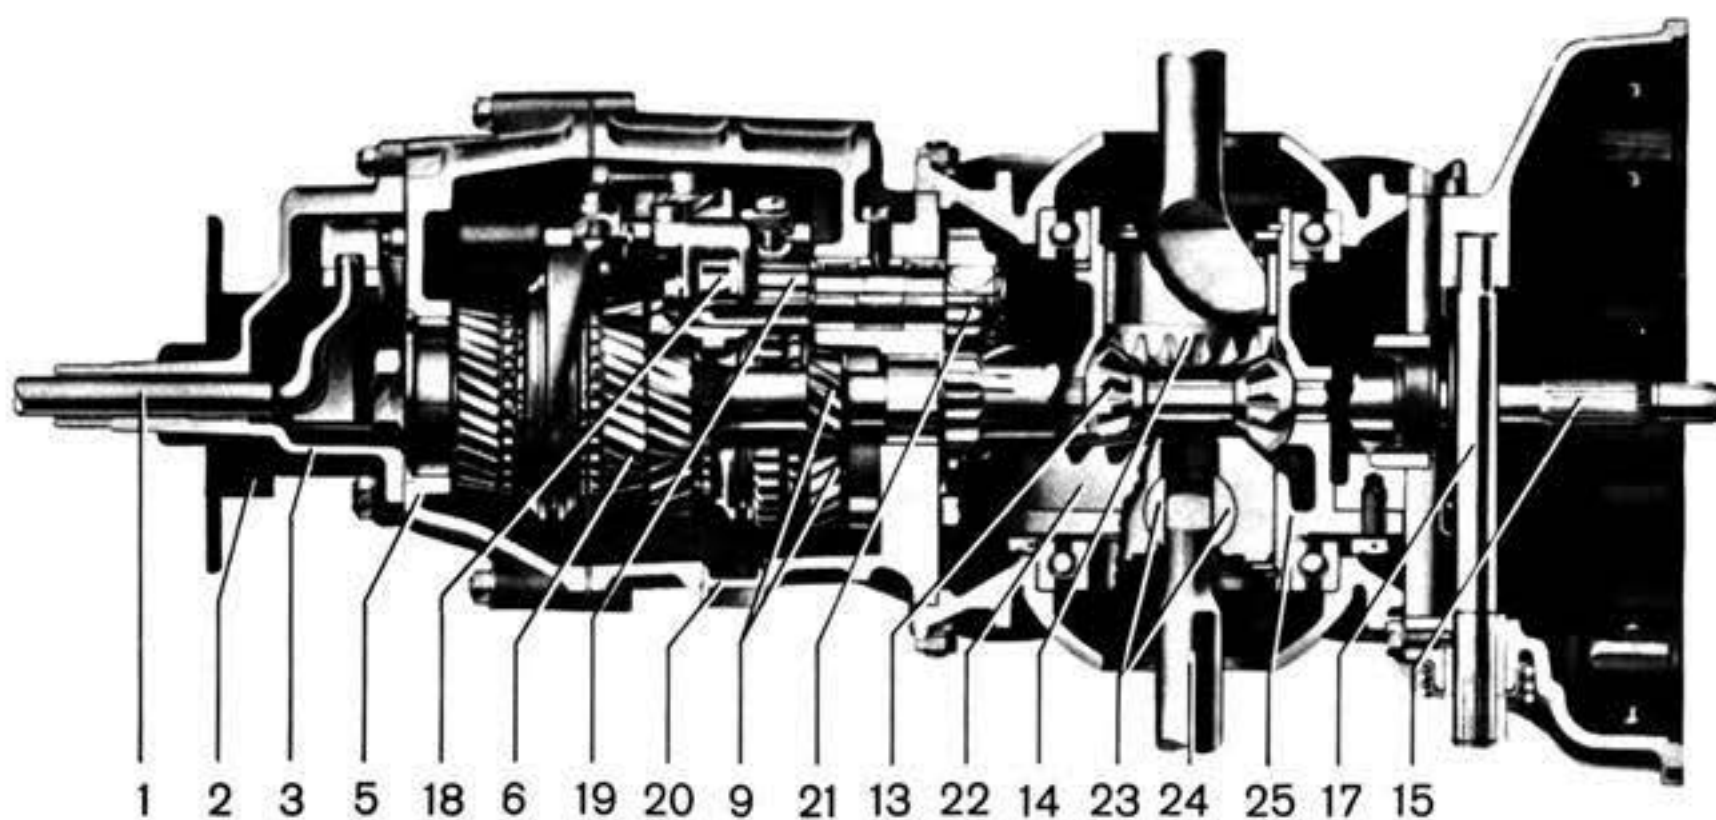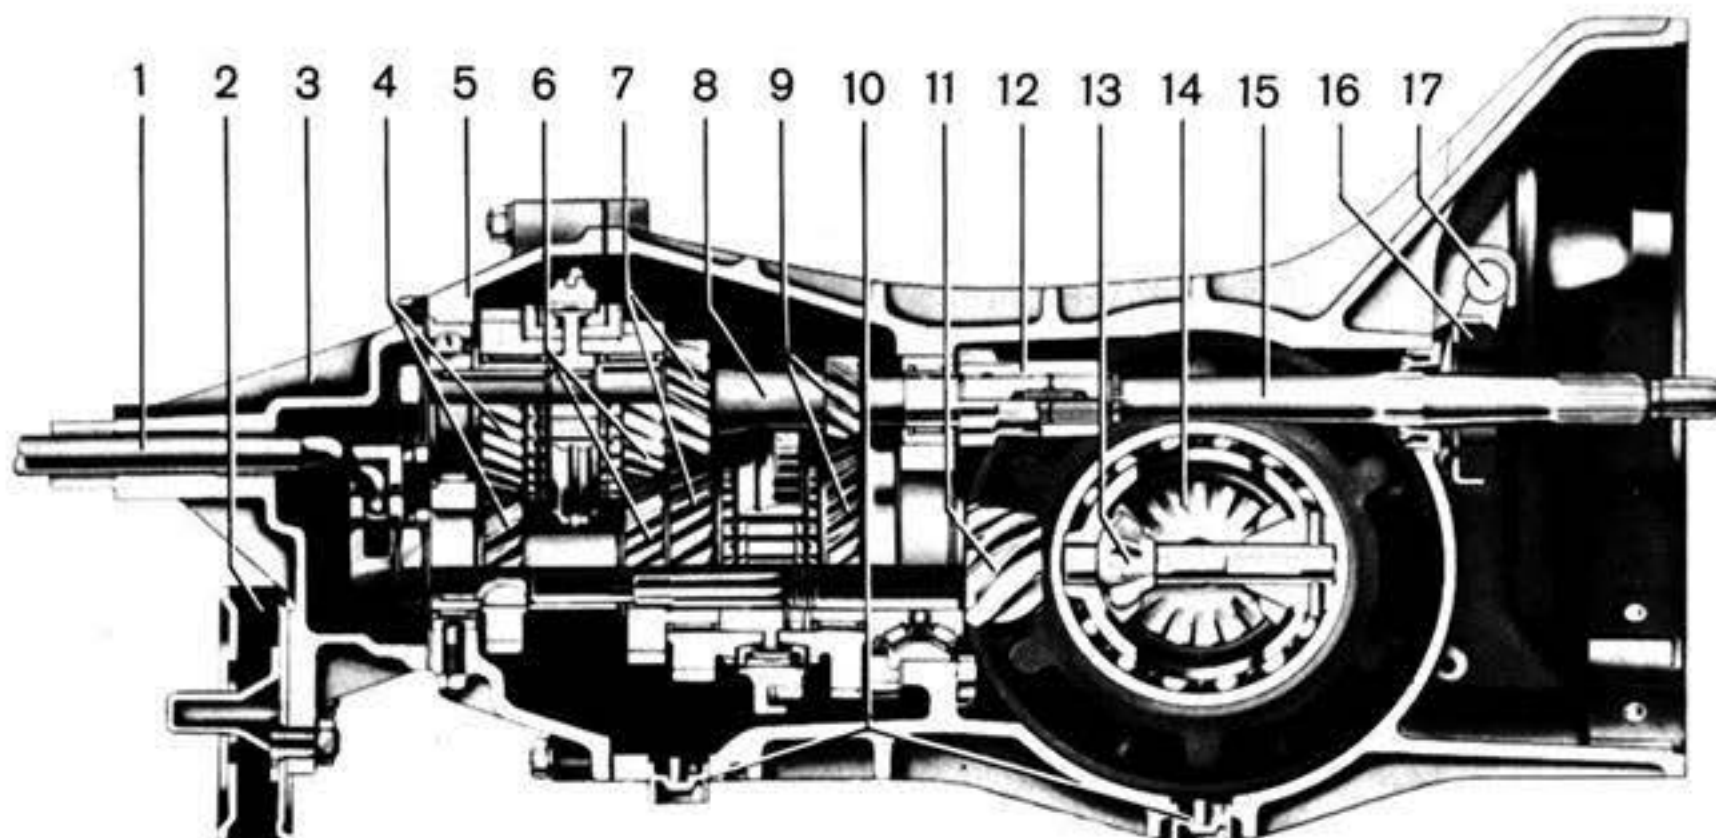

- 1 – Transmission shift lever
- 2 – Bonded rubber mounting
- 3 – Gearshift housing
- 4 – 4th speed
- 5 – Gear carrier
- 6 – 3rd speed
- 7 – 2nd speed
- 8 – Main drive shaft, front
- 9 – 1st speed
- 10 – Oil drain plugs
- 11 – Drive pinion
- 12 – Reverse gear

- 13 – Differential pinion
- 14 – Differential side gear
- 15 – Main drive shaft, rear
- 16 – Clutch release bearing
- 17 – Clutch operating shaft
- 18 – Reverse sliding gear
- 19 – Reverse shaft
- 20 – Oil filler plug
- 21 – Reverse drive gear
- 22 – Ring gear
- 23 – Fulcrum plate
- 24 – Rear axle shaft
- 25 – Differential housing

## **Chassis**

The frame of the Volkswagen is of pressed steel. The steel floor of the frame is formed in two pieces. These two pieces are spot-welded together with the channel shaped center section of the frame, the forked rear end of which serves to support the transmission and engine unit. The following parts pass through the center of the frame:

Gearshift rod, fuel line, and, in guide tubes, the cables of hand brake, clutch, throttle, and heating controls.

The front suspension is an independent parallel arm type, using torsion bar springs. The front axle is bolted to the front end of the frame and consists of two rigidly joined tubes, which carry the torsion bar springs and the upper and lower arms of the front wheel suspension. A stabilizer is attached to both lower torsion arms.

The roller type steering gear acts on the front wheels via divided tie rods. A steering damper ensures steering steadiness.

The rear axle is of the swinging half axle design. The rear wheels are independently sprung and have adjustable torsion bars.

Double-acting hydraulic shock absorbers in front and rear prevent excessive rebound.

## **Transmission and Rear Axle**

Power from the engine is transmitted to the gears via a dry single-plate clutch. The transmission case houses the transmission with four forward speeds, one reverse and the differential.

All the forward gears are synchronized. The gears are helically cut to ensure silent operation.

The drive pinion and the ring gear are cut spirally. The two swinging rear axle shafts are pivoted in the differential.

## **Brakes**

The hydraulic foot brakes operate on all wheels, and the handbrake, via cables, on the rear wheels.

## **Body**

The two-door body is made of pressed steel and electrically welded. It is bolted to the frame. Both window doors can be lowered. Vent wings in the doors ensure draft-free ventilation. Both front seats can easily be adjusted while driving.

The luggage compartments are located under the front hood and behind the rear seat. The lock in the front hood is opened from the driving seat by means of a cable. The fuel tank and spare wheel are also under the front hood.

## **Heating System**

The fresh air drawn in by the fan is heated in heat exchangers. It is emitted through two defroster vents on the windshield, and two controllable outlets each in front and rear foot wells. The heating is regulated by two levers situated beside the driver's seat on the frame tunnel.



## Technical Data

### Engine

Design . . . . .	4 Cylinder, 4 Cycle, O.H.V.-Type in rear of car
Arrangement of Cylinders	Horizontally opposed (Flat four)
Bore . . . . .	77 mm. (3.031")
Stroke . . . . .	64 mm. (2.520")
Capacity . . . . .	1192 c.c. (72.740 cu.in.)
Compression ratio . . . .	7.0:1
Valves . . . . .	Overhead
Valve clearance with engine cold . . . . .	Intake 0.20 mm. (.008") Exhaust 0.30 mm. (.012")
Maximum output (SAE) . .	41.5 at 3900 rpm
Lubrication . . . . .	Force feed by gear pump. Oil cooler
Oil capacity . . . . .	2.5 liters (5.3 U.S. pints; 4.4 Imp. pints)
Fuel delivery . . . . .	Mechanical fuel pump
Carburetor . . . . .	Downdraft-Solex 28 PICT
Cooling system . . . . .	Air cooling by fan, thermostat controlled
Battery . . . . .	6 Volts, 66 Ampere hours
Starting motor . . . . .	Electric, 6 Volts, 0.5 hp.
Generator . . . . .	Voltage regulating, 6 Volts, 180 Watts at 2500 rpm.
Ignition distributor . . . .	with vacuum spark advance
Firing order . . . . .	1-4-3-2
Initial spark advance . . .	10° before T.D.C.
Breaker point gap . . . .	0.4 mm. (.016")
Spark plugs . . . . .	14 mm. thread Bosch W 175 T 1 Beru 175/14 Champion L 85 and plugs of similar values from other manufacturers
Spark plug gap . . . . .	0.7 mm. (.028")

## Clutch

Design . . . . .	Single plate, dry
Pedal free-play . . . . .	10 to 20 mm. (.4"—.8")

## Transmission

4 Forward speeds, 1 reverse

All forward gears synchronized and silent.

Gear ratios . . . . .	First	3.80:1	Third	1.32:1
	Second	2.06:1	Fourth	0.89:1
			Reverse	3.88:1

## Rear Axle

Power is transmitted through a spiral drive pinion and ring gear, via two swinging axles to the rear wheels.

Ratio . . . . .	4.375:1
-----------------	---------

Oil capacity

of transmission . . . . .	3.0 liters (6.3 U.S. pints; 5.3 Imp. pints)
---------------------------	---

## Chassis

Springs, Front . . . . .	Two torsion bars
Rear . . . . .	Two torsion bars
Shock absorbers . . . . .	Double acting telescopic type at front and rear
Steering . . . . .	Roller steering gear, divided tie rod and hydraulic steering damper
Turns of steering wheel, Lock to lock . . . . .	2.6
Turning circle . . . . .	about 11 m. (36 ft.)
Wheels . . . . .	Disc wheels 4 J × 15, drop-center type
Tires . . . . .	5.60-15, tubeless
Inflation pressure	
1 to 2 occupants . . . . .	Front: 1.1 kg./sq.cm. 16 psi.      Rear: 1.4 kg./sq.cm. 20 psi.
3 to 5 occupants . . . . .	Front: 1.2 kg./sq.cm. 17 psi.      Rear: 1.7 kg./sq.cm. 24 psi.



Wheel base . . . . .	2,400 mm. (94.5 in.)
Track (Tread) . . . . .	Front: 1,305 mm. (51.4 in.) Rear: 1,288 mm. (50.7 in.)
Toe-in (unladen) . . . . .	2 to 4 mm. (0.08 in. to 0.16 in.)
Foot brake . . . . .	Hydraulic, acting on all wheels
Hand brake . . . . .	Mechanical, acting on rear wheels

## Dimensions and Weights

	Sedan	Convertible
Length . . . . .	4,070 mm. (13 ft. 4 in.)	4,070 mm. (13 ft. 4 in.)
Width . . . . .	1,540 mm. (5 ft. 0.6 in.)	1,540 mm. (5 ft. 0.6 in.)
Height . . . . .	1,500 mm. (4 ft. 11 in.)	1,500 mm. (4 ft. 11 in.)
Ground clearance	152 mm. (6.0 in.)	152 mm. (6.0 in.)
Unladen weight, ready for use . . . . .	760 kg. (1675 lbs.)	810 kg. (1785 lbs.)
Max. load . . . . .	380 kg. ( 838 lbs.)	360 kg. ( 794 lbs.)
Permissible total weight . . . . .	1140 kg. (2513 lbs.)	1170 kg. (2579 lbs.)
Max. load on front axle . . . . .	480 kg. (1058 lbs.)	480 kg. (1058 lbs.)
Max. load on rear axle . . . . .	700 kg. (1543 lbs.)	700 kg. (1543 lbs.)

## Fuel

Consumption according to DIN 70030 . . . . .	Metric — 7.5 liters per 100 km. U.S. — 31.5 miles per gallon Imp. — 37.5 miles per gallon
(Consumption plus 10% at half the load and at a steady $\frac{3}{4}$ of top speed 86 kph./53 mph. on level road.)	
Fuel rating . . . . .	86 Octane (Res. F 1)
Oil Consumption . . . . .	0.3–1.0 liter per 1,000 km. (600 miles) 1.0–3.4 U.S. pints per 1,000 miles 0.9–2.9 Imp. pints per 1,000 miles

## Refill Requirements

Fuel tank . . . . .	40 liters (10.6 U.S. gall.; 8.8 Imp. gall.)
Engine . . . . .	2.5 liters ( 5.3 U.S. pints; 4.4 Imp. pints)
Rear axle and transmission	2.5 liters (5.3 U.S. pints; 4.4 Imp. pints)
Brakes . . . . .	0.25 liter (0.53 U.S. pint; 0.44 Imp. pint)
Container for windshield washer . . . . .	approx. 1 liter (1 qt.)
Oil bath air cleaner . . . .	0.25 liter (0.53 U.S. pint; 0.44 Imp. pint)

## Performance

Maximum and cruising speed . . . . .	115 kph. (72 mph.)
--------------------------------------	--------------------


	Sedan	Convertible
Hill-climbing ability . . .		
First gear	43.5%	39.0%
Second gear	22.5%	20.5%
Third gear	13.5%	12.0%
Fourth gear	7.5%	6.5%

## Bulb Chart

V = Volts, W = Watts

Light Description	Description of Bulb (according to German Standard DIN 72 601)	Spare Part No.
Headlights . . . . .	A 6 V 45/40 W	N 177051
Parking lights . . . . .	HL 6 V 4 W	N 177171
Stop/tail lights . . . . .	S 6 V 18/5 W	N 177371
License plate light . . . .	G 6 V 10 W	N 177191
Speedometer, fuel gauge and warning lights . . . .	J 6 V 1.2 W	N 177221
Interior light . . . . .	K 6 V 10 W	N 177231
Turn indicator lights . . .	R 6 V 18 W	N 177311



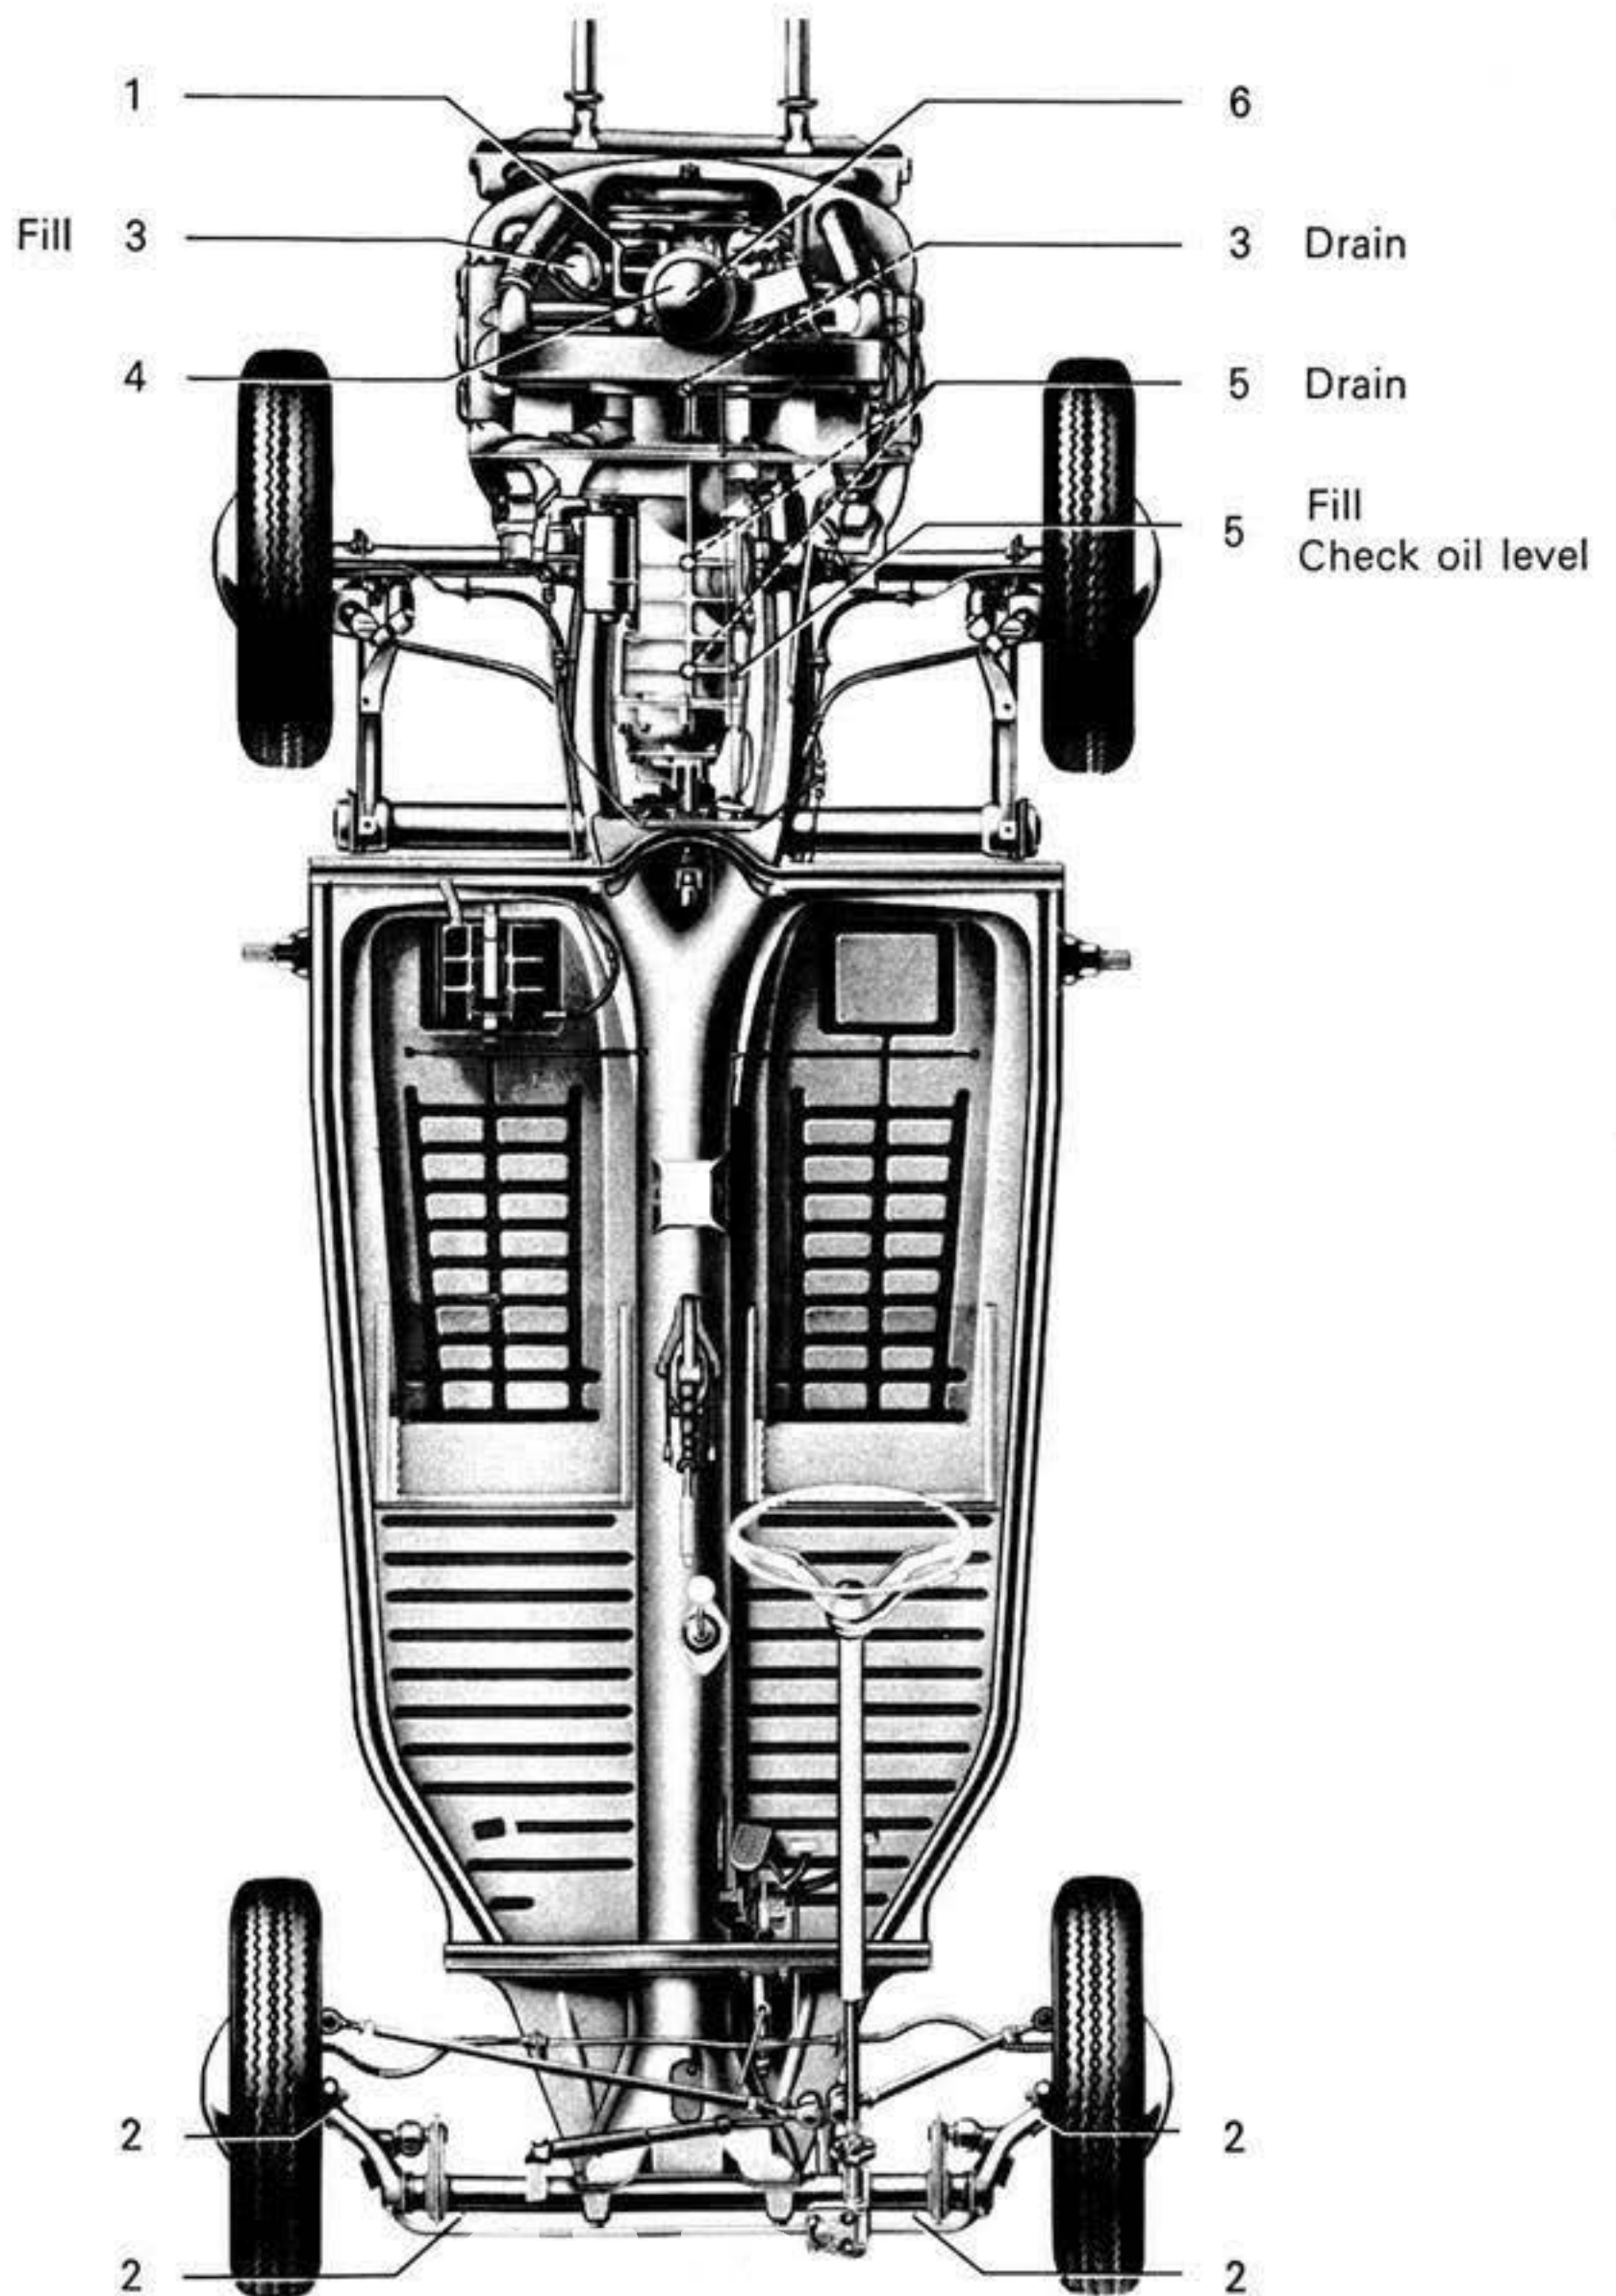

## Lubrication Chart

500 km. 300 miles	2,500 km. 1,500 miles	5,000 km. 3,000 miles	No.	Lubrication Points	Every
			1	Engine: Check oil level	<b>2,500 km. 1,500 miles</b>
			2	Front axle: Lubricate	
				Door hinges	
			3	Engine: Change oil, clean oil strainer	<b>5,000 km. 3,000 miles</b>
			4	Check air cleaner, clean lower part if necessary	
			5	Transmission: Check oil level	
			6	Carburetor controls	
				Door and hood locks	
			5	Transmission: Change oil, clean magnetic oil drain plugs	<b>50,000 km. 30,000 miles</b>

## Lubricants

Lubricant	Lubrication Points	Specifications	
Engine oil (HD oil for spark ignition engines)	Engine, oil bath air cleaner, carburetor linkage, door hinges	Temperature °C °F	Viscosity class
		above 30 86	SAE 30
		from 0 32	SAE 20 W/20
		up to 30 86	
		below 0 32	SAE 10 W
		below -25 -13	SAE 5 W
Hypoid Oil	Transmission	all the year SAE 90 *)	
Universal grease	Torsion arms, king pins and torsion arm link pins, door and hood locks	cold-resistant water-repellent high pressure grease	
Lithium grease	Front wheel bearings, Breaker arm fiber block in distributor	Multi-purpose grease	

\*) SAE 80 all the year in countries with arctic climates.




## Maintenance Chart

500 km. 300 miles	5,000 km. 3,000 miles	Operation	Every
		Check for tightness: Nuts and bolts on chassis, body, engine, rear axle, front axle, and steering	
		Check rear axle and engine for leaks	
		Check tire pressure and wheel mounting bolts for tightness	
		Check fan belt	<b>5,000 km. 3,000 miles</b>
		Clean fuel pump filter Lubricate felt ring of contact breaker base plate	
		Check breaker points, grease distributor, check breaker gap and ignition timing	
		Check valve clearance	
		Check spark plugs and compression pressures	
		Check rubber valve for crankcase ventilation, check exhaust system for damage	
		Check clutch pedal free-play	
		Check torsion arm link pins, tie rod end dust seals, tie rod ends, steering damper mounting and toe-in	
		Check steering adjustment	
		Check tire wear, damage and pressure	
		Check hydraulic brake system for leaks and damage Check brake fluid level and adjustment of hand and foot brakes	
		Check thickness of brake linings through inspection hole Check shock absorbers for secure mounting	
		Check battery Check operation of complete electrical system and headlight alignment	
		Road test vehicle, check foot and hand brake efficiency Check idling adjustment and heating	
		Clean, grease and adjust front wheel bearings	<b>50,000 km. 30,000 miles</b>



## Tools and Accessories

- 1 Spare Fan Belt
- 1 Tool Roll
- 1 Spare Tire and Wheel complete
- 1 Jack
- 1 Wheel Cap Removal Tool
- 1 Combination Pliers
- 1 Screwdriver with reversible blade for slotted and Phillips screws
- 1 Open End Wrench 8/13 mm.
- 1 Socket Wrench for Spark Plugs, Fan Pulley Nut and Wheel Bolts
- 1 Socket Wrench 14 mm.
- 1 Bar for Socket Wrench and Jack

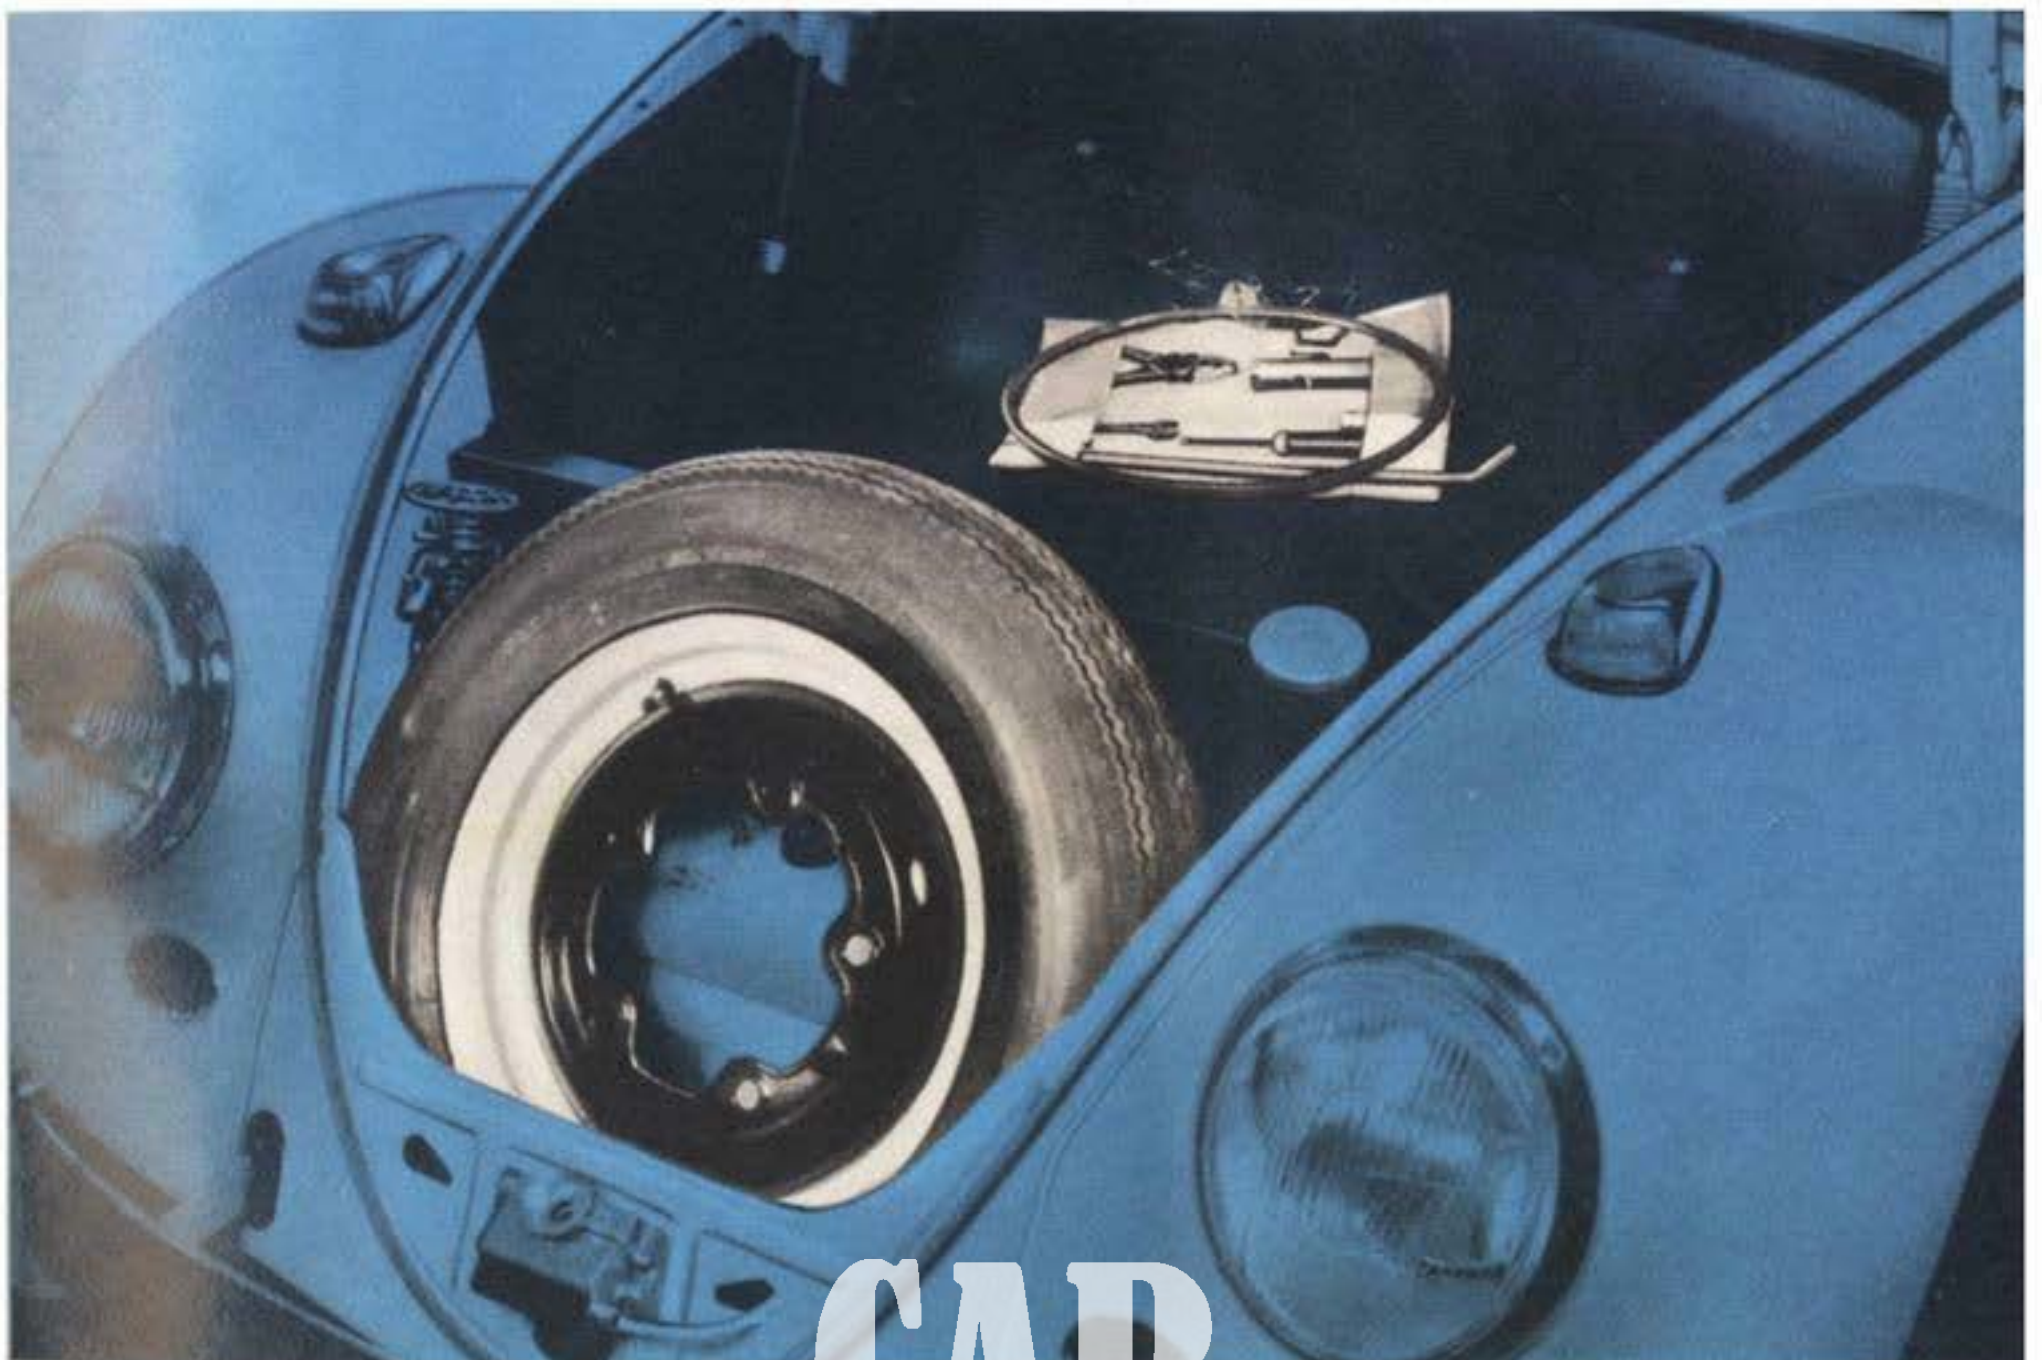



# Index

<b>Accelerator pedal</b> . . . . .	3
— accelerating . . . . .	20
Accessories . . . . .	75
Additives — engine . . . . .	37
— transmission . . . . .	37
Air cleaner — checking and cleaning . . . . .	43
Ash tray . . . . .	9
<b>Battery — maintenance</b> . . . . .	56
— care in winter . . . . .	25
Body — airing . . . . .	33
— description . . . . .	67
Brakes — adjusting . . . . .	54
— application . . . . .	21
— bleeding . . . . .	55
— care in winter . . . . .	26
— checking . . . . .	53
— description . . . . .	67
Brake pedal . . . . .	3
Breaking-in (running-in) . . . . .	18
Bulb chart . . . . .	71
<b>Carburetor adjusting</b> . . . . .	50
— type . . . . .	68
Care of the car . . . . .	30
Chassis — care in winter . . . . .	25
— description . . . . .	67
— lubrication . . . . .	38
— number . . . . .	79
Chromium-plated parts — care . . . . .	32
Climbing ability . . . . .	71
Clutch — design . . . . .	69
— pedal . . . . .	3
— pedal free-play . . . . .	51
Cold weather hints . . . . .	24
Compression — Checking . . . . .	48
— ratio of engine . . . . .	68
Contact breaker points — setting . . . . .	45
— cleaning . . . . .	44
Controls and instruments . . . . .	3
Convertible — Care of top . . . . .	32
— Lubrication of linkage . . . . .	40
— Opening and closing top . . . . .	12
Cooling of engine . . . . .	64
<b>Description — general</b> . . . . .	64
<b>Dimensions — overall</b> . . . . .	70

Dimming — headlights . . . . .	3	Generator . . . . .	68
Dipstick . . . . .	15	Ground clearance . . . . .	70
Distributor . . . . .	68	<b>H</b> and brake — adjusting . . . . .	56
— lubrication . . . . .	45	— description . . . . .	67
Doors . . . . .	5	Headlights — aiming . . . . .	58
— care of weather strips . . . . .	33	— changing bulb . . . . .	59
— adjusting . . . . .	63	Heating — description . . . . .	24
— inside handle . . . . .	3	— operation . . . . .	24
— lubrication points . . . . .	34	Hood lock — convertible . . . . .	10
— locks frozen . . . . .	26	— knob . . . . .	3
Driving down-hill . . . . .	21	Horn lever . . . . .	3
<b>E</b> conomy . . . . .	20	<b>I</b> dentification plate . . . . .	79
Engine — description . . . . .	64	Idling — checking and adjusting . . . . .	50
— design . . . . .	68	Ignition — timing . . . . .	46
— lubrication (oil change) . . . . .	68	Instrument light . . . . .	8
— number . . . . .	79	Interior light . . . . .	8
— sectional view . . . . .	64	<b>J</b> ack — operation . . . . .	28
— technical data . . . . .	68	<b>K</b> eys . . . . .	
Engine oil — change in winter . . . . .	25	<b>L</b> eatherette — care of . . . . .	
— change and capacities . . . . .	34/70	License plate light — replacing bulb . . . . .	61
— oil strainer . . . . .	35	Lighting . . . . .	8
— type . . . . .	34	Lubricants . . . . .	73
Firing order . . . . .	68	Lubrication service . . . . .	34
Flashing indicator bulb — replacement . . . . .	60	Lubrication chart . . . . .	73
Flashing indicator switch . . . . .	6	Luggage compartments . . . . .	10
Foot brake adjusting . . . . .	54	<b>M</b> aintenance service . . . . .	41
— bleeding . . . . .	55	Maintenance chart . . . . .	74
— description . . . . .	67	Maximum output . . . . .	68
Front axle — description . . . . .	67	Maximum speed . . . . .	71
— lubrication . . . . .	38	<b>O</b> il consumption . . . . .	70
— technical data . . . . .	69	Oil level — engine . . . . .	15
Front seats — adjustment . . . . .	5	— dipstick . . . . .	15
Front wheel bearings — adjusting . . . . .	52	— transmission . . . . .	37
— lubrication . . . . .	38	Operating instructions . . . . .	5
Fuel consumption . . . . .	70	<b>P</b> aintwork — preservation . . . . .	31
Fuel delivery . . . . .	68	— polishing . . . . .	31
Fuel filter-cleaning . . . . .	44	Parking your car . . . . .	22
— gauge . . . . .	14	Parking lights . . . . .	8
— capacity . . . . .	14/70	Practical driving . . . . .	18
— reserve . . . . .	14	<b>R</b> atios — rear axle . . . . .	69
Fuse box . . . . .	62	— transmission . . . . .	69
Fuses — replacing . . . . .	62		
<b>G</b> ear lever . . . . .	3		
Gear shifting . . . . .	18		
— on gradients . . . . .	18		



Rear axle — description . . . . .	67	Toe-in . . . . .	70
— technical data . . . . .	69	— adjusting . . . . .	53
Rear view mirror . . . . .	6	Tools . . . . .	75
Reverse gear . . . . .	18	Track . . . . .	70
		Transmission — description . . . . .	67
<b>Safety belts</b> . . . . .	11	— oil change and capacity . 37/70	
Seat adjustment . . . . .	5	— sectional view . . . . .	60
Shifting gear on hills . . . . .	18	— oil change in winter . . . . .	25
Shock absorbers — design . . . . .	69	Turning circle . . . . .	69
Snow chains . . . . .	26	Type of fuel . . . . .	17
Spare wheel . . . . .	27		
Spark plugs — checking and cleaning . . . . .	47	<b>Upholstery</b> — cleaning . . . . .	33
— gap . . . . .	47/68		
— removal . . . . .	47	<b>Valves</b> — adjusting . . . . .	49
Speedometer . . . . .	3	— arrangement . . . . .	68
Speed ranges . . . . .	18	— clearance . . . . .	68
Spots — removal . . . . .	32	V-belt — checking and adjusting . . . . .	42
Starting the engine . . . . .	16	Vent wing . . . . .	9
Starting motor . . . . .	68		
Steering ignition lock . . . . .	9	<b>Warning lights</b> — replacement . . . . .	61
Steering — checking . . . . .	53	— flasher . . . . .	6
— type . . . . .	69	— high beam . . . . .	3
Stop light — bulb replacement . . . . .	60	— generator and cooling . . . . .	17
— checking . . . . .	14	— oil pressure . . . . .	17
Sun vizors . . . . .	6	Washing your car . . . . .	30
Suspension — front . . . . .	69	Weights . . . . .	70
— rear . . . . .	69	Wheel base . . . . .	70
		Wheels — balancing . . . . .	27
<b>Tail light</b> — replacing bulb . . . . .	60	— changing . . . . .	23
Technical data . . . . .	68	— rim size . . . . .	69
Tires — inflation pressure . . . . .	15/69	Windows — cleaning . . . . .	33
— maintenance . . . . .	27	Window regulator handle . . . . .	3
— M+S tires . . . . .	26	Window weather strips — care . . . . .	33
— size . . . . .	69	Windshield wiper . . . . .	3/7
— wear . . . . .	27	Windshield washer . . . . .	7

## Identification plate, Chassis and Engine Number

The model designation and the Chassis and Engine numbers are entered in the vehicle documents. The police or Traffic Department attach much importance to these details.

**The Identification Plate** is found behind the spare wheel underneath the front hood.



**The Chassis Number** is found on the frame tunnel under the rear seat.




**The Engine Number** is on the crankcase flange for the generator support.





© 1964 Volkswagenwerk Aktiengesellschaft  
May not be reproduced or translated in whole or in part without the written  
consent of Volkswagenwerk.  
Specification subject to alteration without notice.

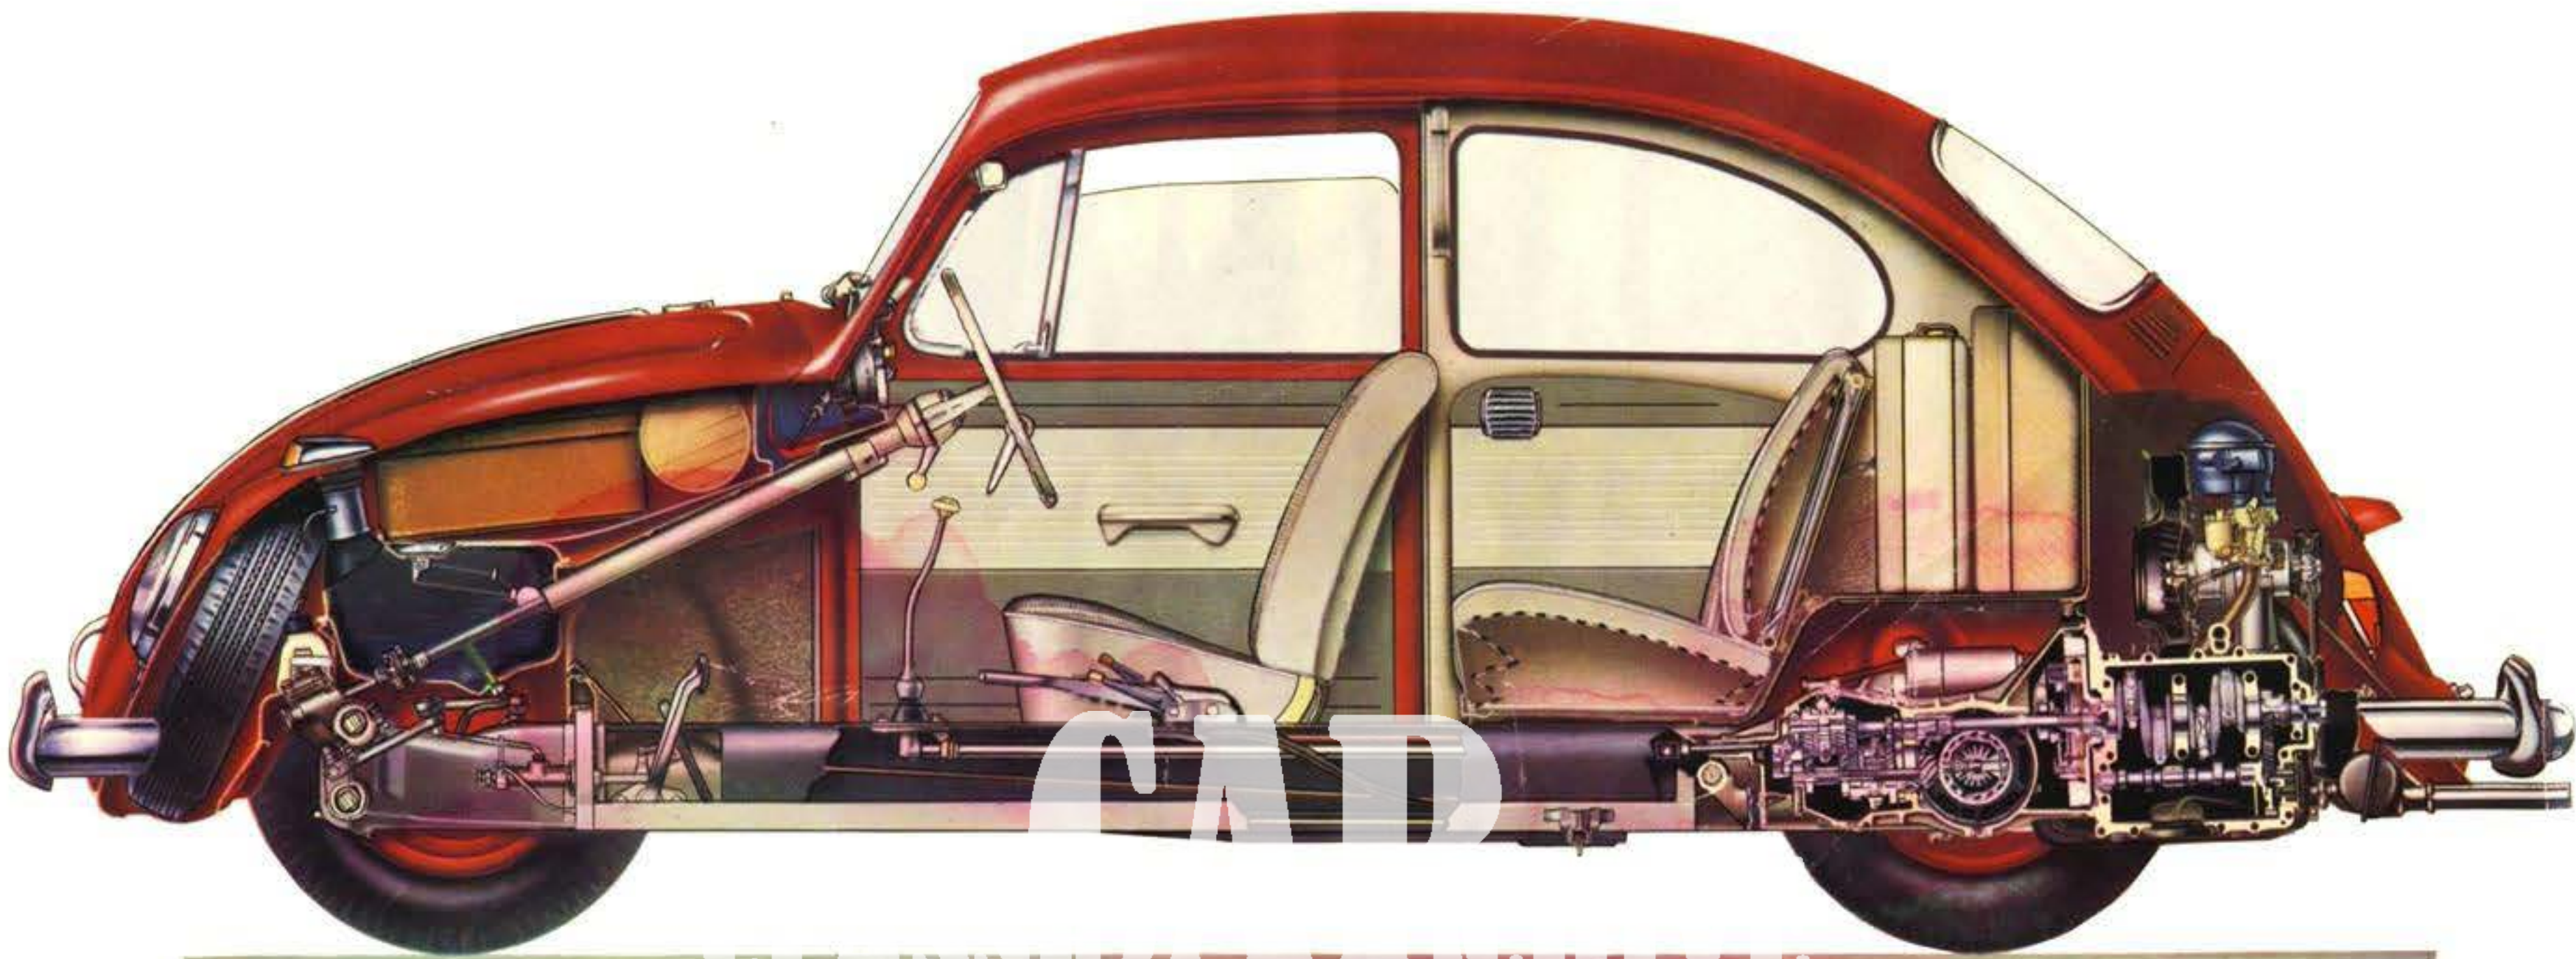





CAV

***Owner's Manuals  
Service Manuals  
Vintage Ads  
and more...***



**CLASSICCAR**CHIVE

***theclassiCARchive.net***